

2011 2012 2013 2014 2015 2016 2017 2018 2019 2020 2021 2022 2023 2024 2025 2026 2027 2028 2029 2030 2031 2032 2033 2034 2035 2036 2037 2038 2039 2040 2041 2042 2043 2044 2045 2046 2047 2048 2049 2050 2051 2052 2053 2054 2055 2056 2057 2058 2059 2060 2061 2062 2063 2064 2065 2066 2067 2068 2069 2070 2071 2072 2073 2074 2075 2076 2077 2078 2079 2080 2081 2082 2083 2084 2085 2086 2087 2088 2089 2090 2091 2092 2093 2094 2095 2096 2097 2098 2099 2100

GoldMaster®



COMET-533 USB

5.1 Ev Sinema Ses Sistemi

ÖNEMLİ GÜVENLİK BİLGİLERİ



ELEKTRİK ŞOKU TEHLİKE UYARISI


- Lütfen talimatları okuyunuz ve saklayınız.
 - Uyarılara dikkat ediniz.
 - Tüm talimatları dikkate alınız.
 - Cihazı çalıştırmadan önce cihaz üzerinde oluşan tozlanmaları siliniz.
 - Üretici firmanın talimatları doğrultusunda bağlantılarını yapınız.
 - Hoparlörleri zarar gelmeyecek ve düşmeyecekleri uygun bir yere koyunuz.
 - Hoparlörleri suya yakın yerlerde kullanmayınız ve nemli ortamlarda bırakmayınız.
 - Hoparlör deliklerine herhangi bir cisim sokmayınız,
 - Elektrik çarpması riski doğabilir,ve uygun havalandırma şartları için hoparlörlerin çevresinde yeterli boş alan sağlayınız.
 - Kaldırıcı soba, gibi cihazların yakınında asla hoparlör sisteminizi kurmayınız.
 - Hoparlörleri sadece bilgisayarın veya ses aygıtının ses hattı çıkışından çalıştırınız.
 - Güç kablosunun ayak altında olmamasına dikkat ediniz
 - Sadece imalatçı tarafından verilen aksesuarları kullanınız.
 - Daha fazla koruma için hoparlörleri elektrik prizinden çıkarmadan önce bilgisayarınızı kapatınız
 - Sistem uzun zaman kullanılmıyacaksa. Lütfen enerji kablosunu prizden çıkartınız.
 - Herhangi bir yolla sistemin zarar görmesi, güç kaynağı kablosu veya fişinin zarar görmesi, sıvı dökülmesi veya cisimlerin içeri düşmesi, nem tutması cihazın normal çalışmasını veya bozulmasına neden olabilir.
 - Tüm bakım onarımının nitelikli personel tarafından yapılması önerilir.
 - Yanan mum gibi yanıcı kaynaları sisteme yaklaştırmayınız.
 - Priz sistemi, ses sisteminin yakınında olmalı ve kolay erişilebilir olmalıdır.
- Ürün tasarımı ve özellikleri bildirimde gerek duymaksızın değiştirilebilir. Bu özelliklere ürün ana özellikleri yazılım, yazılım sürücüler ve kullanım kılavuzu dahildir.

UYARI:


**ELEKTRİK ŞOKU RİSKİNİ AZAL TMAK İÇİN SİSTEMİ,
YAĞMURLU YADA NEMLİ ORTAMLARDA AÇMAYINIZ.**

Goldmaster COMET-533 USB ses sistemini aldığınız için teşekkür ederiz. Tercih ettiğiniz cihazın kullanımı kolay ve ses kalitesi oldukça iyidir. **Goldmaster'**ı daha fazlası ile keşfetmek ya da ürün ile ilgili sorunlarınız için www.goldmaster.com.tr sitemizi ziyaret ediniz.


Subwoofer'ın önden görünümü

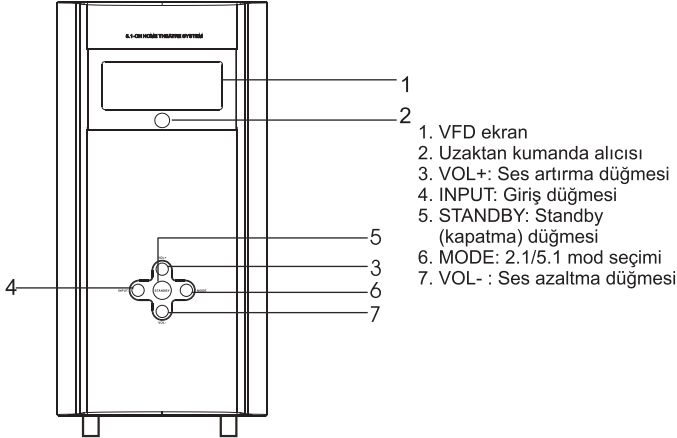

Subwoofer'ın yandan görünümü

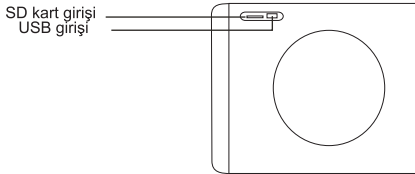


Subwoofer'in arkadan görünümü

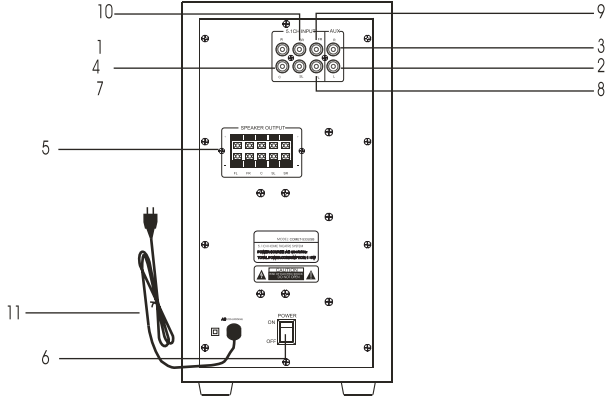


1. 5+1 Subwoofer Ses girişi
2. Stereo sol ses girişi
3. Stereo sağ ses girişi
4. 5+1 Merkez Ses girişi
5. Hoparlör çıkışları
FL:Ön sol hoparlör ses çıkışı
FR:Ön sağ hoparlör ses çıkışı
C:Ön sol hoparlör ses çıkışı
SL:Arka sol hoparlör ses çıkışı
SR:Ön sağ hoparlör ses çıkışı
6. Aç/Kapa anahtarı
7. 5+1 Arka sol ses girişi
8. 5+1 Ön sol ses girişi
9. 5+1 Ön sağ ses girişi
10. Arka sağ ses girişi
11. Elektrik kablosu

Uzaktan Kumanda Fonksiyonları

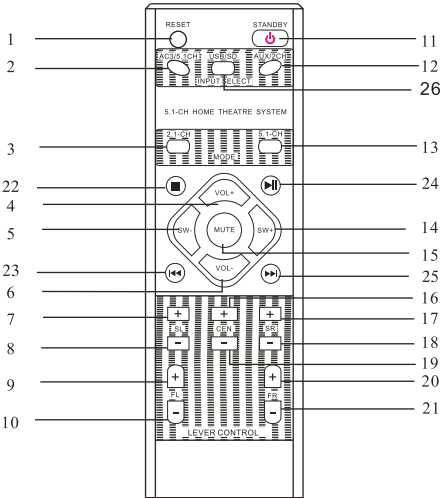

1. RESET tuşu
2. AC3/5.1 CH giriş tuşu
3. 2.1 CH mod tuşu (AUX fonksiyonunu içerir)
4. Genel sesi artırma
5. Subwoofer seviyesini azaltma
6. Genel sesi azaltma
7. Arka sol hoparlör seviyesini artırma
8. Arka sol hoparlör seviyesini azaltma
9. Ön sol hoparlör seviyesini artırma
10. Ön sol hoparlör seviyesini azaltma
11. Standby (kapatma)
12. AUX/2CH giriş tuşu
13. 5.1 CH mod tuşu
14. Subwoofer seviyesini artırma
15. Sessiz tuşu
16. Merkez hoparlör seviyesini artırma
17. Arka sağ hoparlör seviyesini artırma
18. Arka sağ hoparlör seviyesini azaltma
19. Merkez hoparlör seviyesini azaltma
20. Ön sağ hoparlör seviyesini artırma
21. Ön sağ hoparlör seviyesini azaltma
22. Durdur tuşu
23. Bir önceki parçaya gitme tuşu
24. Oynat/Beklet tuşu
25. Bir sonraki parçaya gitme tuşu
26. USB/SD kart giriş tuşu

Ana kutunun arka paneli üzerindeki SPEAKER OUTPUT ses çıkışlarından uydu hopalörlerine bağlantı yapınız.

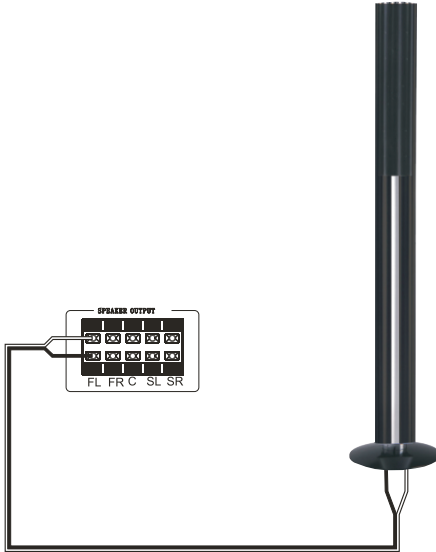

NOT: Kabloları eşleştirenken aynı renklerin denk gelmesine dikkat ediniz. Farklı renktekileri bağlamayınız.

A. Sistemin Açılması ve kapatılması

1. Sistemi açmadan önce sistem bağlantılarını talimata uygun yapıldığından emin olunuz. Kablo renklerine göre doğru bağlantı yapıldığından emin olunuz.
2. Cihazının elektrik kablosunu prize takınız.

3. Cihazının ana parçasının arka panelindeki açma/kapama anahtarından cihazınızı açınız. Cihazın ön panelindeki STANDBY butonu ile cihazı çalışır duruma getiriniz.

B. Ses

1. Ana parça üzerindeki VOL+ tuşu ile ses artırabilirsiniz. Aynı şekilde uzaktan kumanda üzerindeki VOL+ tuşuyuda aynı işlemi gerçekleştirebilirsiniz. Ana parça üzerindeki Led ışıklar yanmaya başlayacaktır.
2. Ana parça üzerindeki VOL- tuşu ile ses azaltabilirsiniz. Aynı şekilde uzaktan kumanda üzerindeki VOL- tuşuyuda aynı işlemi gerçekleştirebilirsiniz. Ana parça üzerindeki Led ışıklar yanmaya başlayacaktır.

C. SUBWOOFER

1. SW+ butonuna basarak Subwoofer sesini artırabilirsiniz ledler yanmaya başlayacaktır.
2. SW- butonuna basarak Subwoofer sesini azaltabilirsiniz ledler yanmaya başlayacaktır.

D. Ön hoparlörler

1. FL + tuşuyla Ön sol hoparlörlerin sesini artırabilirsiniz.
FL - tuşuyla Ön sol hoparlörlerin sesini azaltabilirsiniz.
2. FR + tuşuyla Ön sağ hoparlörlerin sesini artırabilirsiniz.
FR - tuşuyla Ön sağ hoparlörlerin sesini azaltabilirsiniz.

E. Merkez hoparlör

CEN + tuşuyla merkez hoparlörlerin sesini artırabilirsiniz.
CEN - tuşuyla merkez hoparlörlerin sesini azaltabilirsiniz

F. Arka hoparlör

SL + tuşuyla arka hoparlörlerin sesini artırabilirsiniz.
SL - tuşuyla arka hoparlörlerin sesini azaltabilirsiniz.

G. Surround Mod'a geçiş(Ev sinema sistemi)

1. Merkez hoparlörler ve arka hoparlörleri uygun yerlere yerleştirdikten sonra kumandadan Mode tuşuna basarak arka hoparlör Moduna geçebilirsiniz.
NOT: MODE tuşuna basarak istediğiniz modu seçiniz.(2+1 yada 5+1) 2+1 modunda arka hoparlörlerinin çıkışları pasif hale geçer.

H. 5+1 ses girişi

DTS/AC3 çıkışları 5+1 ses sistemini destekler ses kaynağınızın(DVD, vb.) DTS,AC3 çıkışından alınmalıdır.
Uzaktan kumandadan INPUT tuşuna basarak giriş modunu değiştirebilirsiniz.

I.MUTE(SESSİZ)

1. Kumandadan MUTE tuşuna basıldığında sessiz konumuna geçmiş olursunuz. Cihazının sesi çıkmaz.
2. Sessiz konumda VFD yanıyor olacaktır.
3. Tekrar sesli moda geçmek için MUTE tuşuna basmanız yeterli olacaktır.

J. RESET

RESET tuşuna basıldığında tüm hoparlörlerin ses seviyeleri fabrika ayarlarına dönmüş olacaktır.

K.Mp3 oynatma

USB/SD kartınızı ana cihazın yan tarafındaki slotlara takarak parçaların otomatik olarak çalmasını sağlayabilirsiniz.

Uzaktan kumandadaki PLAY/PAUSE/STOP/NEXT/PREVIOUS tuşlarına basarak sırasıyla oynat/duraklat/durdur/sonraki/önceki konumlarını çalıştırmış olursunuz.

Teknik özellikler

Güç : AC 220V/50Hz

Giriş hassasiyeti(Subwoofer):250mV+-50mV

Giriş hassasiyeti(Uydu hoparlör):700mV+-50mV

Hoparlör empedansları(Subwoofer):8ohm

Hoparlör empedansları(Uydu hoparlörler):8ohm

Sinyal/Gürültü:>80 dB

Toplam RMS Gücü: 125W

Subwoofer :50W (RMS)

Ön hoparlör :15Wx2 (RMS)

Merkez hoparlör:15W (RMS)

Arka hoparlör :15Wx2 (RMS)

THD(1kHz,1W):%0.5

Frekans cevabı:30Hz-20kHz+-5dB

L/R dağılım(1kHz):30dB

L/R balans(Stereo):2dB

Not: Tasarımı ve teknik özellikleri haber verilmeksizin değiştirilebilir.

Cihazın kullanım ömrü 10 yıldır.



İthalatçı/İmalatçı Firma

AYYILDIZ ELEKTRİK Lİ EV EŞYALARI İMALAT VE PAZARLAMA A.Ş.

Adres: Halkalı cad. No:228 Sefaköy-İstanbul-Türkiye

Fax: 0212 6930224

Web: www.goldmaster.com.tr

E-mail: info@goldmaster.com.tr



IMPORTANT SAFETY INFORMATION




CAUTION ELECTRIC SHOCK HAZARD

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Unplug the speakers from the computer and from the electrical outlet before cleaning them. With a dry cloth.
- Install in accordance with the manufacturer's instructions.
- Place the speakers in a stable location so they will not fall, causing damage to the speakers or bodily harm.
- Do not use the speakers near water, and do not immerse them in any liquid or pour any liquid on them.
- Do not block the openings in the speaker cabinets, never push objects into speaker vents or slots because of fire or electric shock hazards, and provide sufficient space around the speakers for proper ventilation.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. The wide blade is provided for your safety. If the provide plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Operate the speakers only from the low level audio line out jack of the computer or of an audio device.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- For added protection during lighting storms, unplug the speakers from the electrical outlet and turn off the computer.
- Unplug this apparatus when unused for long periods of time.
- Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug has been damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Refer all servicing to qualified service personnel.
- The speakers should be disconnected from the mains by placing the power/standby switch in the standby position and unplugging the power cord of the speakers from the AC mains receptacle.
- Do not place any form of open flame source, such as lighted candles, on the apparatus.
- The socket-outlet shall be installed near the equipment and shall be readily accessible.


FRONT PANEL - CONTROLS AND FUNCTIONS

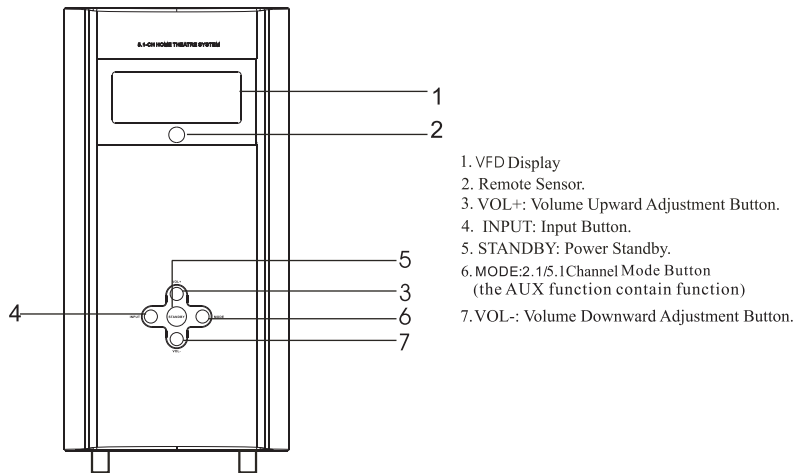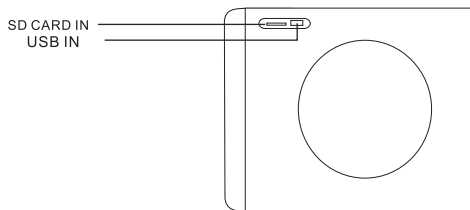

REAR PANEL - CONTROLS AND FUNCTIONS

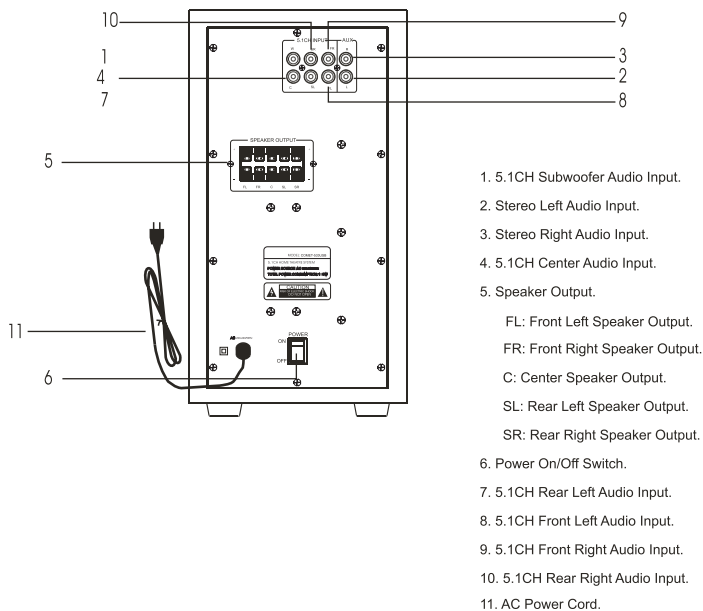


OPERATING INSTRUCTION - CONTROLS AND FUNCTIONS

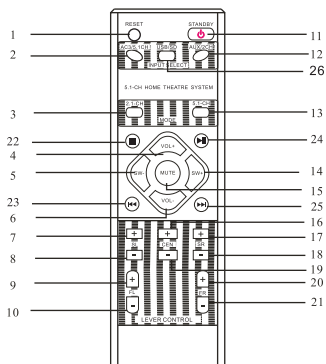


- 1 RESET: VOL RETRIEVAL BUTTON
- 2 AC3/5.1CH:5.1Channel/AC3 Input Button.
- 3 2.1CH:2.1Channel Mode Button (The AUX function contain function)
- 4 VOL+: Volume Upward Adjustment Button.
- 5 SW-: Subwoofer Channel Level Downward Adjustment Button.
- 6 VOL-: Volume Downward Adjustment Button.
- 7 SL+: Rear Left Channel Level Upward Adjustment Button.
- 8 SL-: Rear Left Channel Level Downward Adjustment Button.
- 9 FL+: Front Left Channel Level Upward Adjustment Button.
- 10 FL-: Front Left Channel Level Downward Adjustment Button.
- 11 STANDBY: Power Standby.
- 12 AUX/2CH:Aux/2Channel input Button.
- 13 5.1CH:5.1Channel Mode Button (the AUX function contain function)
- 14 SW+: Subwoofer Channel Level Upward Adjustment Button.
- 15 MUTE: Muting Selection.
- 16 CEN+: Center Channel Level Upward Adjustment Button.
- 17 SR+: Rear Right Channel Level Upward Adjustment Button.
- 18 SR-: Rear Right Channel Level Downward Adjustment Button.
- 19 CEN-: Center Channel Level Downward Adjustment Button.
- 20 FR+: Front Right Channel Level Upward Adjustment Button.
- 21 FR-: Front Right Channel Level Downward Adjustment Button.
- 22 Mp3 STOP CONTROL BUTTON
- 23 Mp3 PREVIOUS CONTROL BUTTON
- 24 Mp3 PLAY CONTROL BUTTON
- 25 Mp3 NEXT CONTROL BUTTON
- 26 USB/SD CARD INPUT BUTTON

SYSTEM CONNECTION INSTRUCTIONS

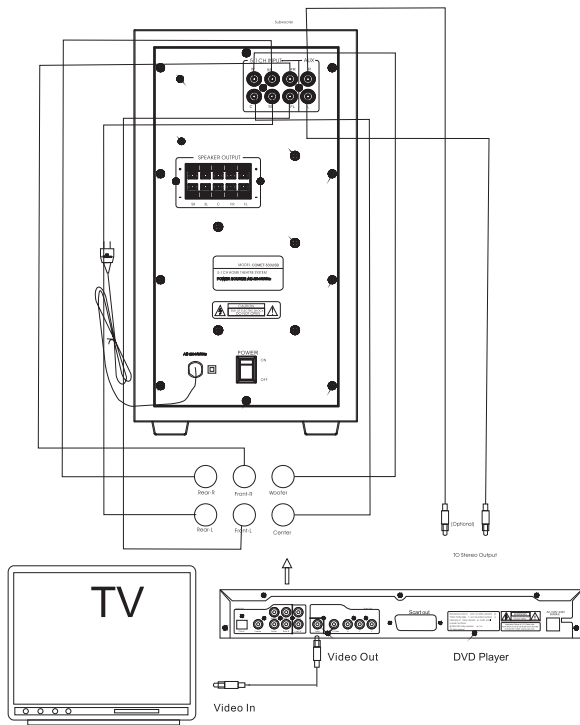

SYSTEM CONNECTION INSTRUCTIONS

Use the SPEAKER OUTPUT jacks on the rear panel of main unit to connect the satellite speakers.

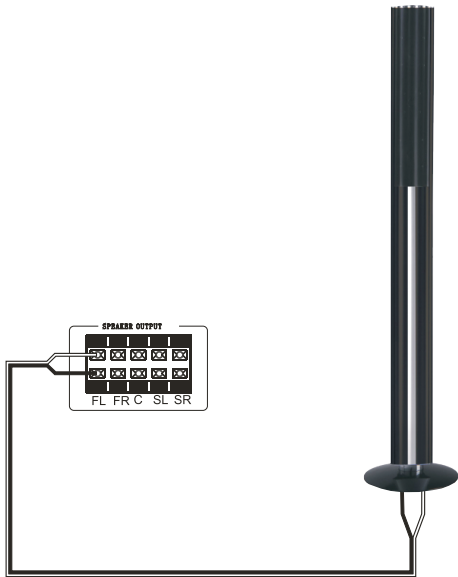

Note: Be sure to match the speaker cord to the appropriate jacks on components: to "White" "Red" , and "Black" to "Black" .

OPERATING INSTRUCTION

A. Switch On/Off the Product

1. Before turning on the system, please connect it according to the System Connection Instruction.
2. Connect AC power supply with this product.
(Caution: Power source must be consistent with this product.)
3. Press on the power switch button on the Rear Panel of the main unit to switch on the system, the standby indicator will light up. Press it once again to switch off the unit. Then Press the standby button on the main unit to enter the normal status. Press the button once again to keep power in standby status.

B. VOLUME

1. Press the Volume + button on the front panel of the main unit or VOL + button on the remote controller to maximize the sound output. Standby Indicator on the front panel will light up and flash when the Volume is increased to maximum accordingly.
2. Press the Volume - button on the front panel of the main unit or VOL - button on the remote controller to minimize the sound output. Standby Indicator on the front panel will light up and flash when the Volume is decreased to minimum accordingly.

C. SUB WOOFER SPEAKER

1. Press SW + button on the remote controller to maximize the Sub woofer Speaker output and Standby Indicator on the front panel will light up.
2. Press SW - button on the remote controller to minimize the Sub woofer Speaker output and Standby Indicator on the front panel will light up.

D. FRONT SPEAKER

1. Press FL + button on the remote controller to maximize the Front Left Speaker output .
Press FR + button on the remote controller to minimize the Front Right Speaker output .

2. Press FL - button on the remote controller to minimize the Front Left Speaker output .
Press FR - button on the remote controller to minimize the Front Right Speaker output .

E. CENTER SPEAKER

1. Press CEN+ button on the remote controller to maximize the Center Speaker output and Standby Indicator on the front panel will light up.
2. Press CEN - button on the remote controller to minimize the Center Speaker output and Standby Indicator on the front panel will light up.

F. SURROUND SPEAKER

1. Press SL+ button on the remote controller to maximize the Surround Speaker output.
Press SR + button on the remote controller to maximize the Surround Speaker output.
2. Press SL - button on the remote controller to minimize the Surround Speaker output.
Press SR - button on the remote controller to minimize the Surround Speaker output.

G. SURROUND(MODE) DECODER

1. Connect and place Center and Rear speakers properly.
2. Press the MODE button on the remote controller to select Surround Decoder for Home Theater system effects.

Note: (1) CENSPEAKER Rear speakers output are off when 2.1CH Stereo mode is selected.

- (2) The system is based on 2.1 channel output. MODE will not function under 5.1 channel status.

H. 5.1 CHANNELS INPUT

1. Connect the system properly. 5.1 Channels audio output must comply with 5.1 channels audio input. (NOTE: AC-3/dts will decode 5.1 Channels output.)
2. Press INPUT button on the remote controller to shift the status from audio input to 5.1CH channels input.
3. Adjust all output settings including VOLUME, SW , FRONT,CEN,SURR (if necessary) now to enjoy the wonderful and tremendous Home Theater effects.

I. MUTE

1. Press the MUTE button on the remote controller once to keep the performance silent.
2. MUTE Indicator on the VFD will then light up.
3. Press it again to resume the performance.

J. RESET

Press the RESET button on the remote controller and it will reset all settings including SW Speaker output, Front Speaker output ,CENTER Speaker output, Surround Speaker output to Factory Default settings.

K. Mp3 PLAY

1. Insert USB disk & SD card, the unit will play the song automatically (there stored the songs in mp3 format for USB/SD card).
2. Adjust the button PLAY/PAUSE/STOP/NEXT/PREVIOUS on the remote control, will play relative playing mode.

SPECIFICATIONS

Power Supply: AC 220V/50Hz

Input Sensitivity (Subwoofer): $250\text{mV} \pm 50\text{mV}$

Input Sensitivity (Satellite): $700\text{mV} \pm 50\text{mV}$

Speaker Impedance (Subwoofer): 8 Ohm

Speaker Impedance (Satellite): 8 Ohm

S/N (A Weight): 80dB

Total RMS Power : 125W

Subwoofer : 50W (RMS)

Front Speaker : 15Wx2 (RMS)

Center Speaker : 15W(RMS)

Rear Speaker : 15Wx2 (RMS)

THD (1kHz, 1W) : 0.5%

Frequency Response : 30Hz~20kHz $\pm 5\text{dB}$

L/R Separation (1kHz): 30dB

L/R Balance (Stereo) : $\pm 2\text{dB}$



GoldMaster®

www.goldmaster.com.tr
info@goldmaster.com.tr