

GoldMaster®



GoldMaster®

www.goldmaster.com.tr

PD-700



Tařınabilir DVD Oynatıcı

KULLANMA KILAVUZU

GÜVENLİK UYARILARI



Uyarı: Lütfen cihazın üst kapağını kendiniz açmayınız. Elektrik çarpmasına neden olabilir. Yetkili bir servis personeline başvurunuz.



Üçgen içerisinde gösterilen yıldırım işareti "Tehlikeli voltaj"ı sembol eder. Kullanıcılar için elektrik çarpmasına neden olabilecek tehlikeyi ifade eder.



Üçgen içerisindeki ünlem, kullanıcılar için uyarının önemli olduğunu ve kılavuzdaki bilgilere dikkat edilmesi gerektiğini ifade eder.

UYARI: Elektrik çarpmasını önlemek için cihazı nemli ve ıslak ortamlardan uzak tutunuz.



UYARI: Lazer ışığı açıldığında ışıklardan gözlerinizi koruyunuz.

UYARI: Bu belirlemeler dışında telikli radyasyon cihazları radyasyon ışığı açığı sonucu hiçbir kontrol, ayarlama ya da işlem yapmayınız.

LAZER İLE İLGİLİ ÖNEMLİ BİLGİLER

1. Birinci sınıf lazer cihazı kullanılmıştır.
2. Tehlike

Arızalarda veya bağlantı sırasında lazer ışığı direkt yayılabilir. Bu durumda panel kapağını kapalı tutunuz.

3. Uyarı

Asla üst kapağı açmayınız. Kullanıcıların tamir edebileceği hiçbir parça yoktur. Cihaz her zaman yetkili servis tarafından açılmalıdır. Aksi durumda cihazı garanti dışında bırakacaktır.

GÜVENLİK UYARILARI

Tedbir Notları

- ◆ Kılavuzu dikkatlice okuyup, saklayınız.
- ◆ Tüm güvenlik uyarılarına uyunuz.
- ◆ Cihazı suya yakın ortamlardan uzak tutunuz.
- ◆ Cihazın havalandırma deliklerini kapatmayınız. Fabrika talimatlarına göre kullanınız.
- ◆ Cihazı asla radyatör, ısı regülâtörü, fırın veya aşırı ısı veren cihazların yakınında tutmayınız.

- ◆ Cihazın kendi kablosu ve fişi dışında herhangi bir kabloyu cihaza monte etmeyiniz.
- ◆ Güç kablosu üzerine özellikle bağlantı kısımlarına uzun süreli olarak basınç uygulamayınız.
- ◆ Sadece fabrikanın kılavuzda belirttiği aksesuarları kullanınız.
- ◆ Sadece fabrikanın belirttiği ve beraberinde satıldığı aparatlar olan kart, ayak, tripod, raf veya masayı kullanınız.



- ◆ Tüm bakım ve onarımlar yetkili personellerce yapılması gerekmektedir. Cihazda herhangi bir arıza olduğunda güç kablosundan kaynaklanan bir arıza olduğunda, ekran zarar gördüğünde, tuş takımları zarar gördüğünde, en yakın servis ile bağlantıya geçiniz.

- ◆ Cihazın neme maruz bırakılmaması gerekir. Sadece temiz ve kuru bir bezle temizleyiniz.

- ◆ Yıldırım düşme tehlikesi olan günlerde ya da cihazı uzun süre kullanmadığınız durumlarda fişini prizden çıkarınız.

Bölge Kodu


Hem cihaz hem de diskler bölgelerce kodlanmışlardır. Bölgesel numaralar disk oynatımına uygun eşleştirilmelidir. Eğer numaralar uygun değilse, disk çalmayabilir.



Dolby Laboratuvarlarında alınmış lisanslar geçerlidir. "Dolby" ve double-D sembolleri Dolby Laboratuvarlarının markasıdır. Yayımcının hakları gizlidir. © 1992-1997 Dolby Laboratuvarları. Tüm haklar saklıtutulmaktadır.

İçindekiler


Güvenlik Uyarıları	1
Özellikler	4
Ön panel tanıtımı	5
Sağ-Sol panel tanıtımı	6
Uzaktan Kumanda	7
Şarj edilebilir bataryalar	8
Sistem Ayarları	9
Pratik Çözümler	12
Teknik Özellikler	13

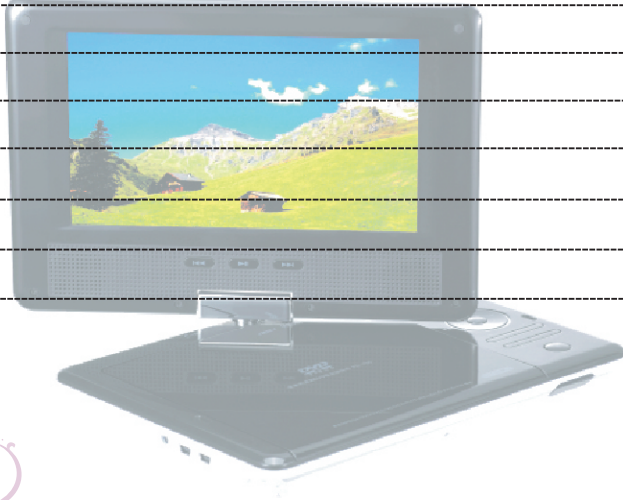

ÖZELLİKLER


Cihazın ana özellikleri

- ◆ 7" Döner TFT LCD ekran
- ◆ CD,DVD,SVCD,HDCD, VCD, CD-R, CD-RW,DVD+R, DVD-R, DVD+RW, DVD-RW, JPEG, WMA, Mp3, MPEG4, Kodak Rwsim diskleriyle uyumludur.
- ◆ Araç kullanımında ESP fonksiyonu
- ◆ Zaman arama fonksiyonu
Zaman kodu ile disk içeriği arama özelliği
- ◆ Dahili USB girişi
JPEG formatı resimleri ve Mp3 formatındaki müzikleri oynatmak için bir USB cihazına bağlanınız.
- ◆ Dahili SD/MMC/MS Kart girişi
- ◆ Ses/Video girişi/Çıkışı
Diğer AV cihazlarına bağlanmak için AV soketini kullanınız
- ◆ İç mekan, araçlar için çakmak girişi ve dış mekan batarya için Otomatik Volt AC/DC adaptör
- ◆ DVD için çok fonksiyonlu uzaktan kumanda
- ◆ Dahili kulaklık çıkışı ve stereo hoparlör
- ◆ Oyun fonksiyonu

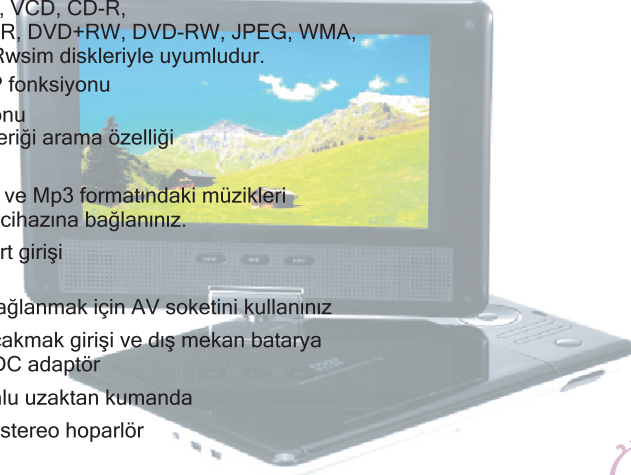

ÖN PANEL TANITIMI

Ön Görünüm

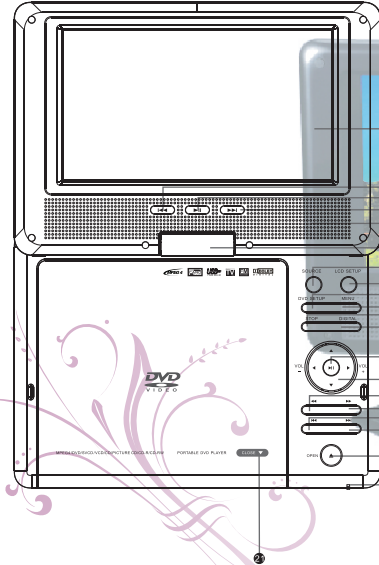


1. 7" LCD ekran
2. ◀◀ PREV tuşu
3. ▶/II Oynat/Beklet tuşu
4. ▶▶ NEXT tuşu
5. Hoparlör
6. Dönebilen kapak yuvası
90°/180° dönebilen ekran
7. SOURCE tuşu
DVD/AV Media arasında geçiş
8. LCD SETUP tuşu
LCD ayarı için tuşa basınız,
tuşa uzun basarsanız LCD ekranı açar
ya da kapatırsınız.
9. DVD SETUP tuşu
10. Menü tuşu
11. STOP tuşu
12. DVD/USBKart geçiş tuşu
13. ▶/II Oynat/Beklet tuşu
14. Yön tuşları
◀ ya da ▶ tuşlarına uzun
basarsanız ses seviyesini
azaltır ya da artırırsınız.
15. ◀◀ REV tuşu
16. ▶▶ FWD tuşu
17. ◀◀ PREV tuşu
18. ▶▶ NEXT tuşu
19. Disk kapağı açma
20. Batarya/Çalışma Göstergesi
21. Disk kapağı kapatma

Not:

- ▶ TFT LCD ekranına dokunmaktan kaçınınız.
- ▶ Bu LCD panel en son teknolojiye kullanıma uygun olarak dizayn edilmiştir.
- ▶ LCD ekran üzerinde bir kaç beyaz ya da gölge spotları olabilir. Display teknolojisi bu normal bir durumdur, arıza değildir.
- ▶ Ekranda uzun süre çok açık görünüm ya da oynatma ayarlaması yapmayınız.


SAĞ-SOL PANEL TANITIMI

Sol panel görünümü

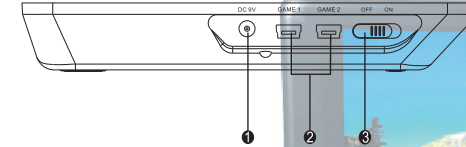

1. DC 9V adaptör ile bağlanmak için
2. Paket içeriğinde bulunan ve oyun Cdsindeki oyunlar ile kullanılacak joysticklerin girişleri
3. Cihaz açma/kapatma


Sağ Panel Görünümü

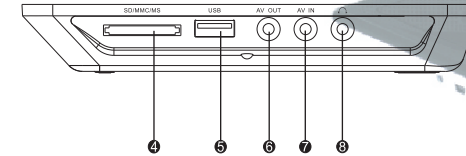

3. SD/MMC/MS kart girişi
4. USB girişi
5. Ses/Video çıkış soketi
6. Ses/Video giriş soketi
7. Kulaklık giriş soketi
8. Kulaklık bağlandığında, dahili hoparlör otomatik olarak kapanır.

UZAKTAN KUMANDA

Uzaktan Kumanda

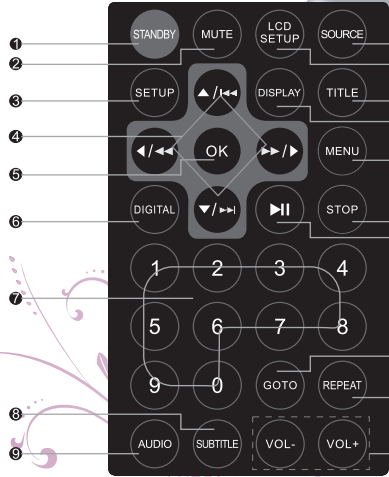

1. STANDBY tuşu - Cihazı oynatma moduna ya da Standby moduna getirmek için kullanılır.
2. MUTE tuşu - Hoparlör çıkışını kapatmak ya da açmak için kullanılır.
3. SETUP tuşu - Ayarlama menüsüne girmek için kullanılır.
4. ▲/◀▶/▼ tuşları - Seçim yapmak için yön tuşları kullanılır.
5. OK tuşu - Seçenekleri onaylamak için kullanılır.
6. DIGITAL tuşu - DVD/USB/kart arasında geçiş için kullanılır.
7. 0-9 Numara tuşları - Oynatma sırasında müzik başlık ve bölüm seçimi için kullanılır.
8. SUBTITLE tuşu - 1) Eğer disk destekliyse oynatma esnasında farklı bir alt yazı dili seçeneği için kullanılır.
2) Kopyalama fonksiyonunu aktif etme, yalnızca diskteki içerikleri USB belleğe kopyalama özelliği
3) CD disk oynatılırken CD menüsüne ulaşma ve menüden çıkış
9. AUDIO tuşu - Eğer CD destekliyse farklı diller/kanallar seçmek için kullanılır.
10. SOURCE tuşu - Kaynaklar arasında geçiş için kullanılır. Eğer AV kablosu takılı ise otomatik olarak Av'ye geçer.
11. LCD SETUP tuşu - LCD ayar menüsüne girmek için kullanılır. Tuşa uzun basılırsa LCD açılır ya da kapanır.
12. TITLE tuşu - Eğer DVD disk destekliyse disk başlığını göstermek için kullanılır.
13. DISPLAY tuşu - Disk bilgilendirmesini görüntülemek ya da kapatmak için kullanılır.
14. MENU tuşu - Oynatma sırasında menüye erişmek için kullanılır.
15. STOP tuşu - Oynatmayı durdurmak için butona bir kere basınız.
16. ▶/II tuşu - Oynatmayı başlatmak ve durdurmak için kullanılır.
17. GO TO tuşu - Diskin istediğiniz parçasına, başlığına ya da zamanına gitmek için kullanılır.
18. REPEAT tuşu - Parçayı, bölümü, başlığı ya da tüm içeriği tekrarlamak için kullanılır.
19. VOL +/- tuşları - Ses seviyesini ayarlamak için kullanılır.

Şarj edilebilir batarya

Bataryaların Şarjı

1. Güç adaptörünü prize takınız.
2. Adaptörün diğer ucunu cihazın güç kaynağı giriş soketine takınız.



Not:

- Adaptöre bağlıken, kırmızı ışık bataryanın şarj olduğunu, yeşil ışık, bataryanın şarjının tam olduğunu ifade eder.
- Cihaz kapalıyken tüm dolum işlemi 2-3 saat sürmektedir. Eğer cihaz açıksa cihaz şarj olmayabilir.
- CD oynatılırken, LCD ekranı kapatmanız, bataryaların ömrünü uzatabilir.
- Cihaz dahili koruma çemberine sahiptir. Şarj etme esnasında oluşabilecek arızaları önler.
- Şarj edilebilir batarya uzun süre kullanılmadığı zaman bitebilir. 30 gün kullanılmadığında tamamen bitebilir.

- Eğer cihaz uzun süre kullanılmıyacaksa, bataryaları şarj edip cihazdan çıkarınız.
- Bataryaları asla neme ya da yüksek ısıya maruz bırakmayınız.
- Adaptörün üzerine herhangi bir metal obje yerleştirmeyiniz. Bu yangına ya da elektrik çarpmasına neden olabilir.
- Bataryanın yanlış şekilde şarj olması patlama tehlikesi yaratabilir.


Sistem Ayarları

1. Sistem kurulum menüsüne girmek için kumanda üzerindeki SETUP tuşuna basınız.
2. Farklı sistem kurulum menüsüne girmek için: Genel kurulum, ses kurulumu, video kurulumu ve tercih kurulumu uygulamalarına ◀ ▶ tuşlarıyla giriniz.
3. Herhangi bir kurulum menüsü seçilmediğinde, ▲ ▼ tuşlarıyla bu kurulum menüsü altında farklı bir seçim yapabilirsiniz.
4. ▶ ya da OK tuşu ile seçili uygulamanın ayarlarına girebilirsiniz.
5. ▲ ▼ tuşlarıyla ayarlama değiştirebilir ve OK tuşu ile onaylayabilirsiniz.
6. Diğer seçenekler için yukarıdaki adımları tekrarlayabilirsiniz.
7. ◀ tuşuyla bir önceki menüye dönebilirsiniz.
8. Kurulum tuşuna basarak kurulum menüsünden çıkabilirsiniz.

Ayarlama Detayları

◆ Genel Kurulum

Ekran, OSD Dili, Başlık, Ekran Koruyucusu, Son Hafıza, Logo Tipi, Divx Altyazı ve FM seçimi seçenekleri vardır.

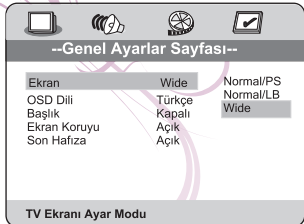

◆ Ekran

Ekranı: Normal/PS, Normal/LB, Wide
Normal/PS(4:3 Pan Scan): Cihaz Normal ekrana ile bağliken bu seçenek seçilidir. Geniş ekran görüntü cihazına bağlandığında görüntünün bir kısmı kesilecektir.
Normal/LB(4:3 Letter Box): Normal ekrana bağliken bu seçenek seçilidir. Geniş ekran görüntü gösterilir ve ekranın alt ve üst kısmında siyah kısımlar olacaktır.
Wide(16:9 Wide Screen): Geniş ekran cihaz bağliken bu seçenek seçilidir.

◆ Ses Kurulum Sayfası

Bu menüde Dolby Dijital Kurulumu, Ekolayzer, 3D İşlem, HDCD olmak üzere dört seçenek bulunmaktadır.



Sistem Ayarları

- * Etkili ve düzgün ses elde etmek için FM alıcı cihazı 5metrelik mesafe içerisinde bulundurunuz.
- * Seçilen frekansın taşınabilir DVDnizde ve diğer FM cihazında aynı olmasına dikkat ediniz.

Dolby Dijital Kurulumu

ÇİFT MONO

Stereo: stereo çıkış sinyali

R-Mono: sağ çıkış sinyali

L-Mono: sol çıkış sinyali

Mix-Mono: sağ&sol çıkış ortalama sinyali

Dinamik Basing

Dinamik değerin kontrolünü uygun bir ses olarak yapabilirsiniz. Bu fonksiyon sadece Dolby ses kaynağı ile çalışır.

HDCD Kurulumu

Farklı bir örneklemeye frekansı seçebilirsiniz.


KAPALI CD örneklemeye modunun seçili olduğunu ifade eder.

◆ Video Kurulum Sayfası

Seçebileceğiniz beş seçim vardır: Parlaklık, Kontrast, Renk, Koyuluk, Kontrast Derecesi.




◆ Tercihler Sayfası (Cihaz tamamen durdurulduğunda çalışır)

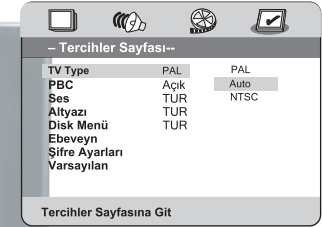

◆ Şifre ayarı

▲ ▼ tuşlarıyla şifre tercihinizi seçiniz, sonra ▶ tuşu ya da OK tuşu ile onaylayınız. ▲ ▼ tuşlarıyla şifreyi seçip değiştirebilirsiniz.



Baştaki fabrika şifresi 136900'dır. Şifreyi aşağıdaki adımlarda değiştirebilirsiniz.

Sistem Ayarları

LCD Ayarları

1. LCD SETUP tuşuna basarsanız ayar menüsünü görürsünüz, tuşa tekrar basarsanız farklı seçenek sayfasını seçebilirsiniz.
3. ▲ ▼ tuşları ile ayar maddelerini seçebilirsiniz.
4. ► ◀ tuşları ile seçilen maddenin seçeneklerini değiştirebilirsiniz.

Resim

RESİM



PARLAKLIK 10
KONTRAST 10
RENK 10

Seçenek

SEÇENEK



HORIZONTAL
VERTICAL
ZOOM 16:9

Sistem

SİSTEM



TÜRKÇE
S-COLOR
SECAM



PRATİK ÇÖZÜMLER

SORUN	ÇÖZÜM
Cihaz açılmıyor ya da aniden kapanıyor	<ul style="list-style-type: none">◆ Cihazın güç kablosunun doğru bir şekilde bağlandığından emin olunuz.◆ Cihazı kapatıp, tekrar açınız.
Ekran çok parlak ya da çok kapalı	<ul style="list-style-type: none">◆ Kurulum menüsünün parlaklık ayarlamasını yapınız.
Cihaz oynatmıyor	<ul style="list-style-type: none">◆ Diskin doğru bir şekilde yerleştirildiğinden emin olunuz.◆ Diskin kirliliği ya da hasarlı olup olmadığını kontrol ediniz.◆ Cihazın bölge kodunun, DVD diskinin kodu ile aynı olup olmadığını kontrol ediniz.◆ Sıvı yoğunlaşması olup olmadığını kontrol ediniz.
Ses yok	<ul style="list-style-type: none">◆ Diski çıkarınız ve cihazı bir süre kapatınız.◆ Ses seviyesini kontrol ediniz.◆ Sessiz modunda olup olmadığını kontrol ediniz.◆ Kulaklıkların cihaza bağlı olup olmadığını kontrol ediniz. Hoparlörler kulaklıklarla birlikte çalışmaz.
Uzaktan kumanda çalışmıyor.	<ul style="list-style-type: none">◆ Bataryaların doğru yerleştirildiğinden emin olunuz.◆ Cihaz ile uzaktan kumanda arasında bir nesne olup olmadığını kontrol ediniz.◆ Bataryaların gücünü kontrol ediniz.◆ Bataryaları yenileriyle değiştiriniz.◆ Uzaktan kumandanın cihaza odaklandığına emin olunuz.

Uyarı: Bu belirtilen arızaların çözüme kavuşmaması ve bu arızaların dışında farklı arızaların görülmesi durumunda, lütfen cihazı en yakın servis kontrol noktasına götürünüz. Tüm ciddi sorunlar teknik servisler tarafından kontrol edilmeli ve giderilmelidir. Aksi durumda cihazınız garanti durumu kapsamı dışında kalabilir. Lütfen kullanma kılavuzunda belirtilen tüm uyarılara dikkat ediniz.


TEKNİK ÖZELLİKLER

LCD Ekran	7" (16:9) Dönebilir ekran
Lazer Dalga Boyu	Dalga Boyu: 780/650nm
Frekans cevabı	20Hz~20kHz $\pm$ 2.5 dB
Ses S/N değeri	≥ 85 dB
Ses bozukluğu+gürültü	≤ -70 dB (1kHz)
Kanal bölünmesi	≥ 70 dB (1kHz)
Dinamik Oran	≥ 80 dB (1kHz)
Ses çıkışı	Çıkış seviyesi: 2V $\pm_{1.0}^{0.0}$ Miktar: 10 K Ω
Güç gereksinimleri	Çıkış: AC 110-240V, 50/60 Hz Çıkış: DC 9V
Güç tüketimi	< 18W
Ağırlık	0.73Kg
Boyutlar	215 X 145 X 39mm.
Çalışma sıcaklığı	Sıcaklık: 5°C-35°C Nem: 45%- 75%

TASARIM VE TEKNİK ÖZELLİKLER HABER VERİLMEKSİZİN DEĞİŞTİRİLEBİLİR.

Cihazın kullanım ömrü 10 yıldır.

EEE Yönetmeliğine uygundur.
PCB (Poliklorlu bifenil) madde içermez.



Merkez Teknik Servis İletişim Bilgileri

Halkalı Cad. No:228 Sefaköy/İstanbul
Fax: 0212 693 0224
Web: www.goldmaster.com.tr Email: info@goldmaster.com.tr

LÜTFEN GARANTİ BELGESİ ÜZERİNDE BULUNAN EKİ ON (10) GÜN
İÇERSİNDE ÜZERİNDEKİ ADRESE POSTALAYIN, FAX VEYA E-MAIL
YOLUYLA BİZE ULAŞTIRIN.0212 693 02 24- info@goldmaster.com.tr

GoldMaster®

PD-795 TV

Tařınabilir DVD Oynatıcı



CE RoHS
2002/95/EC

Üretici Firma

Shenzhen Skyworth Electronic Appliance TECH Co.,Ltd.

Add: 6F GuoRen Building, 3rd kejizhong Road Central District High-Tech, NanShan SZ
TEL: 86-755-86313111 FAX:86-755-86313188

İthalatçı Firma

Koza Elektronik Dış Ticaret

E-5 Karayolu Caddesi Beşyol mah.

No:27/A 34295 Küçükçekmece/İstanbul

Fax:(212) 426 98 99



SAFETY INFORMATION



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.




The lightning flash with an arrowhead, enclosed in a triangle, alerts the user to the presence of dangerous voltage inside the product which could cause electric shock.



An exclamation mark enclosed in a triangle alerts the user to read important operating and maintenance instructions in the manual.

WARNING: To reduce the risk of fire or electric shock, DO NOT expose this product to water or moisture.



CAUTION: Laser radiation present when disc chamber is open. Do not stare into the beam.

CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN THOSE SPECIFIED IN THIS MANUAL OR ON THE PRODUCT MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

IMPORTANT FOR LASER PRODUCTS 1. CLASS 1 LASER PRODUCT

2. DANGER

Visible laser radiation may occur when the disc chamber is open or if the chamber locking mechanism has failed. In a situation like this avoid direct exposure to the beam.

3. CAUTION

Do not open the top cover. There are no user serviceable parts inside the unit, leave all servicing to qualified service personnel.

Copy Protection

This product incorporates copyright protection technology that is protected by methods claims of certain U. S. patents and other intellectual property rights owned by Macrovision Corporation and other right owners. Use of this copyright protection technology must be authorized by Macrovision Corporation and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

SAFETY INFORMATION

Precaution Notes:

- ◆ Read and Keep these instructions;
- ◆ Heed all warnings and follow all instructions.
- ◆ Do not place this apparatus near water.
- ◆ Do not block any ventilation openings. Install it in accordance with the manufacturer instructions.
- ◆ Do not install this product near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- ◆ Only use the electrical plug that is provided with the unit, replacing or altering of the plug may result in damage to the unit and/or serious bodily harm.
- ◆ Avoid putting extensive stress on the power cord, especially at the connection points.
- ◆ Only use accessories specified by the manufacturer.
- ◆ Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination injury from tip-over.



- ◆ Refer all servicing to qualified service personnel. Servicing is required if any of the following have occurred: The power cord or plug has been damaged, the unit has been exposed to rain or moisture, objects have fallen into the unit, the unit has been dropped or is not working correctly.

- ◆ The unit should not be exposed to any kind of moisture. Objects containing liquid such as vases, should not be placed on top of the unit.
- ◆ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ◆ AC Adaptor as break device should be convenient operate.

Region Code

Both the player and the discs are coded by region. These regional numbers must match in order for the disc to play. If the numbers do not match, the disc cannot be played.


The region code of this player is described on the housing bottom of the player.



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992-1997 Dolby Laboratories. All rights reserved.

Table Of Contents


Safety Information-----	1
Features-----	4
Introduction-Front Panel-----	5
Introduction-Right/Left Panel-----	6
Remote Control-----	7
About the Rechargeable Battery-----	8
System Setup-----	9
Troubleshooting-----	12
Specifications-----	13

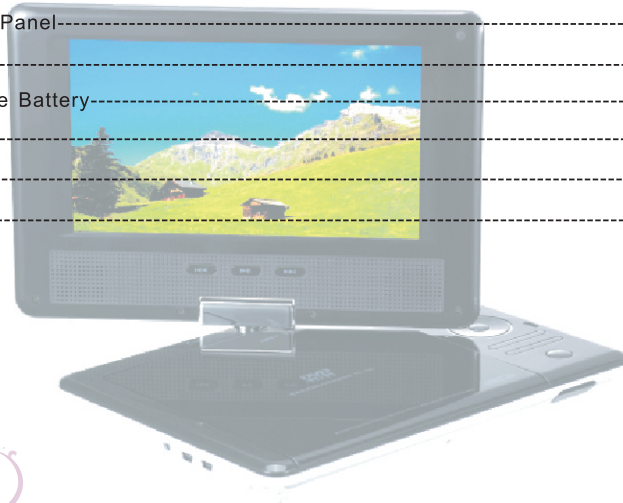

FEATURES


Main features of this product

- ◆ 7 Inch TFT LCD screen
- ◆ Full function remote control for DVD operation
- ◆ Compatible for CD, DVD, SVCD, HDCD, VCD, CD-R, CD-RW, DVD+R, DVD-R, DVD+RW, DVD-RW, JPEG, WMA, MP3, MPEG4, DIVX, Kodak Picture
- ◆ Built-in earphone jack and stereo speakers for private listening.
- ◆ ESP function for in car use
- ◆ Support Game function.
- ◆ Time search function
Ability to search disc contents via time code.
- ◆ Built-in USB Slot
Connect with a USB device to view JPEG format pictures and enjoy MP3 or other music formats.
- ◆ Built-in SD/MMC/MS Card Slot
- ◆ Composite Audio/Video Input/Output
Use AV jack to connect to other AV appliances
- ◆ With Auto Volt AC/DC adaptor for Indoor, Lighter Plug for Car and Battery Pack for Outdoor use.

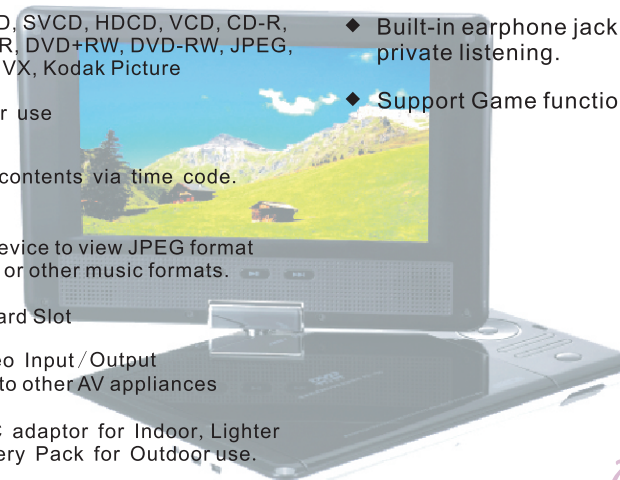

INTRODUCTION-Front Panel

Front View

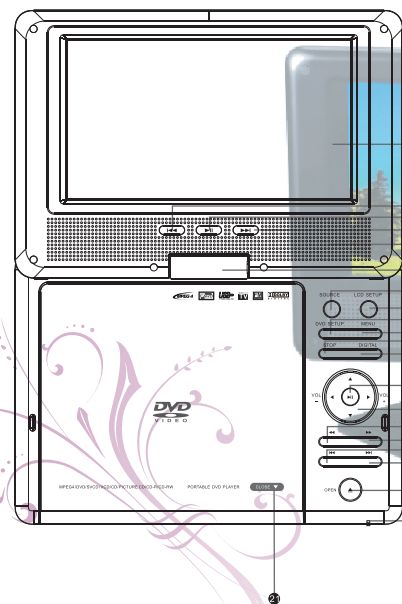

1. 7-inch LCD screen
2. ◀◀ PREV Button
3. ▶▶ PLAY/PAUSE Button
4. ▶▶ NEXT Button
5. Speaker
6. Rotating Shaft
180°/90° swivel available too.
7. Source Button
To switch among DVD/AV Media for playback.
8. LCD SETUP Button
To enter LCD setting setup, long time to press this button to LCD ON/OFF.
9. DVD SETUP Button


10. Menu Button
11. Stop Button
12. DVD/USB/Card Switching
13. ▶▶ PLAY/PAUSE Button
14. Navigation Button
Long time to press ▶, ◀ button to adjust the volume.
15. ◀◀ REV Button
16. ▶▶ FWD Button
17. ◀◀ PREV Button
18. ▶▶ NEXT Button
19. Open Button
20. RECHARGE/WORKING
21. Close Button

Note:

- ▶ Avoid touching the TFT LCD screen.
- ▶ This LCD panel is designed using the latest technology which ensures 99.99% of active pixels. Which means that less than 0.01% of total pixels will have any defect (e.g., Always off or always on).
- ▶ There might be a few white or shady spots on the LCD screen. This is normal on display technologies and does not constitutes defect.
- ▶ Do not set the screen display too light or play too light images for a long time.


INTRODUCTION-Right/Left Panel

Left panel view

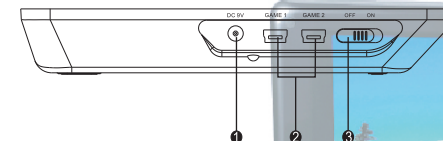

1. DC 9V
2. Game Handle Port
3. ON/OFF


Right panel view

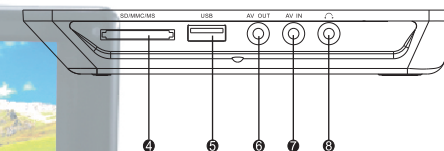

4. SD/MMC/MS card Port
5. USB Port
6. Audio/Video output Jack
7. Audio/Video Input Jack
8. Earphone Jack
Once an earphone is connected, the built-in speaker automatically shuts down.

REMOTE CONTROL

Remote Control

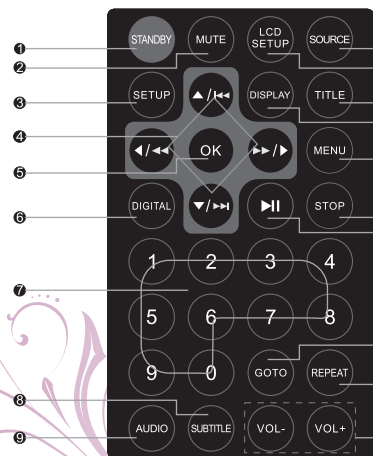

1. **STANDBY**-To access STANDBY mode or enter playback mode.
2. **MUTE**-To turn on or turn off the speaker output.
3. **SETUP**-To enter the DVD setting menu.
4. **▲/◀ ▶/▼** -Navigate in indicated directions for making selections in menus.
5. **OK**-To confirm the selections.
6. **DIGITAL**-DVD/USB/card switching.
7. **0-9 Numbers**- Use to select music, title or chapter during playback.
8. **SUBTITLE**- 1) To select a different subtitle language when playing a DVD disc (if available).
2) To active file copy function. This function only supports copying file(s) from the MPEG4/MP3/JPEG+MPEG4+MP3 disc to USB device.
3) When playing a CD/HDCD disc, press to access or exit the CD Ripping menu.
9. **AUDIO**-To select different languages/channels if available during playback.
10. **SOURCE**-To switch among DVD/AV for playback.
11. **LCD SETUP**-Press this button to enter the LCD setting menu. Long time to press button to LCD ON/OFF.
12. **TITLE**- To display the titles if available when playing a DVD disc.
13. **DISPLAY**-To display or close disc information.
14. **MENU**-To access menu during playback.
15. **STOP**-Press this button once to stop the playback and then press
16. **▶/||**-To start or pause the playback.
17. **GO TO**-To select the desired disc starting time, track or title.
18. **REPEAT**-To repeat a chapter, track, title or all content.
19. **VOL+/-**-To adjust the volume.

About The Rechargeable Battery

Charging the Battery

1. Plug the AC jack of the supplied AC/DC adaptor into the wall outlet.
2. Connect the DC output jack on the AC/DC adaptor with the DC 9V jack on the player.



Note:

- ▶ When the player power on, the light will be shown green. Due to save power, When the player stand-by the light will be off.
- ▶ When connected to the adapter, a red light indicates that the battery is being charged; The red light will be off indicates that the battery is fully charged.
- ▶ The whole charging process lasts about 2-3 hours when the unit is powered off. If the unit is turned on during the charging process, the whole charging time needs more.
- ▶ When playing CD's, turn the LCD screen off to prolong the battery working life.
- ▶ The unit has a built-in protection circuit to prevent damage caused by overcharging or over discharging the battery.

- ▶ The rechargeable battery will discharge gradually if not used for a period of time and will be completely discharged if not used for about one month.
- ▶ If the player is not be used for a long period of time, it is recommended that charged built-in battery about 2 hours for full charged.
- ▶ Never expose the battery to extreme temperature or humidity.
- ▶ Do not let any metallic objects such as coins or necklaces, connect with the terminals (metallic parts) of the battery or the adapter. This may result to fire or electric shock.
- ▶ Danger of explosion if battery is incorrectly replaced. Replace only with approved battery.


System Setup

1. Press the SETUP button on the remote control to enter the system setup menu;
2. Press the ◀ or ▶ buttons to navigate different system setup menu: General Setup, Audio Setup, Video Setup and Preference Setup;
3. When any setup menu is highlighted, use the ▲ or ▼ buttons to select different items under this setup menu;
4. Use the ▶ or OK button to enter into the selected item setting;
5. Use the ▲ or ▼ buttons to change to a new setting and press the OK button to confirm.
6. Repeat the above steps to do the other changes.
7. Press the ◀ button to return to the previous menu;
8. Press the SETUP button to exit the setup menu.

Setting Details

◆ General Setup

Several options are available: TV Display, OSD Language, Captions, Screen Saver and Last Memory.

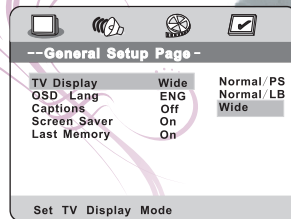

TV Display

Set up your TV system as: Normal/PS, Normal/LB, Wide.

Normal/PS(4:3 Pan Scan): This is selected when the player is connected with a normal TV. Wide-screen image displays on the full screen with a section is cut off.

Normal/LB(4:3 Letter Box): This is selected when the player is connected with a normal TV. Wide-screen image displays and black bars appear on the top and bottom of the screen.

Wide(16:9 Wide Screen): This is selected when the player is connected with a wide screen TV.

OSD Language

Select on-screen display language.

Captions

This function does not work with discs without captions.

Screen Saver

Turn the screen saver function ON or OFF. If the screen saver is set ON and the player is turned on without any operation for several minutes, a moving picture appears on the screen to protect the screen.


Last Memory

When this function is on, the player memorizes the time elapsed from the last time you played the disc. It will resume playing from the memorised time the next time you play the disc.


System Setup(cont.)

◆ Audio Setup Page

Four options are available: Dolby Digital Setup, 3D Processing and HDCD.

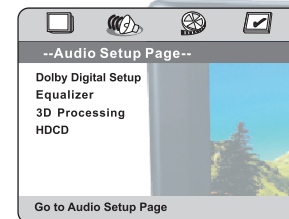

Dolby Digital Setup

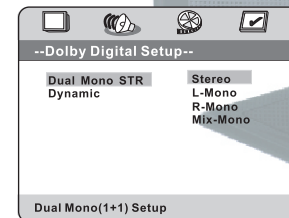

DUAL MONO


Stereo: stereo output signal;
L-Mono: Left output signal;
R-Mono: right output signal;
Mix-Mono: left&right average signal.

Dynamic Compression

This item allows you to control the dynamic range so as to achieve a suitable sound for your equipment. This function is only available to the Dolby sound source.


Equalizer

You can select a different equalizer mode from the available list.

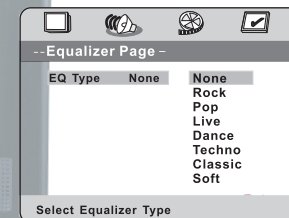

3D Processing


You can select a different reverb mode from the available list.

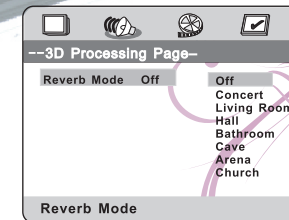


System Setup(cont.)

HDCD Setup

You can select different sampling frequencies. OFF means that the CD sampling mode is selected.

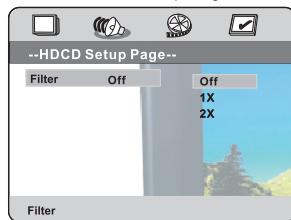


Preference Setup (Only available when the player is fully stopped)

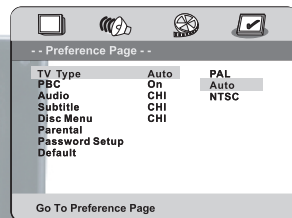

Video Setup Page

You can set the brightness, contrast, hue, saturation and gamma according to your preference.

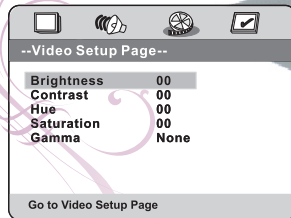

TV Type

This player is suitable for all kinds of TV systems. You can select PAL, Auto or NTSC.

Set PBC

ON: means the function is available. OFF: no function.

Set Audio/Subtitle/Disc Menu language

These are the initial settings of your preference. If a setting is supported by the disc content, it will work. Otherwise the disc default value works.


Set Password Mode

To set the password function ON or OFF. Set as OFF, you can enter into the parental control.

System Setup(cont.)

Set Password

Use the ▲ or ▼ direction buttons to select the password preference on the set-up, then press the ► or OK button to confirm. Use the ▲ or ▼ direction buttons to select the Password item and then change the password.

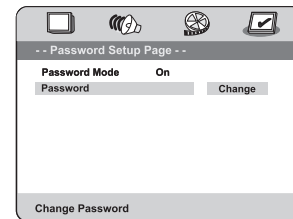


Set Parental Lock

The control level is for parents to determine violence and explicit content levels for children. A disc content level which is higher than the setting level cannot be played. When the "Password mode is turned off", you can set the "Parental" level. There are 7 levels for selection. When you have selected the desired parental level go back to the previous menu and turn the password protection "ON".

Set Default:

When choosing the "Reset", the system will return to the default status.

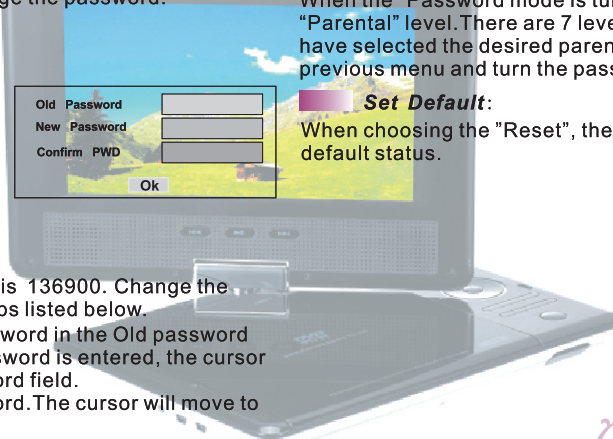

The initial factory password is 136900. Change the password by following the steps listed below.

1. Enter the old six-digit password in the Old password field. When the correct password is entered, the cursor will move to the new password field.
2. Enter a new six-digit password. The cursor will move to the Confirm password field.
3. Enter the new password again to confirm.
4. Press the OK button to confirm and exit the password change submenu.

System Setup(cont.)

LCD Setup

1. Press SOURCE button to switch AV selection;
2. Press SETUP button to show setup menu,repeat press SETUP button to choose different selection pages;
3. Press ▲ or ▼ button to choose setup item ;
4. Press ► or ◀ button to choose your selection.

Picture

You can select a different picture mode from the available list.

Picture




Option

Option



System

System

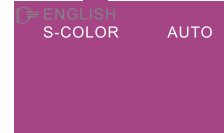

TROUBLESHOOTING

If your player does not seem to be functioning properly, check the items below before your contact an authorized service centre.

SYMPTOM	CHECK
Power does not turn on or suddenly turns off.	<ul style="list-style-type: none"> ◆ Make sure the player power cord is correctly inserted into the AC outlet. ◆ Turn the power off and then power on.
The screen is too light or dark.	<ul style="list-style-type: none"> ◆ Adjust the brightness in the setup menu.
The player cannot play.	<ul style="list-style-type: none"> ◆ Make sure the disc is correctly loaded; ◆ Check if the disc is dirty or warped; ◆ Check if region code of the player is the same as that on the DVD disc. ◆ Check if water condensation has occurred.
No sound.	<ul style="list-style-type: none"> ◆ Take out the disc and leave the player on for at lease one. ◆ Check if the volume setting is set to zero; ◆ Check if earphones are plugged into the player. Speakers cannot be used with earphone.
The remote control does not work.	<ul style="list-style-type: none"> ◆ Make sure the batteries are inserted correctly. ◆ Check if there are obstructions between the remote control and the player. ◆ Check the battery strength. Replace them with new batteries. ◆ Make sure the remote control is pointed at the player.

Others: Static or other external interfere may cause the abnormal behaviour of the player. In these circumstances, unplug the power-supply cord from the outlet and plug it in again to reset the player so that the normal operation can be resumed. If you are still having problems, then please disconnect the power and consult your authorized service centre.

SPECIFICATIONS

LCD Screen	7 Inch (16:9)
Laser Wavelength	Wavelength:780/650nm
Frequency Response	20Hz~20kHz $\pm$ 2.5 dB
Audio S/N Rate	$\geq$ 85dB
Audio distortion+noise	$\leq$ -70dB (1kHz)
Channel Separation	$\geq$ 70dB (1kHz)
Dynamic Range	$\geq$ 80dB (1kHz)
Audio Output	Out Level: $2V \pm \begin{smallmatrix} 0.0 \\ 1.0 \end{smallmatrix}$ Load:10K Ω
Power Requirements	Input: AC 110-240V,50/60Hz Output: DC 9V
Power Consumption	$\leq$ 18W
Weight	0.73Kg
Dimension	215 X 145 X 39 mm.
Operating Temperature	Temperature: 5 $^{\circ}$ C to 35 $^{\circ}$ C Humidity:45% to 75%

DESIGN AND SPECIFICATION ARE SUBJECT TO CHANGE WITHOUT NOTICE.

