

GoldMaster

7" Tablet PC

Blanco



Ürün görseli sadece temsildir. Ürününüz ile farklılık gösterebilir. **REV:1.1**

Önsöz

Ürünümüzü satın aldığınız için teşekkür ederiz.

Kullanıcı için gereken operasyonel kurallar, size ürünümüzü rahat ve hızlı kullanmanızı sağlayacaktır lütfen önce bu kullanım kılavuzunu ve talimatları okuyunuz. Bu taşınabilir ürün olağanüstü fonksiyonları olan kaliteli uzman bir üründür. Bu metnin içeriğinde haber vermeksizin değişiklik yapılabilir.

Biz firma olarak ürünlerimize yeni fonksiyonlar eklemek için çalışmalarımıza devam edeceğiz ve ayrıca yapılacak hiçbir değişiklik satın aldığınız üründe fonksiyonel ve performans olarak olumsuz bir değişiklik yaşanmayacaktır. Bu üründe dâhili bir hafıza bulunmaktadır, Bu yüzden cihazınız daki bilgileri bu hafzaya yedekleyebilirsiniz herhangi bir durumda bilgilerize gelebilecek bir zarardan firmamız sorumlu tutulamaz.

Satın aldığınız bu üründeki uygulama ve kurulum yöntemleri bu kılavuzdakilerle aynı değilse Asıl kurulum ve uygulama yöntemlerini firmamızın internet sitesinden takip edebilirsiniz

İçindekiler

Önsöz-----	1
İçindekiler-----	3
Teknik Özellikler-----	4
Kolay Kullanım-----	5
Önemli Noktalar-----	7
Şekiller ve Tuşlar-----	8
Ana Arayüz-----	9
Uygulama (APK)Yüklemek-----	11
Uygulama (APK)Kaldırmak-----	12
Video Oynatıcı-----	12
Ses Oynatıcı-----	15
Resimler-----	17
Ayarlar-----	18
OTG-----	20
Bilgisayara Bağlama -----	21
3G Şebeke Ayarları-----	22
Takvim-----	22
Hesap Makinası-----	23
Saat-----	23
Fabrika Ayarlarına Dönmek -----	24
Sürücü Güncelleme-----	25
Genel Sorun Giderme-----	25
Özellikler-----	27

Teknik Özellikler

- 7.0" 1024*600 5 noktadan Kapasitif dokunmatik ekran
- A23 Çifte çekirdekli işlemci
- ARM Cortex -A7 *2 / Hızlı 1.2 GHz
- Mali 400 GPU;
- Desteklenenler WIFI,
- Ön 0.3mp, Arka 2.0mp ağ üzerinden video konuşma desteği ve fotoğrafçılık fonksiyonu;
- Android 4.2 jelly bean; İşletim Sistemi
- Otomatik olarak yatay ve dikey ekran döndürme desteği;
- İnternet tarayıcı, Canlı mesajlaşma, Canlı Video, Oyun, Yükleme vs. Desteği;
- Onbinlerce oyun ve program indirme ve yükleme desteği;
- APE MP3 OGG; gibi birden fazla ses formatını destekleme
- 3GP AVI MP4 Desteği
- JPG, BMP and PNG, vs; Resim tarama, Döndürme ve Slayt desteği
- PDF gibi birden fazla formatta e-kitap oynatma fonksiyonu
- USB2.0 ile yüksek hızlı veri iletimi;
- Dâhili mikrofon ile uzun süre kayıt yapılabilme
- Mikro SD kart ve OTG fonksiyonu;

Kolay Kullanım

Açma

Cihazı açmak için "⏻" butonuna 3 saniye basılı tutun

Kapatma

Cihazı kapatmak için "⏻" butonuna uzun süre basılı tutun ekrana gelen pencereden kapatma seçeneğine dokununuz.

Uyku modu

Cihazınızı kısa bir süreliğine kullanmayacaksanız "⏻" işaretli kapatma butonuna bir kere basın cihazınız uyku moduna geçecektir yani ekran kapanacaktır aynı butona tekrar bastığınızda cihazınız normal çalışma moduna dönecektir. Cihazınız uzun süre kullanılmadığında kendi kendine otomatik olarak uyku moduna geçmesini istiyorsanız Ayarlar menüsünden bu seçeneği aktif hale getiriniz.

Ekran Zaman Aşımı

Belirlediğiniz bir zamanda cihaza herhangi bir bağlantı ve dokunma olmadığında ekranın kapanmasını istiyorsanız, Ayarlar bölümündeki ekran seçeneğinden bu süreyi ayarlayabilirsiniz ekranı tekrar açmak istediğinizde "⏻" işaretli açma butonuna bir kere basınekrana tekrar aktif olacaktır. İçeriğe erişmek için ekrandaki kilit simgesine dokununuz ve açık kilit simgesine doğru parmağınızı kaydırınız. Ekran zaman aşımını kullanmak istemiyorsanız, Ayarlar bölümündeki ekran seçeneğinden zaman aşımı seçeneklerinden hiçbirini seçiniz

Mikro SD Kart Kullanımı

Mikro SD kart ile bu özelliği kullandığınızda cihazınızda 2 adet disk olacaktır. Bunlardan biri cihazın dâhili hafızası diğeri ise cihaza taktığınız harici mikro SD karttır. Eğer kart kullanmazsanız cihazınızdaki 2. Disk seçeneğini açamazsınız. Mikro SD kartınız cihazınızda 4GB dan 32 GB a kadar desteklemektedir.

Micro SD kartı cihaza takmak ve cihazdan çıkarmak

Micro SD kartın Takılması:

Mikro SD kartı cihazın arka üst kısmında bulunan kapağı açarak içindeki İnsert TF Kart yuvasına hafifçe bastırarak takabilirsiniz. Artık Mikro SD Kartınızın içindeki bütün dosyalarınızı çalıştırıp oynatabilirsiniz.

Mikro SD kartın Çıkarılması:

Mikro SD kartı cihazınızdan çıkarmak için hafifçe bastırın kartın bir kısmı yuvadan dışarı çıkacaktır ve artık kartınızı çekerek cihazdan tamamen çıkarabilirsiniz.

Dikkat:

Mikro SD Kartınızı cihazınızdan çıkartmak istediğinizde cihazın kapalı olmasına dikkat edin aksi halde cihazınız çalışır durumdayken Mikro SD Kartınızı çıkarmaya çalışırsanız Mikro SD Kartınızdaki bilgiler zarar görebilir veya silinebilir.

Pil:

Bu cihazda yüksek kapasiteli polymer pil kullanılmıştır.

Pil gücü cihazınızda çalıştırdığınız program, video ve oyunların kalitesine süresine göre değişiklik gösterir. Cihaz kapanmadan önce pil bitiş uyarı ve kapanma süresini ayarlayabilir ve kaydedebilirsiniz.

Şarj:

Bu cihazı DC şarj cihazı veya USB kablosuyla şarj edebilirsiniz:

DC şarj cihazı AC 220Volt girişli 2000 mA DC 5V~5.2Volt çıkışlı olması gerekir.

Şarj için Uyarılar:

1. Cihazı satın aldığınızda pil boş olabilir bu yüzden önce tam olarak şarj etmeniz gerekmektedir. En az 8 saat şarj ediniz.
2. Cihazı uzun süre kullanmayacaksanız cihazınızın pilini 2-3 ayda bir tam olarak şarj etmeniz gerekmektedir.

Şarj cihazı (Güç Adaptörü) bu cihazın önemli bir bileşenidir, Bu cihazı

Kullanırken önemli bir hususda cihazın güvenle kullanılmasıdır, Satış sonrası teknik servislere gelen bu tür cihazların birçoğunda görülen arızanın sebepleri cihaza

uygun olmayan aksesuarlarla kullanılmasıdır, Özellikle güç adaptörünün kesinlikle cihaza uygun olması gerekmektedir.

Güç adaptörünü kullanım standartlarının dışında uzun süre kullanırsanız güç adaptörünüzün ömrü kısalmış, Güç adaptörünü kullandığınız yerde voltaj istikrarsızlığı cihazınızda kalıcı hasarlar bırakabilir, Güç adaptörünü kullandığınız yere dikkat edin aksi halde güç adaptörünüz patlayabilir ve kullanıcılara zarar verebilir.

Önemli Noktalar

1. Bu tür ürünleri çok soğuk, Çok sıcak, Nemli ve tozlu ortamlarda kullanmayın.
2. Ürünü kullanırken düşürmemeye dikkat edin.
3. Lütfen kullanmadan önce cihazınızın pilini şarj edin.
 - a. Cihazınızın pili bittiğinde pil simgesi boş görünür;
 - b. Cihaz otomatik olarak kapanır;
 - c. Eğer cihazınızda herhangi bir faaliyet yoksa yeniden başlatın.
4. Cihazınıza format atarken veya bir uygulama yüklerken cihazınızı kapatmayın aksi halde cihazınızda kalıcı sorunlar oluşabilir.
5. Bu cihazı taşınabilir bir disk olarak kullanmak isterseniz dosyalarınızı uygun formatta kaydedin, Herhangi bir yanlışlıkta dosyalarınız zarar görebilir, bundan dolayı firmamız sorumlu tutulamaz.
6. Lütfen cihazı sökmeyin veya kapağını açmayın teknik bir sorun varsa yetkili teknik servisimize başvurun.
7. Firmamız bu cihazın fonksiyonlarında ve performansında haber vermeksizin değişiklik yapabilir.

Ürün Tanımı



1. Işıık sensörü

2. Alıcı

3. Ön Kamera

4. Kulaklık Soketi

5. USB soketi

6. Arka kamera

7. Hoparlör


8. Ses Açma Kapama Butonu

9. ON/OFF(Açma/Kapama) Anahtarı

10. Dâhili Mikrofon

Ana Arayüz

Ana Arayüz: Bu üründe ilk çalıştırdığınızda 3 ekran vardır bunlar arasında parmağınızı ekranda sağa veya sola kaydırarak geçiş yapabilirsiniz.

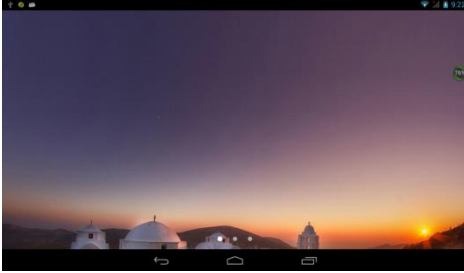

Duvar Kâğıdı Değiştirmek: Cihazınızın duvar kâğıdını istediğiniz gibi değiştirebilirsiniz.



Yazılım menüsü işlevleri:




: Herhangi bir ara yüzden bir öncekine dönmek için bu ikona dokununuz.



: Herhangi bir arayüzdeyken ana arayüze dönmek için bu ikona dokununuz.




Herhangi bir ara yüzdeyken arka planda çalışan programları görmek için bu ikona dokunun ekrana çalışan programların listesi gelecektir bu ikonlardan dilediğimize dokunarak geçiş yapabilir veya çalışan programları kapatabilirsiniz.

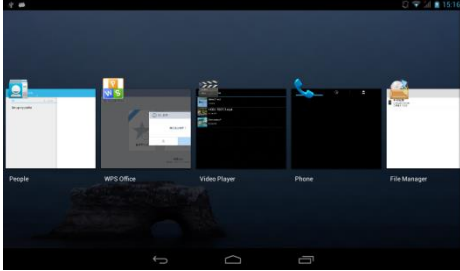

Bütün Uygulamaları Göstermek:



Cihazınızda yüklü bütün Uygulamaları görmek için bu , ikona dokunun.

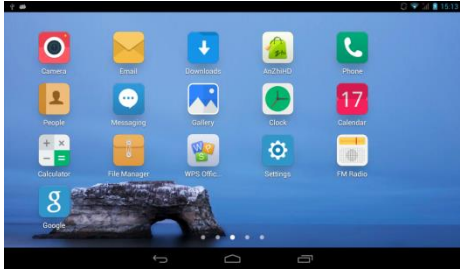


Programları masaüstüne eklemek için ikona uzun süre dokununuz.

Program kısayollarını masaüstünden kaldırmak için ikona dokunup basılı tutunuz.

Ekranın üst tarafında  Dismiss simgesi belirecektir. İkonu  Dismiss simgesi içine sürükleyip bıraktığınızda program kısayolu silinecektir.


Uygulama (APK) Yükleme

1. İndirip yüklemek istediğiniz APK formatındaki dosyayı TF Hafıza kartına kaydedin.
2. Dosya yöneticisi ikonuna tıklayıp yüklemek istediğiniz APK dosyasını seçin.
3. Yönergeleri izleyip yükleyi seçerek APK'nin kurulumunu gerçekleştirebilirsiniz.

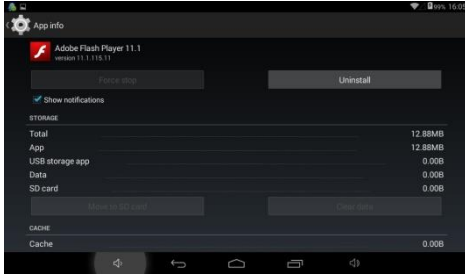


Uygulama(APK) kaldırmak

1. Masaüstünde "Ayarlar"a tıklayın. Ayarlar ekranında "Uygulamalar"ı seçerek kaldırmak istediğiniz uygulamayı bulup seçin.

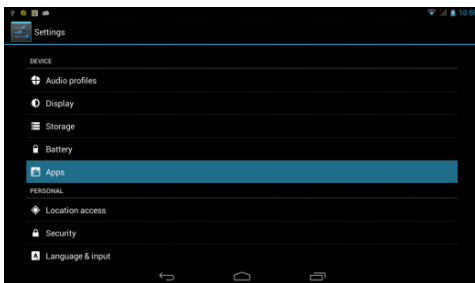


2. “Kaldır” düğmesine tıklayarak, program kaldırıcıyı çalıştırabilirsiniz.

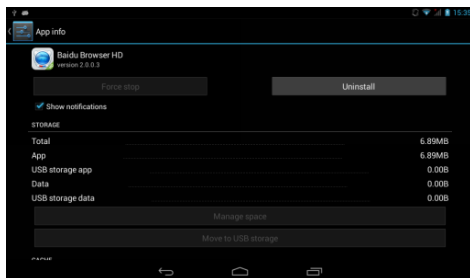

Video Oynatıcı

Video klasörüne ulaşmak için, ana menüde "4k video tablet PC" seçeneğini seçin.

Dosya listesi arayüzü

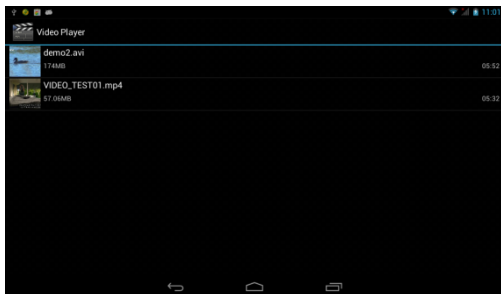

Video oynatıcı arayüzü



Tuř Fonksiyonları

- "  /  ": Oynat/duraklat butonu
- "  ": Videoyu ileri/geri al
- "  ": Ekran boyutu kontrolü
- "  ": Bařka uygulamalara gnder/paylař

Notlar:

1、 Bu Video oynatıcı, 4K (3840*2160) boyutuna kadar olan MP4 dosyalarını destekler.

2、 Altyazı

Bu oynatıcı, “*.SRT” uzantılı altyazı dosyalarını destekler. Kullanıcı, videoya uygun (eř zaman) altyazı dosyasını internetten indirmelidir.

İndirdiđiniz srt uzantılı altyazı dosyasını videonun yer aldıđı klasre, video dosyasıyla aynı adda kaydettiđiniz takdirde video oynatıcı hangi altyazıyı kullanıcađını bulabilir.


3、 Video oynatıcı, RMVB, AVI, MKV, VOB, MOV, FLV, MP4, H.264 gibi farklı formatlarda ve yksek znrlkteki dosyaları destekler. . İnternette indirilen dosyalarda video formatı, kodlama modu, tanımı ve video akıř hızı gibi parametreler farklılık gsterdiđinden, video oynatıcı, tm bu farklı durumlara uyum sađlayamayabilir. zellikle ok yksek znrlkl dosyalar, oynatıcının desteklediđi sınırların zerindeyse oynatılmaları mmkn olmayacaktır. Bu durumda, indirilen video dosyasını nceden uygun bir programla, tabletin desteklediđi boyut ve formatlara dnřtrmek gerekecektir. Bilgisayarınıza kuracađınız video dnřtrc programlarıyla bu dnřm gerekleřtirebilirsiniz.

Videoyu ileri/geri almak iin ubuk zerindeki dğmeyi Kaydırabilirsiniz.

Ses Oynatıcı

Ana menüde “Müzik” ikonuna tıklayarak kayıtlı tüm ses dosyalarına ulaşabilirsiniz.


Müzik klasörü arayüzü

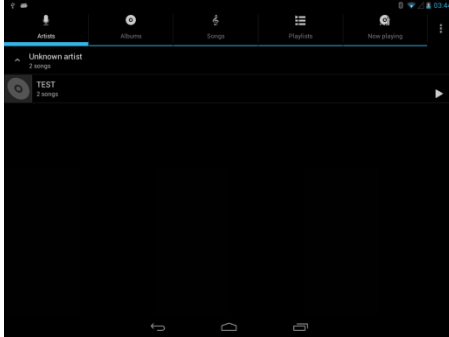

Tuş fonksiyonları

- "🏠": Ana ekrana geri dön
- "↶": Bir üst ekrana geri dön
- Listelerde gezinmek için listeyi aşağı/yukarı sürükleyin
- Sanatçılar: Müzik dosyalarını şarkıcıya göre listeler
- Albümler: Müzik dosyalarını albüme göre listeler
- Şarkılar: Bütün müzik dosyalarını listeler
- Şarkı listeleri: Şarkı listelerini listeler
- Şimdi yürütülüyor: Arka planda oynayan müziği gösterir

Müzik oynatma arayüzü

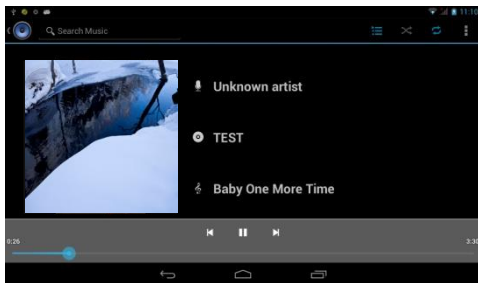

Tuş fonksiyonları

- "🏠": Ana ekrana geri dön
- "↶": Bir üst ekrana geri dön
- "⏮ / ⏭": önceki/sonraki müziğe geçiş için kısa süreli tıklayın. Şarkıyı ileri/geri almak için, uzun süre basılı tutun.
- "▶ / ⏸": Müziği oynatıp/duraklatmak için tıklayın
- "📑": Şarkı listelerini görüntülemek için tıklayın
- "🎲": Rastgele şarkı seçimi modunu açıp kapamak için tıklayın
- "↺": Bir üst ekrana dönmek için tıklayın

Şarkı sözleri


Müzik dosyasıyla aynı klasörde, aynı adda bir şarkı sözü dosyası varsa müzik oynatıcı, dosyaya doğrudan erişecek ve şarkı sözlerini arayüzde gösterecektir.

Bu müzik oynatıcı, "*.Lrc" uzantılı şarkı sözü dosyalarını destekler. "LRC şarkı sözü" ya da ingilizce şarkı sözleri için "LRC lyric" şeklinde arama yapıp müzik dosyanıza senkronize bir şarkı sözü dosyası indirebilirsiniz.

Resimler


Ana menüde “Süper HD Oynatıcı” yı seçerek tabletinizde kayıtlı tüm fotoğraf ve resimleri görüntüleyebilirsiniz.

Resim görüntüleme arayüzü

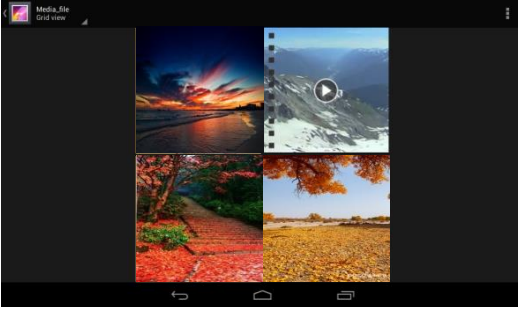

Tuş fonksiyonları

- "☰" : Bu ikon aracılığıyla, resimler üzerinde yapılan silme, sağa sola döndürme gibi işlemleri çok sayıda resim üzerinde gerçekleştirebilirsiniz.
- "📍" : Fotoğraflarınızı konum, saat, kişi ve etiketlerine göre de gruplayabilirsiniz.
- "🔍" : Fotoğraflarınızı düzenlemek için buraya tıklayın
- "ⓘ" : Bu ikon aracılığıyla resim özellikleri hakkında bilgi edinebilir, sağa/sola döndürme, kırpma, adını değiştirme gibi değişikliklerle resmi düzenleyebilir ve slayt gösterisi yapabilirsiniz.

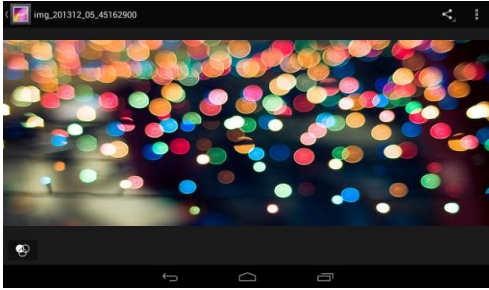

Ayarlar

Ana menüden “Ayarlar” seçeneğine tıklayarak sistem ayarlarına ulaşabilirsiniz.

(Farklı programlar üzerinden girdiğiniz ayarlar, sadece o programa ilişkin ayarları gösterir.)



Fonksiyon açıklamaları:

1.Kablosuz(WiFi)

Wi-Fi: Kabalosuz bağlantıyı aç/kapa

Kablosuz ayarları: Kablosuz ekranındayken "📶" ikonuna dokunarak, gelişmiş kablosuz ayarlarına ulaşabilirsiniz.

Bağlanmak istediğiniz kablosuz ağa listeden seçip şifresini girerek bağlanabilirsiniz.

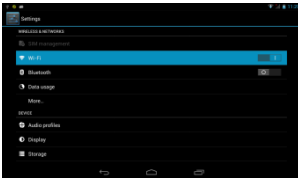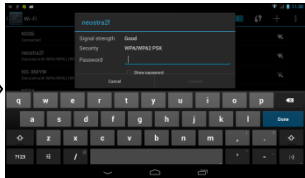

2. Veri Kullanımı

Farklı uygulamalara ait veri kullanım bilgilerini gösterir.

3. Ses Ayarı

Ses düzeyleri: müzik/video bildirim ve alarm ses düzeyini ayrı ayrı ayarlayabilirsiniz.

Varsayılan bildirim: hBildirim Ses tonunu listeden seçebilirsiniz

Dokunma sesleri: Af Seçili olduğu takdirde, dokunmatik ekrana dokunuşunuzda ses çıkarır.

Ekran kilidi sesi: Seçiliyse, tabletin açılış/kapanış ekranında kilit ses çıkarır.

4. Ekran Ayarları

Parlaklık: Ekran parlaklık ayarı

Duvar kâğıdı: Süper-HD oynatıcıdan resim seçerek duvar kâğıdı atayabilirsiniz.

Uyku: Ekran güç tüketimini azaltmak için otomatik kapanacak ve bekleme moduna geçecektir. Bu otomatik beklemenin süresini listeden seçerek ayarlayabilirsiniz. Ekran kapanıp bekleme moduna geçtikten 10 saniye sonra kablosuz(WiFi) de güç tüketimini azaltmak için kapanacaktır. Yazı tipi boyutu: Küçük, normal, büyük, çok büyük yazı tiplerinden birini seçebilirsiniz.

Açı sensörü koordinat sistemi: Tabletten eğim açısını ölçen sensörün koordinat sistemini seçebilirsiniz.

Ekran uyumu: Bazı oyunlar için ekran boyutu ayarlaması gerektiğinde kullanılır

5. Depolama

Harici ve dâhili hafıza birimlerinin toplam kapasitesi ve kullanım miktarını gösterir.

6. Uygulamalar

Yüklü uygulamaları listeler ve uygulamaların yönetimini sağlar.

7. Güvenlik

Ekran kilidi: Kaydırma, şekil, PIN, şifre gibi farklı türlerdeki güvenlik yöntemlerinden birini seçebilirsiniz.

Şifreleri görünür yap: Seçiliyse, şifre kutusuna gireceğiniz şifre karakterleri görünür

olur.

Bilinmeyen kaynaklar: Google Play Market dışındaki kaynaklardan indirilen uygulamaların da tabletinize kurulabilmesini sağlar. Varsayılan değeri açıktır.

8.Dil ve giriş

Dil ve bölge ayarlarını değiştirebilir, giriş yöntemini seçebilirsiniz vb.

9.Yedekle ve sıfırla

Veilerinizi ve ayarlarınızı yedekleyebilir, daha önceden aldığınız yedekleri geri yükleyebilirsiniz.

10.Tarih ve saat

Tarih, saat, saat dilimini ve tarihle saatin gösterim biçiminiz ayarlayabilirsiniz.

13.Tablet hakkında

Tabletinizin yazılım versiyonu ve diğer bilgilerini görüntüleyebilirsiniz.

OTG

On-The-Go'nun kısaltmasıdır. Taşınabilir cihazlar arasında, bilgisayara gerek kalmadan veri transferi yapılabilmesi için geliştirilmiş bir teknolojidir. MP3 oynatıcı, flash disk, harici sabit disk gibi cihazları, arada bilgisayar olmadan, doğrudan tabletinize bağlayıp dosya transferi yapabilmenizi sağlar.

OTG Bağlantı Adımları:

- 1.Kullanmak istediğiniz cihazı tabletinize uygun bir OTG kabloyla bağlayın.
- 2.Ana menüden dosya yöneticisini seçip mobil disk klasörü üzerinden dosyalarınıza erişebilirsiniz.

Uyarılar:


- 1.Taşınabilir cihazlardaki büyük çeşitlilik nedeniyle bazılarının tanınmaması mümkündür.
- 2.Yazılım güncellemeleri sayesinde artan sayıda cihazla uyum sağlanacaktır.
- 3.OTG ile bir cihaz bağladığınız takdirde, gerekli enerji tabletinizin bataryasından

kullanılacaktır. Bu nedenle tabletinizin pili %30 'un altındaysa ve kullanmak istediğiniz cihaz yüksek güç tüketimine sahipse bağlantıda sorun yaşayabilirsiniz. Bu gibi durumlarda temin edeceğiniz “Y kablosu” aracılığıyla cihazı harici bir güç kaynağına bağlayabilirsiniz.

4.Şimdilik OTG sadece tek yönlü dosya transferi yapabilmektedir. Yani harici cihazınızdaki dosyaları okuyup tabletinize kopyalayabilirsiniz ancak dosyalar üzerinde değişiklik yapıp silemezsiniz.


Bilgisayara Bağlama

Tabletinizdeki dosyalarınızı silmek ya da kopyalamak için, bilgisayarınıza USB kablosu aracılığıyla aşağıdaki adımları izleyerek bağlayabilirsiniz.

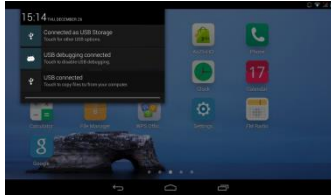

1. Tabletinizi bilgisayarınız USB portuna USB kablosuyla bağladığınız takdirde,

Tabletinizin ekranında “USB bağlandı” bildirimi gözükecektir.

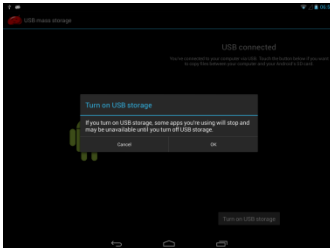

2.USB bağlandı bildirimine

tıklayıp “USB depolama ünitesini aç”ı seçin. Tabletinizin depolama ünitesi bilgisayarınızda flash disk

olarak gözükecektir. Bilgisayarınızın dosya yöneticisini tabletinize dosya taşımak, kopyalamak için kullanabilirsiniz.

3G Şebeke Ayarları

1. 3G modeminizi tabletinizin USB portuna takın
2. 3G ve kablosuz(WiFi) aynı anda kullanılmadığından, ayarlardan Kablosuz (WiFi)'yi kapatın.


【Notlar】

1. 3G modem cihazlarındaki çeşitlilik ve haberleşme sistemlerindeki farklar nedeniyle tüm cihazlarla uyum sağlamak mümkün olmamaktadır.
2. 3G modemlerin güç tüketimi yüksek olduğundan, harici güç kaynağı kullanınız ve tabletinizin pili yeterince dolu olduğundan emin olunuz.

Takvim


Ana menüde takvim ikonuna dokunarak, takvim arayüzüne erişebilirsiniz.

Bu menü altında ekranı sağa sola kaydırarak ayı arttırıp azaltabilirsiniz. Takvime kaydetmeniz gereken bir durum varsa cihazınıza önceden bir takvim hesabı ekleyin ve tahkimi görünür hale getirin.

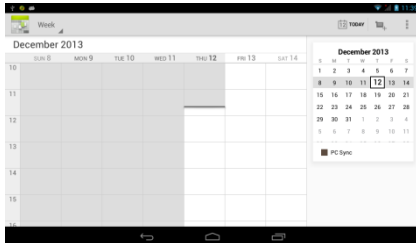


Makinesi

Hesap makinesi açmak için ana menüden “Hesap makinesi” ikonunu seçiniz. İhtiyaçlarınız doğrultusunda, normal hesap makinelerini kullandığınız gibi kullanabilirsiniz.

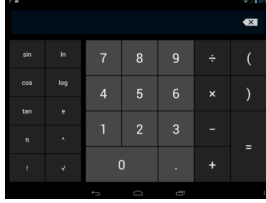

Saat


Günlük yaşam içinde sıkça kullanacağınız bir araç olan saat fonksiyonuna ana menüden “Saat” ikonunu seçerek ulaşabilirsiniz.

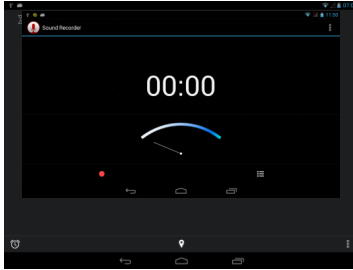

- 1、“Saat” ikonunu seçtiğinizde aşağıdaki arayüzle karşılaşacaksınız.
- 2、“🔔”:Alarmı ayarlamak için bu ikona tıklayınız.



Zamanı geldiğinde otomatik olarak alarm zili çalacaktır.

Alarmın gün ve saatini, zil tonunu ve tekrar seçeneklerini her alarm için Ayarlayabilirsiniz.

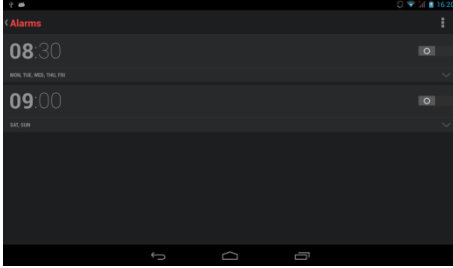

Fabrika Ayarlarına Dönmek

Cihazınıza virüs bulaştığını düşünüyorsanız ya da dışarıdan yüklediğiniz bir uygulama beklenmedik şekilde çalışıyorsa, cihazınıza format atmak isteyebilirsiniz. Ayarlar üzerinden “Yedekle ve sıfırla” sonra da “Fabrika verilerine sıfırla” 'yı seçtiğinizde tablete sonradan yüklediğiniz bütün uygulamalar silinecek ve tabletiniz ilk aldığınız günkü durumuna gelecektir.

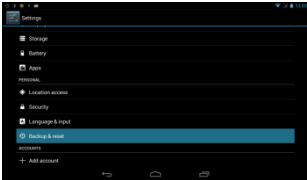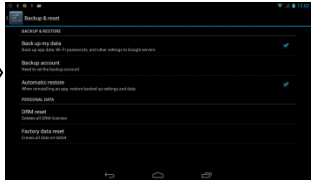

Sürücü Güncelleme

Sürücü yazılımları cihazınız üzerindeki donanım üniteleriyle işletim sisteminin haberleşmesi sağlayan düşük seviyeli yazılımlardır. Sürücü yazılımında yapılacak güncellemeler, cihazınızın donanım üniteleri aynı olmasına rağmen performansında gözle görülür bir artışa olanak sağlar. Sürücü güncellemek cihazınızın normal çalışmasını etkilemez.

Ancak güncelleme sırasında bir hata olursa cihazınızın düzgün çalışamaz hale gelebilir. Bu nedenle güncelleme yapmadan önce lütfen yönergeleri dikkatlice okuyun.

【Notlar】

1. Güncelleme yapmadan önce lütfen pi seviyesinin en az % 60 olduğundan emin olun. Güncelleme sırasında pilin bitmesi tabletinizin açılmasını engel olabilir.
2. Güncelleme işlemi sırasında tabletinizi kapatmayınız ya da resetlemeyiniz. Güncelleme işlemi sırasında kesintiye gitmek cihazınızın açılmasına engel olacaktır.
3. yazılım güncellemesi sırasında belirli özellikler kalkabilir ve değişebilir. Değişiklikler önceden haber verilmeden yapılabilir.
4. Uygulamaların kayıtlı verileri güncelleme sırasında silinecektir. Bu nedenle güncelleme yapmadan önce bütün verilerinizi yedeklediğinizden emin olun.
5. Sürücüler yazılımları başka ürünlere uygun değildir. Karşılaşılabilecek sorunlardan firmamız sorumlu tutulamaz.

Genel sorun giderme

1. **APK dosyası nedir? Android PMP ile ne gibi bir ilişkisi vardır?**

A: APK, Android paketinin kısaltmasıdır, yani Android kurulum paketi anlamına gelir.

APK dosyalarıyla, uygulamalar, Android PMP sistemine doğrudan yüklenebilir.

2. How to get the APK application

A: Yüster APK dosyasını bilgisayarınıza indirip, tabletinize taşıyarak kurulum yapabilir, isterseniz de “Google Play Store” üzerinden indirip yükleme yapabilirsiniz.

3. Kablosuz(WiFi) bağlantısı neden kopuyor?

A: Ekran uyku moduna girdiğinde kablosuz bağlantısı da güç tüketimini düşürmek için kapanacaktır. Uyku modundan çıkıldığında ise yani cihazınızı yeniden kullanmaya başladığınızda kablosuz bağlantınız 5 saniye içinde otomatik olarak bağlanacaktır.

4. Neden indirilen bazı APK dosyaları düzgün çalışmıyor?

A: APK dosyalarının, yükleme yapabilmek için bazı donanım ve yazılım şartları vardır. Dışarıdan indirilen dosyalar bu yazılım ve donanım şartlarını yerine getirmeyebilir. Bu karşılaştığınız sorun cihazınızdaki bir probleme değil, indirdiğiniz dosyadaki uyumsuzluk sorununa işaret eder.

5. Neden şarj aleti takılı olmasına rağmen şarj oluyor durumu gözüküyor?

A: Pil çok düşük seviyede ise şarj oluyor durumunun gözükmesi için yarım saate kadar şarj süresi geçmesi gerekebilir.

6. Yerçekimi yönünü algılama özelliği neden çalışmıyor.

A: Cihazınız yer çekimi yönünü algılama özelliğini desteklemektedir. Cihazınızı hafice sallamanız gerekebilir. Ancak bazı uygulamalar bu özelliği desteklemiyor olabilir. Bu durum tabletinizin özellikleriyle değil, ilgili uygulamanın yazılımıyla ilgilidir.

7. Tablet açılmıyor

1) Pili bitmiş mi kontrol ediniz.

2) Şarj aletini takın

3) Şarjda bir süre beklemenize rağmen hala açılmıyorsa, müşteri hizmetlerine başvurunuz.

8. Kulaklıktan ses gelmiyor.

- 1) Ses seviyesini kontrol ediniz
- 2) Kulaklığın yerine düzgünce oturduğundan emin olunuz.

9. Şarj ederken yaşanan sorunlar

- 1) Kullandığınız şarj aletinin tabletinizin şarj gereksinimleriyle uyumlu olduğundan emin olun.

- 1- 2) USB üzerinden şarj ederken, PC ye bağlayarak şarj etmeyiniz.

Neden indirdiğim bazı video dosyalarını oynatamıyorum?

Tabletiniz internetten indirdiğiniz video dosyalarını genel olarak destekler. Ancak internette yer alan video formatları, çözünürlüğü ve akış hızı gibi parametlerin büyük farklılık göstermesi, bazı videoların oynatılamamasına yol açabilir. Böyle bir durumla karşılaştığınızda videoyu bilgisayarınızda uygun bir programla tabletinizin oynatabildiği standart formatlardan birine dönüştürüp tabletinize taşımak sorununuzu çözecektir.

Özellikler

Hafıza	Hafıza Arttırma	Micro SD
	Dahili Hafıza	8GB
Genel	Solution	A23
	Ekran	7.0" 1024*600 (G+G)TN
	GPU	Mali 400@286MHZ
	İşletim Sistemi	Android 4.2
	İşlemci	cortex-A7*2,Çift Çekirdek
	DDR	512MB DDR3
	Dâhili Kablosuz	4 Saat Kullanım
	Fonksiyon	Işık sensörü, yakınlık sensörü, MIC, ATA, RTC (Gerçek zamanlı saat), G-sensörü, Bluetooth, Hoparlör
	Kamera	0.3 M Ön/2.0M Arka
	Kablosuz Bağlantı	802.11 b/g/n
Güç Kaynağı	Çalışma Sıcaklığı	-5~40
	Çoklu Dil	Türkçe, English, Chinese, Russia, French, German, Spanish, Indian etc.
O/S	Supported OS	Windows, Mac and Linux

Merkez Servis İletişim Bilgisi

Bakır ve Piriñçiler Sanayi Sitesi, Karanfil Cad. No:1 Beylikdüzü / İstanbul

Hatırlatma; Daha iyi hizmet ve hızlı hizmet için lütfen merkez servis ile iletişime geçerek sorun ve sorularınızı bildiriniz.

info@goldmaster.com.tr

Kullanım Ömrü : 7 Yıldır

Garanti süresi: 2 yıldır.

Made in P.R.C



Foreword

Thank you for purchasing of our product.

These operational guidelines for the user, to ensure you a quick and convenient to use, read the instructions carefully before use.

This player is a specialized top quality portable player product with a series of remarkable functions. There will be no separate notice in the case of any change in content of this text.

This company will continue to provide new functions for the development of the product, and there will be no separate change in the case of any change in the product's performance and functions. While this unit is used as a mobile hard disk, this company will not be held liable for the security of files saved in the disk.

If the actual setup and the application methods are not identical to those as set forth in this manual, please access to the latest product information of this company's website.

Contents

Foreword.....	1
Contents	2
Key Functions	3
Basic Operation.....	4
Points for Attention.....	7
Shapes and Keys.....	8
Main interface.....	9
Insert the Micro SIM card.....	11
Installed APK.....	12
Uninstall APK application.....	13
Video Player.....	14
Audio Player.....	16
Pictures.....	18
Messaging.....	20
Settings.....	20
OTG.....	23
Connect the computer.....	24
3G network Settings.....	25
Calendar.....	26
Hi-Q MP3 Recorder.....	26
Calculator	27
Clock	27
Factory data reset	28
Upgrade Player Driver.....	29
Common troubleshooting.....	30
Specification	32

Key Functions

- 7.0" 1024*600 capacitive touch screen, 5 points touch, with cover lens;
- MTK MT8312 dual Core
- ARM Cortex -A7 *2, faster 1.2 GHz
- Mali 400 GPU;
- Support WIFI, 3G wireless Network, Bluetooth, GPS,FM,G-sensor, Light-sensor, Proximity sensor;
- Front 0.3 million pixel, rear 2.0 million pixel network video conversation and support photography function;
- Adopt Android 4.2 jelly bean;
- Support auto rotation the screen horizontally or vertically;
- Support Web browsing, chat online, online video, online games and download etc.;
- Support ten thousands games and programs download and install;
- Supporting multiple audio formats such as APE MP3 OGG;
- Supporting 3GP AVI MP4
- Supporting picture browsing, rotation and lantern slide playing in the formats of JPG, BMP and PNG, etc.;
- Support E-book function, playing in multiple formats as PDF etc.;
- USB2.0 high rate transmission;
- Support dual SIM card ;
- Built-in microphone and long-time recording;
- Supporting Micro SD Card; Support OTG function;

Basic Operation

Power on

In the shutdown state, long press "⏻" button boots

Power off

In the power on state, long press the "⏻" key 3 seconds then pop-up device options, select " Power off " for shut down.

Sleep

The machine under normal operating conditions, Short press the power button, Into hibernation, Now, Screen will close. Short press the power button again, Be able to resume normal mode. When the time being use this MID can enable this feature when, To reduce power consumption.

Power reset

If there is shutdown to the player in the process of operation, you can turn off and restart the player by pressing "reset" key.

Screen time out

If you do not contact the player within the set time, and do no operate by the button, the contact screen will be automatically turns off.

In any state, short press "⏻" button and for activation; Then skid the lock upwards to the green of spotted which will accomplish to access to the upper interface.

If it is necessary to deactivate the contact screen time out function, you can set the [Screen time out] option under [display] function into "Never ".

Using the Micro SD card

After this unit is connected with the computer, you will find two moving disks. The first one is the built-in memory disk for this unit and the other is the disk for the

Micro SD card. If no card is inserted, the second disk can't be opened. This unit supports the extension of the Micro SD card from 4GB to 32GB.

Inserting and Pulling out the Micro SD card

Inserting:

Put the Micro SD card face up (side with words), and slightly force the card into the socket of the card, i.e. connecting the unit. Under this state, you can play the content in the Micro SD card.

Pulling:

Slightly push the Micro SD, and it will bounce by a section, and then you can take it out.

Caution:

Please perform inserting and pulling operation when power is off! Otherwise, it will lead to the loss or damage to the files within the unit! If no card is inserted, the computer will be unable to perform read and write operation for the disk notes of the later removable disk (Micro SD card).

Battery:

High capacity Polymer battery is used for this unit.

The duration available of the battery power depends on volume, types of playing files and operation of batteries. The player can be set up by the user as "user define power off time" or "display setup" to save batteries.

Charging:

This unit can be recharged by USB port, you can also use DC Charger:

Take out the DC charger, plug it into the wall outlet with AC 220V(output current 2000mA, output voltage 5V~5.2V)), then plug in the DC jack into the device DC-in jack.

Warnings for charging:

1. *A new battery may be empty and not charged before you get the device.*

2. *If the device is not used for long time, it is better to charge it to full capacity every 2 or 3 months during storage.*

Power adapter is a key component of the portable player, which play a crucial role in keeping the portable player's normal work and protecting your security when using the player, a long-term customer surveys and after-sales service Practice shows that the malfunction of the portable player In many cases were caused by using inappropriate accessories, in particular the power adapter.

Use the substandard power adapter will shorten the life of the portable player by considerably, the voltage instability will seriously affected the normal work of the portable player and bring permanent damage on the player's performance and reliability, Use the substandard power adapter will also reduced the vocal quality of the players, shutdown the player when you using it, In addition, Use the substandard power adapter will cause combustion and explosion which will disserve the safety of the consumers.

Points for Attention

1. Do not use the player in exceptionally cold or hot, dusty, damp or dry environments.
2. Do not allow the player to fall down while using it.
3. Please charge your battery when
 - A. Battery power icon shows an empty icon;
 - B. The system automatically shuts down and the power is soon off when you switch on the unit once again;
 - C. There is no response if you operate on any key
4. Please do not disconnect power abruptly when the player is being formatted or in the process of uploading or downloading. Otherwise it may lead to the error in the program.
5. When this unit is used as a moving disk, the user shall store or export files in the proper file management operation method. Any improper operation method may lead to the loss of files, for which this Company will be held no liable.
6. Please do not dismantle this unit by yourself. If there is any inquiry, please contact the dealer.
7. There will be no separate notice in the case of any change in the functions and performance of this product.


Shapes and Keys




1. Light sensor/induction distance 2. The receiver 3. Front camera
4. Headphone socket 5. USB socket 6. The rear camera 7. loudspeaker 8. volume
Add and subtract key 9. Power switch 10. The built-in MIC

Main interface

Main interface: A total of 3 pages can slide to the left/right touch screen switch desktop display.

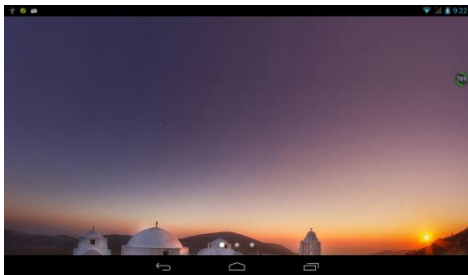

Change desktop wallpaper: Can change the wallpaper in the set, specific operation is: set up—show—wallpaper.

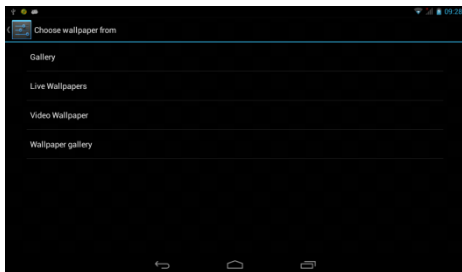

Software menu function declaration:




: Any interface click the icon to return to previous interface.

: Any interface click the icon that is to return to main interface


: Any interface click the icon can pop-up background running program list.

Click on the program icon can switch to background open program interface. To the right sliding program icon, you can close this program in the background operation.

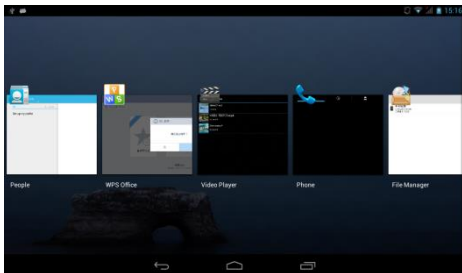

Show all application:

Click on the main interface control icon , can show all installed a application.

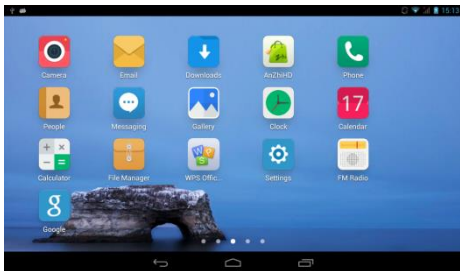

Long press program icon, but the program shortcut added to the desktop.

In the desktop shortcut icon long press program, the screen will appear above the  icon and drag long hold program shortcut icon to  icon can delete this shortcut icon.

Insert the Micro SIM card

This tablet support Micro SIM card, only use non-standard Micro SIM card can damage your tablet, please consults your network operator to replace the purchase Micro SIM card. Please do not under on insert or remove the Micro SIM card.

- 1、 Follow the arrows indicate the location, open the back of the sheet of plastic on the back, you can see the inside of the card slot tablet.



2、 The SIM card and TF card into the slot.


3、 Close the plastic backing

【Note】

1, the machine does not support the SIM card and TF card hot swap function, plug TF card when SIM cards and turn it off.


Installed APK

1. take the need to install the software of the APK format downloaded to the player or TF card
2. Click "file manager" icon and select the need to install the APK application
3. Choose the path of the APK is application, click on the APK program to install, to start the installation

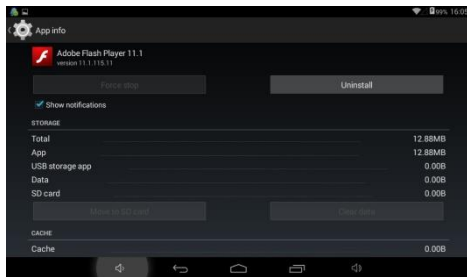


Uninstall APK application

1. Click on the desktop "Settings", into the "Settings"- application ", select and click on the need to uninstall program

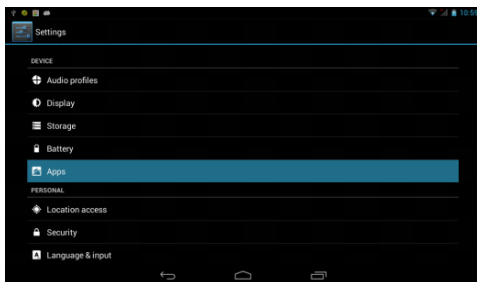


2. Click on the "uninstall" icon to start program the unloading

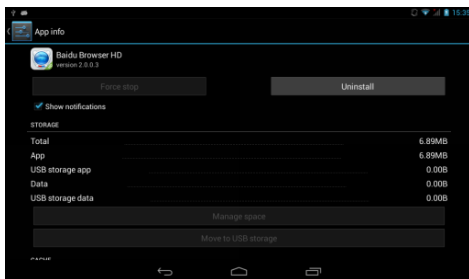

Video Player

In the main menu, select the option of "4k video tablet PC" to be able to access video folder.

File list interface

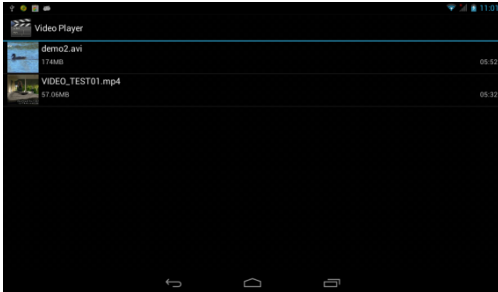

Video playing interface



Function of keys

- "  /  ": Play/pause switch button

-  : Adjust video progress
-  : Control the size of the screen
-  : Can be sent to other applications

Tips:

1. This MP4 player support maximum 4K (3840*2160) resolution video files.
2. Subtitle display

This player supports "*.SRT" subtitle files (The user can download it from the website) for the synchronous playing of subtitle and video.

When there is any subtitle file with the same name in the folder for playing video, the player will be able to achieve synchronous subtitle display


3. It's supports video playing in multiple formats such as, RMVB, AVI, MKV, VOB, MOV, FLV and MP4, H.264 encoding high-definition video etc. As parameters such as formats, coding modes, definition and code flow rates of video files provided by the internet differ, the player is unable to be compatible with all video files (especially those video files with high definition or high code rates). If the downloaded video files are out of the range supported by the player, which renders it impossible to play normally in the player, it is recommended that the video conversion software from a third party be used, and file formats be converted via computers into the ones within the range supported by the player before the same are duplicated into the player for playing.

Player Progress, Drag the line to change the player progress.

Audio Player

In the main menu, select the option of "Music" to be able to access music folder.


Music folder interface

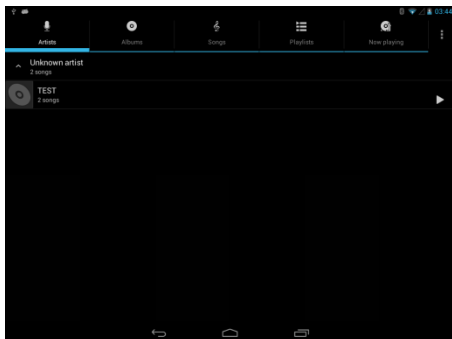

Function of keys

- "🏠": Return to main interface
- "⬅️": Return to upper interface
- Up/down to touch screen, can realize the file list to scroll function
- Artist: according to the singer classification music files
- Album: according to album classification music files
- Song: display all music files
- Playlist: to display the play music files in the list
- Now playing: into the background music played interface

Music playing interface

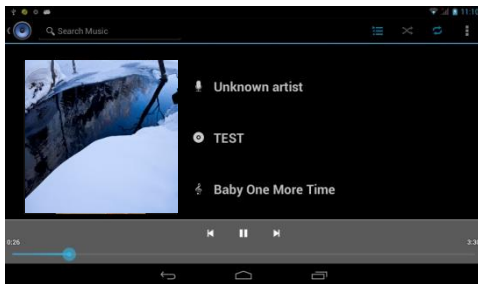

Function of keys

- "🏠": Return to main interface
- "⬅️": Return to upper interface
- "⏮️ / ⏭️": short press to play the last /next music, long press for fast rewind / forward;
- "▶️ / ⏸️": Click start/stop playing music
- "📖": Click into play lists
- "🔀": Click on open/close songs random play mode
- "🔄" key: short press it to return to the upper interface

Lyric Display


When there is any lyric file with the same name in the folder for playing music, the player will directly access the lyric display interface.

This player supports "*.Lrc" lyric files (The user can download it from the website of "<http://www.51lrc.com>", or search "LRC Lyric" to have the lyric file) for the synchronous playing of lyrics and music.

Pictures

In the main menu, select the option of "super-HD player " to be able to access Photo folder.

Picture viewing interface

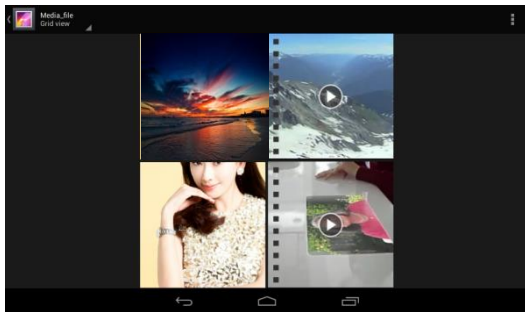

Function of keys

- "☰": Can through this icon, images batch management, For example: delete, Rotate left, Rotate right,
- you can also according to the location, time, people and tags setting picture group.
- "🔍": Click here to edit photos
- "☰": Through you can click on the icon to set and understand pictures information, including: Slideshow, Edit, Rotate left, Rotate right, Crop, Details, Set picture as



Settings

In the main menu, select the option of "settings" to be able to access the System Set fold. Directly click can assess picture set options interface.

Description of functions:



1. SIM card management

SIM card management will display a SIM card information state, the default Settings, and other Settings

2. WiFi

Wi-Fi: Open/close the wireless connection

Wi-Fi setting: touch the "⚙️" icon, can enter WIFI senior set items
Open the wi-fi, select the user, enter the password, can be used.

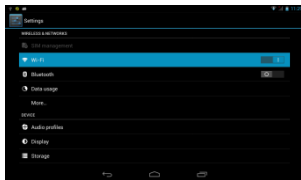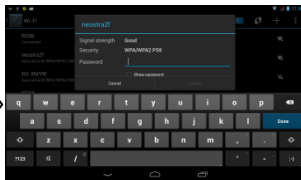


3. Bluetooth

(1)、Enter setup interface, click on the bluetooth function, open the bluetooth function, can search nearby bluetooth connection, click on the bluetooth figure on the top right corner

4. Date usage

Display Date usage

5. Sound setting

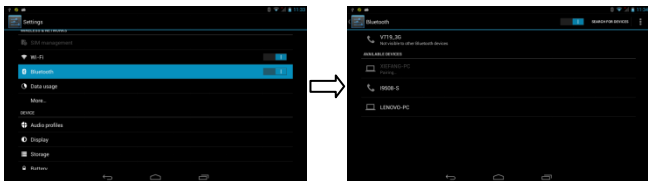

Volumes: set the Notice, the media and the alarm clock volume.

Default notification: Click to open notification bell menu, select the item is set to default notification bell

Touch sounds: After checked, Touch screen will make sound

Screen lock sound: After checked, Touch screen will make sound

6. Display settings

Brightness: Set adjust brightness of the screen

Wallpaper: you can choose wallpaper from Super-HD player and wallpaper

Sleep: Set off the screen saver standby time. When the player in the standby screen saver, WIFI function will be closed to save electricity purpose; When sensei player, WIFI function will be in 10 seconds to be automatic recovery

Font size: Set shows the font size

Accelerometer coordinate system: you can set Accelerometer coordinate system

Screen adaption: Used to adjust size of some games display screen

8. Storage

Check the PMP memory and available storage

9. Apps

Can display and management of the installation applications

10. Security

Screen lock: Settings screen lock way, slide, Pattern, PIN, and password and so on many kinds of mechanisms.

Make password visible: After the check, in the password input box, can show the input password.

Unknown source: allow installation of non- Google Market applications, the default setting is open

10. Language & input

Setting language and area, input method etc., function storage

11. Backup & reset

Can backup, restore the machine Settings and data

12. Date & time

Set the date, time, time zone and time display format

13. About device

Check the machine software version and other information

OTG

OTG is the On-The-Go abbreviation. It is a technology that realizes data transmission between portable devices without a host. Specifically, computers are not needed to act as a medium when share data with or transfer documents from other portable devices to your player such as flash disk, mp3 player and portable hard disk.

OTG Connection Steps:


1. Would U disk or move hard disk, and other USB devices through OTG connected to the machine turned connection to the USB interface.
2. For external USB device display machine after state, to return to the machine desktop, click "file manager" icon, choose the "mobile disk", can access the connection USB device files in the content.

Remarks:


1. Due to large varieties of portable devices, the player might not recognize some of them.
2. Compatibility with more and more portable devices will be realized through firmware improvement.
3. While using OTG connection, the other portable device relies on the player's power supply. Thus if your player maintains less than 1/3 battery or the other device is a heavy electric consumer, OTG connection might not be proceeded successfully. As an alternative, please provide power supply to the other device exclusively
4. Currently the OTG only supports one-way operation. That is, documents in other devices can be read or copied to your player. But files in your player can't be pasted to the other device. Nor could you delete files in the other device.

Connect the computer

This machine can be through the USB cable to connect to a personal computer, the data is copied or delete operation. The specific procedure is as follows.

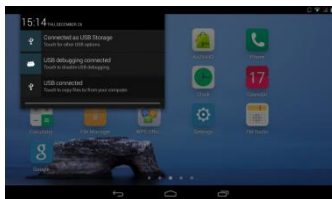

1. will the
through the
connected to
port, this
screen

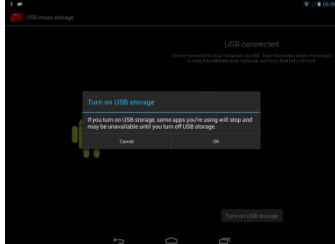

machine
USB cable
the PC's USB
machine is the
Notification

will have a "USB already connected" notice options

2. Click "USB already connected" notice options, and choose the "open USB storage devices", and then in the personal computer see mobile operators disk dish, can as U disk the use of the machine disk data operation.

3 G network Settings

1. Will be 3 G wireless card through the conversion line into USB interface
2. Into the machine "Settings" under a "wireless and network", will be closed

Wifi option, Wifi and 3 G not used at the same time.

【Note】

1. Due to the different communication systems 3 G equipment is more, this machine is 3 G function can't ensure that is compatible with all the outer 3 G


equipment.

2. 3G equipment should be due to external from the machine to the USB interface take electricity, so in 3 G connection, please ensure that the battery power in one case above.

Calendar

In the main menu, touch "calendar" icon to be able to access the calendar interface.

Under this menu, Touch & slide screen left and right which will accomplish to flip increase or decrease month by month. If you need record new event before you

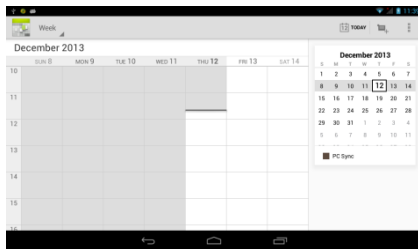

can add an event, you must add at least one Calendar account to the device and make a calendar visible.

Hi-Q MP3 Recorder


In the main menu, select the option of " Hi-Q MP3 Recorder" to be able to access recorder interface.

Keys of functions:

- "  " : Start or pause record
- "  " : Stop current record and select save the current record.
- "  " : Play the recording content

Calculator

In the main menu, touch "Calculator" icon to be able to

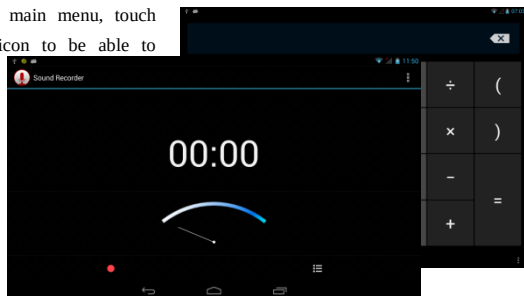

activate the function of Calculator. The calculators can be used like normal others. It's a good assistant for your work and study.

Clock

In the main menu, touch "Clock" icon to be able to activate the function. It's a good assistant for your everyday life.


1、Click "clock" appear as follows interface



2、"🕒":Click on it you can set alarm

It's will be automatically alarming when you set time.

You can setting Time , ring tone, repeat options for every alarm clock.

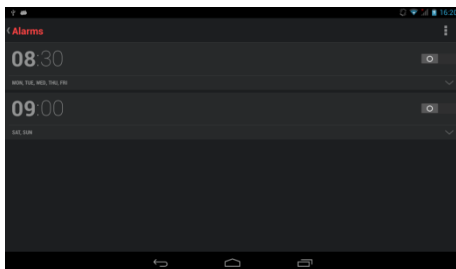


Factory data reset

If this machine is infected, or third party software installed to run this machine is unusual, but through the recovery factory Settings, remove the third party software,

and restore the state out by default.

Into this machine "Settings"- "privacy ", select " Factory data reset" item, confirmed, will remove all of the data

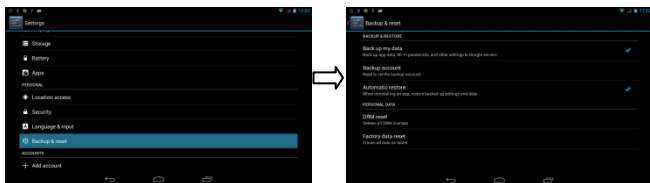

Upgrade Player Driver

The firmware is a built-in program, by which you can run various hardware functions. By upgrading the firmware, you can improve or enhance the performance and functions of the player. No upgrading the firmware will not affect the normal operation of the player itself.

The upgrading of firmware may lead to the unit unable to work properly due to error operation. Please read carefully the instructions for upgrading before upgrading.

【Note】

1. Please make sure that players have the upgrading at more than 60% of the battery power. Avoid because the battery power leads to upgrade failure to boot.
2. The upgrade process do not reset or shutdown operation, avoid accident interrupt upgrade can't boot.
3. Through our company provide formal or test versions of the firmware update, but without notice in the premise of the function of the products and the menu changes.

4. When the firmware upgrade stored in all the data in the player will be deleted. So in the firmware upgrade will be stored in the user must be before the important data within the player for backup.
5. The machine firmware does not apply to other types of products, resulting from the negative consequences; our company does not undertake any related responsibility.

Common troubleshooting

1. What is the APK file? It and Android PMP have what relation?

A: APK is the abbreviation of Android Package, that Android installation Package.

Through the APK files directly to Android system can be installed in execution PMP players.

2. How to get the APK application

A: You can download via PC-side installation, you can also “Android market” online to download and install.

3. Why WIFI connection will interrupt

A: If set "screen time", when the player overtime in standby screen saver, WIFI function will be closed to save electricity purpose; When sensei player, WIFI function will be in about 5 seconds to resume automatic connection.

4. Why some download APK program, not working properly

A: Download the APK software, mostly by the user to development, without the platform compatibility testing, and part of the hardware and software for Android system version has a special requirements, so there could be downloaded APK documents not compatible, not the normal operation of the phenomenon, the player itself quality problems

5. Why connected the charger not show charging state

A: When the battery is extremely low, need to use DC charger charging half an hour or more to show charging status

6. Why can't realize the gravity induction function

A: This machine support gravity feeling function, can be through the shaking to switch the screen machine did show, but some of the application does not support the gravity induction function, it can't realize the screen of switching function, this is the software support question, the functionality of the player.

7. Players can't boot

- 1) Check the battery no electricity
- 2) Connect the ac adapter after inspection again
- 3) If after charging still unable to boot, please contact our customer service

8. Can't Hear the voice in the headset

- 1) Please check the volume is set to 0
- 2) Please check whether the connection headphones

9. Player charging abnormalities

- 1) Please confirm that the use of the equipment complies with the charger of the player charger requirements
- 2) Such as connection USB charging, please do not connect to computers lead USB interface

10. Why some download video can't normally broadcast

This player can be compatible with the Internet video files of the play, but because the Internet provide video format, coding method, the resolution, code flow rate in the parameters are different, and may result in part of the video file cannot be

played or play anomaly, it is recommended to use a third party video conversion software, in the computer support convert player within the scope of the file format and then copied to the player to play.

Specification

Memory	Memory Extension	Micro SD
	Built-in flash Memory	8GB
General	Solution	MTK MT8312
	Display	7.0" 1024*600 (G+G)TN
	GPU	Mali 400@286MHZ
	Operation system	Android 4.2
	Processor	cortex-A7*2,dual-core,(3G,wi-fi,BT,FM,GPS)
	DDR	512MB DDR3
	Built-in WiFi	4 hours' surfing time
	function	light-sensor, Proximity sensor, MIC,OTG, RTC(Real-time clock), G-sensor, Bluetooth, Speaker
	Camera	0.3 M front/2.0M back
	Dimensions	Approx. 190.4*108.9*9*8.5mm
	WiFi- connection	802.11 b/g/n
	Operational Temperature	-5~40
Language	Multi-language	English, Chinese, Russia, French, German, Spanish, Indian etc.
Power supply	Battery	3000mAh
O/S	Supported OS	Windows, Mac and Linux