

MegaStar

MegaStar

PD-740



Tařınabilir DVD Oynatıcı

Kullanma Kılavuzu

İçindekiler

İçindekiler listesi	1
Önsöz	2
Uyarı ve İkazlar	3
Panel	5
Uzaktan Kumanda	6
Tuş Takımı	7
Şarj Etme ve Bağlantılar	9
Sistem Ayarları	10
Oynatma	13
Özellikler	15
Basit Çözümler	16

ÖNSÖZ

Ürünümüzü tercih ettiğiniz için teşekkür eder, Kullanıma başlamadan önce kılavuzu dikkatlice okuyunuz. Sonradan tekrar başvurmak için kılavuzu muhafaza ediniz. Cihazın çoğu özelliği kılavuz içerisinde anlatılmaktadır.

Cihaz hafif tasarımı ve şık görüntüsü ile kolay taşınabilir ve rahat kullanım için tasarlanmıştır.

Özellikler

- * 7" yüksek çözünürlüklü TFT LCD (Çözünürlük: 480*234)
- * 270° dönme fonksiyonu
- * USB girişi
- * SD/MMC/MS kart girişi
- * DVD,VCD,SVCD,DVCD,CD,CD-R/RW,MP3,MPEG4,JPEG uyumluluğu
- * Süper anti shock özelliği
- * Dahili çift stereo hoparlör
- * Koaksiye çıkış
- * AV çıkışı
- * Dahili şarj edilebilir batarya

Uyarı ve İkazlar

1 Yerleştirme:

- Ateşten, nemden, sıvı temasında ve nemden koruyunuz.
- Direkt güneş ışığına maruz bırakmayınız.
- Güçlü manyetik alanadan, ısı kaynaklarından ve tozdan uzak tutunuz.
- Güçlü manyetik alanadan, ısı kaynaklarından ve tozdan uzak tutunuz.
- Sabit olmayan ve cihazı düşmesine neden olabilecek yüzeylere bırakmayınız.
- Cihazı direkt olarak sıcak ortamdan soğuk ortama sokmayınız. Cihazın içerisinde su damlaları oluşmasına neden olabilir soğuk ortamdan geçiş sonrası cihazınızı normal sıcaklığa ulaşınca kadar kapalı tutunuz.

2- Kurulum

DVD'nin kılavuzda gösterildiği takıldığından emin olunuz. Cihazın düz bir zemine oturtulduğundan emin olunuz.

- Güçlü manyetik alanadan, ısı kaynaklarından ve tozdan uzak tutunuz.

3- Uyarılar

- Cihazın kapağı açıkken içerisine yabancı cisim düşürmeyiniz.
- Cihazın kapağını açarak üzerine spray ve benzeri parlayıcı spreyle sıklamayınız.
- Cihaz üzerine ağır cisimler koymayınız.
- Cihazın üzerini çalışırken örtmeyiniz yada cihaz üzerindendeki delikleri kapatmayınız.
- Cihazın içerisindeki dahili bataryayı ters takmak cihaza zarar verebilir.
- Bataryayı çevre kurallarına uygun olarak atıklar yasasına uygun olarak imha ediniz.
- En fazla kullanım sıcaklığı 35 derecedir.

4 Cihazı sökmeyiniz

Cihazı yetkili servis dahilinde sökümünü sağlayınız. Kendiniz cihaza müdahale etmeyiniz. içerisindeki parçalara zarar verebilirsiniz.

Sadece yetkili servislerin onarımına ve müdahalesine izin verilir.

Uyarı ve İkazlar

5 Temizleme

1. Temizlik yaparken cihazın fişten çıkarılmış olduğundan emin olunuz.
2. Kimyasal ve deterjanlarla temizliğini yapmayınız.
3. Nemli yumuşak bir bezle temizliği yapabilirsiniz.


Disk Tutuşu

- Diski direkt güneş ışığından, çizilebilecek yüzeylerden ve nemli ortamlardan
- Parmak izi oluşturabilecek şekilde Diskleri tutmayınız.
- CD yazma kalemli dışındaki kalemle Disklerin üzerine yazmayınız.
- Solvent, benzin ve benzeri çözücülerle disklerinizi temizlemeyiniz.
- Solvent, benzin ve benzeri çözücülerle disklerinizi temizlemeyiniz.




CD temizliği


PANEL GÖRÜNÜMÜ



- 1 USB PORTU
2 SD/MMC/MS KART YUVASI

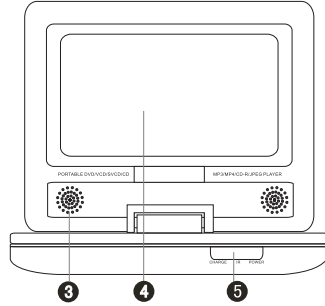


- 3 Hoparlör
4 LCD
5 Şarj göstere LEDi

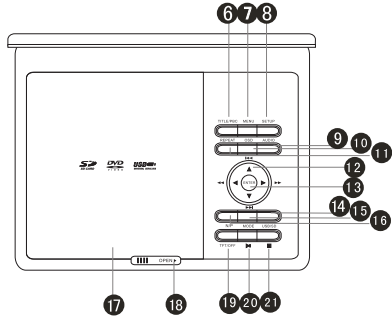

- 6 TITLE/PBC
7 MENÜ
8 Ayarlar
9 Ses
10 OSD
11 Tekrar
12 Yönlendirme Tuşları
Hızlı İleri (▶)
Hızlı Geri (◀)
Sonraki (▼)
Önceki (▲)
13 ENTER
14 USB / SD
15 MOD
16 N/P
17 DISK kapağı
18 OPEN
19 Ekran Açık Kapalı
20 Oynat/Duraklat
21 Durdur

- 22 Ses Ayar
23 AV Çıkışı
24 Kulaklık Çıkışı
25 Koaksiyel çıkış
26 Açma Kapatma
27 DC Şarj girişi

Uzaktan Kumanda

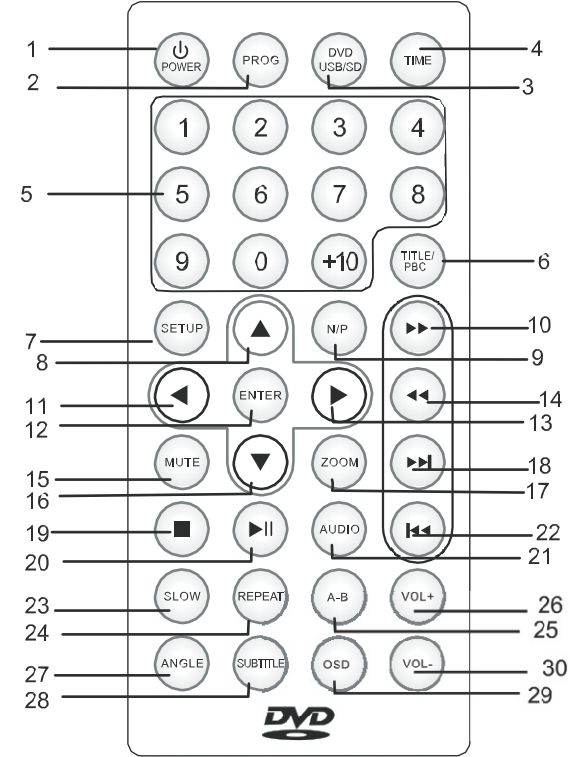

1. Açma/Kapatma
2. Program
3. DVD/USB/SD
4. Zaman
5. Numara Tuşları
6. Title/PBC
7. Ayarlar
8. Yön Tuşu
9. N/P
10. Hızlı İleri
11. Yön Tuşu
12. Enter
13. Yön Tuşu
14. Hızlı Geri
15. Sessiz
16. Yön Tuşu
17. Zoom
18. Sonraki
19. Durdur
20. Duraklat/Oynat
21. Ses
22. Önceki
23. Yavaş
24. Tekrar
25. A-B arası Tekrar
26. Ses Artır
27. Açı ayarla
28. Alt Yazı
29. OSD
30. Ses Azalt

Tuş Fonksiyonları

Not: Bazı fonksiyonlar sadece kumandadan yada cihaz üzerinden kontrol edilmektedir.



Cihazı açar veya kapatır.



Program tuşuna bastıktan sonra hangi başlık/bölüme geçmek istediğinizi seçiniz. Seçiminizden sonra tekrar Program tuşuna basarak normal izleme moduna dönebilirsiniz.



DVD ve USB/SD dosya seçimi arasında geçi yaparsınız. Her basışta bir diğer moda geçiş yapılacaktır.



Time tuşuna bastıktan sonra video içerisinde gitmek istediğiniz süreyi girerek o zamana gidebilirsiniz.



Parça numarasını veya süreyi numeratik tuşları kullanarak girebilirsiniz.



Bu tuşa basarak DVD ana menüsüne dönebilirsiniz. PBC menüsünü görüntüleyebilirsiniz. Başlıklar veya parçalar menüsünü görüntüleyebilirsiniz.



Ayarlar menüsüne girebilir/çıkabilirsiniz.



Yön tuşları



TV sistemini PAL, NTSC arasında değiştirir.



Hızlı ileri sarma modunu 2x,4x,8x,16x,32x hızlarında ayarlar



Seçilen bölümde onay tuşu olarak kullanılır.



Hızlı geri sarma modunu 2x,4x,8x,16x,32x hızlarında ayarlar



Sessiz modu veya sessiz moddan çıkış

Tuş Fonksiyonları



Zoom tuşuna basarak video içerisinde büyütme yapabilirsiniz. 2x, 3x, 4x, büyütme yapabilirsiniz. büyüyen ekranda hareket etmek için yön tuşlarını kullanabilirsiniz.



Bir sonraki bölüme/parçaya geçişi sağlar.



Bir kere basıldığında durdurur oynat tuşuna basıldığında ise kaldığı yerden devam eder. İki kere basıldığında ise kalınan noktayı resetleyerek bir daha ki sefere baştan başlatılmasını sağlar.



Duraklatmaya yada oynatma yapar. Hızlı ileri geri sarma işlemlerinde normal hıza döndürme işlemlerini yapabilirsiniz.



DVD tarafından desteklenen dil seçeneği var ise bu seçenekleri görüntüleyebilirsiniz.



Bir sonraki Bölüme / Parçaya geçişi sağlar.



Bir önceki Bölüme / Parçaya geçişi sağlar.



1/2, 1/4, 1/8, 1/16 hızlarında yavaş oynatmayı sağlar



Tekrarlama modunu değiştirir. (PBC seçeneği aktifken bu tuş geçersizdir.)



İlk basıldığında A noktasını işaretler ikinci basıldığında ise B noktasını işaretler ve bu aralığı sürekli olarak tekrarlar, üçüncü kez basıldığında ise normal oynatma moduna geçecektir.



Ses seviyesini ayarlayabilirsiniz.



DVD seçenekleri arasında var ise farklı açılardan filmi izlemenizi sağlar.



Alt yazı desteğinin açılı kapatılması arasında seçim yapabilirsiniz. (Not: Bu seçenek sadece diskin desteklemesi durumunda geçerlidir.)



Disk hakkında bilgileri gizler veya gösterir.



Oynatılan DVD'nin ana menüsüne geçişi sağlar, disk oynatılırken PCB menüsüne geçişi sağlar, (DVD, VCD 1.1, CD-DA ve Mp3 diskleri PBC desteklemez.)

Şarj Etme

Şarj Etme


Cihazınız üzerinde dahili olarak Li-polimer batarya bulunmaktadır. Yüksek verimlilik ve hafif oluşu ile yüksek bir teknolojidir. Yeniden şarj edilebilir özelliğe sahiptir.

DC şarj cihazını DC yuvasına takarak şarj olmasını sağlayabilirsiniz.

Not: Şarjın tam dolu olduğunun göstergesi olarak kırmızı yanan şarj gösterge ledinin yeşil renge dönmesidir.

Şarj edilebilir bataryanın kullanımı ve bakımı

1. 0 ile 45 derece arasında kullanılmalıdır.
2. Cihaz şarj edilmeyorken yada kullılmıyorken cihazınızı şarjda tutmayınız.
3. Kullanım sırasında cihazınızın ısınması normaldir. Cihazınızın uzun süreli kullanımlardan aşırı ısınmasına izin vermeyiniz.
4. Cihazınızın diğer ortam koşullarına bağlı olarak ısınmasını engellemek için ısıtıcılardan uzak tutunuz.
5. Nemli ortamlarda kullanmayınız.

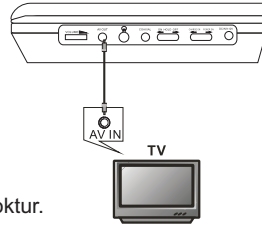

TV Bağlantısı

1. AV kablusunun bir ucunu TV ye diğer ucunu ise PDVD'nizin üzerindeki AV- OUT çıkışına bağlayınız.
2. Cihazınızın üzerinde kuaksiyel ses aktarma portu yoktur.

Sistem Ayarları

Menü Kullanımı

1. SETUP tuşuna basarak cihazın ayarlarına geçiş yapabilirsiniz.
2. Sağ/sol tuşlarına basarak seçim yapabilir, alt menülere geçiş yapabilirsiniz.
3. Aşağı/yukarı hareket ederek alt menülerde hareket edebilir, seçiminizi enter tuşuna basarak onaylayabilirsiniz.
4. Setup tuşuna tekrar basarak ayarlar menüsünden çıkış yapabilirsiniz.

Menü Kullanımı

Genel ayarlar sayfasında 7 başlık bulunmaktadır. TV gösterimi, aç, OSD dili, başlıklar, Ekran koruyucu, en son hafıza, Mp3 şarkı sözleri.

1.1 TV Ekranı

4:3 Panscan

Cihazınızı standart bir tüplü Tv'ye taktığınızda Tv'nin standart resim oranlarında gösterilecek orandır.

4:3 zarf

Cihazınızı standart tüplü Tv'ye taktığınızda alttan ve üstten siyah çizgilerle sınırlandırılmış bir görünüm olacaktır.

16:9 Geniş Ekran

Cihazınızı geniş ekran bir Tv'ye bağladığınızda tam ekran görünüm sağlayacaktır. Geniş ekran TV de ise 4:3 modunda ekranda sağdan ve soldan boşluklar oluşacaktır.

1.2 Aç

Eğer DVD seçenekleri arasında farklı açılardan kaydedilmiş görüntüleme biçimleri var ise bu seçenekle diğer açığa geçebilir yada kapatabilirsiniz.

1.3 OSD Dili

Ekranda görünen menü dilini değiştirebilirsiniz.

1.4 Başlıklar

Başlıkların ekranda görünmesi yada görünmemesi seçeneğini aktif edebilirsiniz. Kumanda üzerinde "Subtitle" tuşuna basarak da başlık görüntü seçeneğini aktif yada pasif yapabilirsiniz.

1.5 Ekran koruyucu

Ekranda hiç bir işlem yapmadan beklenmesi yada belirli bir süre duraklatılması sonrasında ekranda belirecek olan resimin görünmesini aktif yada pasif yapabilirsiniz.

SİSTEM AYARLARI

1.6 En Son Hafıza

Diskin çalınması sırasında cihaz kapatılırsa en son kalınan noktayı hafızaya alarak bir dahaki seferde kalınan yerden başlayarak çalmaya devam eder. Bu fonksiyonu açık yada kapalı konuma getirebilirsiniz.

1.7 Mp3 şarkı sözleri

Mp3 dinlerken şarkı sözlerinin gösterimini aktif yada pasif yapabilirsiniz.

2 Ses Ayarları

2.1 Hoparlör Ayarları

2.1.1 İndirgeme

5.1 sesleri sağ ve sol hoparlörlere ayarırarak sesi iki kanaldan dinlemenizi sağlar. Stereo: Sesi sağlıklı sollu olarak dağıtarak 2 kanaldan dinlenmesini sağlar.

2.2 SPDIF ayarları

2.2.1 SPDIF Çıkışı

Kapalı: SPDIF ses çıkışı yoktur.

RAW: Normal de DTS ve Dolby Digital 5.1 ses sinyalleri için geçerlidir.

PCM: Normal olarak ses Cd'leri için geçerlidir.

3 Dolby Digital ayarları

3.1 Tekli Çiftli

Stereo: Anlık olarak sağlıklı sollu olarak sesin dağıtımındır.

L-Tekli: Ses sadece soldan alınmasını sağlar

R-tekli: ses sadece sağdan alınmasını sağlar

4 Video Ayarlar Sayfası

LCD nin resim kalitesini ayarlamak için kullanılır.

4.1 Kalite

İsteğinize göre resmin kalitesini ayarlamak için kullanılır.

4.1.1 Keskinlik

Yüksek orta ve düşük olarak ayarlanabilir.

4.1.2 Parlaklık, Kontrast, Gamma, Doygunluk ve Renk

sağ ve sol yön tuşlarını kullanarak isteğinizi ayarlayabilir ve onaylamak için Enter tuşunu kullanınız.

SİSTEM AYARLARI

5 Tercihler

Cihazın içerisinde disk yoksa yada disk kapağı açık ise bu fonksiyon(disk motoru çalışmıyor ise) aktiftir.

5.1 TV tipi

Cihazınız üzerinde iki farklı video çıkışı vardır. PAL ve NTSC ülkenizde NTSC Kullanılmaktadır.

Not: Eğer farklı bir video tipi seçecek olursanız görüntünüz bozuk olacaktır.

PBC ayarları: VCD 2.0 ve SVCD desteklemesi durumunda menüye dönüşleriniz PBC üzerinden olacaktır.

5.2 Ses, Altyazı ve Disk menüsü

Diskin içerisinde desteklemesi durumunda dil, altyazı ve disk menüsü bulunmaktadır AUDIO, tuşu ile seslendirme seçeneğini, SUBTITLE, seçeneği ile altyazı açık kapalı veya altyazı dilini ayarlayabilirsiniz.

5.3 Ebeveyn Kontrolü

Cihazınız ile farklı video çeşitleriyle izlenmesini istemediğiniz videoları şifreleyebilirsiniz. Cihazınızın varsayılan olarak şifresi : **1389** dur.

5.4 Şifre Ayarları Ekranı

5.4.1 Şifre Modu

Cihazınızın üzerinde şifrelemeyi aktif hale getirebilir yada kalıdırabilirsiniz.

Şifreyi ilk defa ayarlamak için önceki şifre olan 1389 değeri girilmelidir. Yeni şifrenizi girdikten sonra ise onaylama yapabilirsiniz.


Şifrenin resetlenmesinden sonra varsayılan şifre aktif olacaktır. 1389 varsayılan şifre her zaman aktiftir. ve resetlemek için kullanabilirsiniz.

Oynatma

Tüm bağlantılarınızı düzgünce yaptıktan sonra cihazınızı açabilirsiniz.

Diski takınız

- A. Cihazın üzerindeki açma tuşunu açık konumuna getiriniz.
- B. Disk yuvası üzerindeki açma tuşunu kullanarak disk kapağını açınız.
- C. Diski taktıktan sonra oynat tuşuyla, diski oynatmaya başlayabilirsiniz.

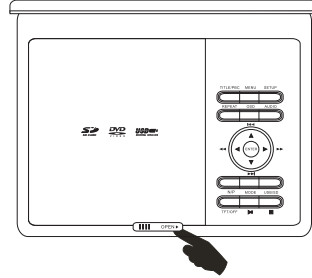

Mp3/MPEG diskleri Oynatma

1. Disk içerisindeki dosyaları aşağı yukarı hareket ederek dosyayı seçebilirsiniz.
2. dosyayı seçtikten sonra OK tuşuyla dosyanın seçimini yapabilirsiniz.
3. Ana menüye dönmek için durdurarak sol tuşuna basınız.

Kodak Resim

1. Disk sürücüsüne diski taktıktan sonra otomatik olarak tanıyacaktır.
2. oynat tuşu ile aynatm aya başlayabilir ve klasörler menüsünden sitediğiniz resimi seçerek görüntüleyebilirsiniz.
3. Ana menüye dönmek için durdurarak sol tuşuna basınız.

Oynatma

Zoom : Zoom tuşuna devamlı olarak basımlarda büyütme yapabilir yada orjinal boyutuna geçiş yapabilirsiniz. Büyüttüğünüz fotoğrafd içerisinde hareket edebilirsiniz.

USB disk ve sd/MMC/MMS kart oynatmak

Cihazın üzerindeki USB portuna USB diska taktıktan sonra DVD/USB tuşuna basarak DVD ve USB disk arasında geçiş yapabilirsiniz. Aynı şekilde cihaz üzerine SD/MMC/MS kart takıldığında yine DVD/USB tuşunu kullanabilirsiniz.

Özellikler

Uyumlu diskler	DVDNCD/CDIMP3/MPEG4
Signal system	PAL/NTSC
Panel boyutu	7 "
Frekans Cevabı	20HZ to 20KHZ
Video out	1 Vp-p75 Ohm
Ses Çıkışı	1.4 Vrms/10 kOhm
Dinamik Aralık	85dB
Lazer	Dalga Boyu650 nm/795nm
Güç Kaynağı	DC9-12V
Güç Tüketimi	10W
Kullanım Sıcaklığı	5-40°C
Batarya	Li Polimer

Basit Çözümler

Cihazınızı yetkile servise götürmeden önce lütfen aşağıdaki basit çözümleri uygulayınız.

Arıza	Çözümü
Ses yok yada Bozuk ses	Kabloların düzgün şekilde tam olarak takıldığından emin olunuz.
Video izleyemiyorum	
Ekranda İkon çıkıyor	Bu problemin farklı nedenleri olabilir. 1- Disk desteklenmiyor olabilir. 2- Disk içerisindeki yazılım desteklenmiyor olabilir. 3- Özellik geçici olarak kullanılamıyor olabilir.
Resimler Bozuk çıkıyor	Disk bozulmuş olabilir. Başka bir disk deneyiniz. Hızlı ileri geçişlerde resimler görüntülenmiyor olabilir.
İleri geri tarama yapmıyor	Videolar bölümlere ayrılmış olabilir, hızlı geçişlere izin vermeyen yasal uyarı sayfaları olabilir. Başka bir video yada disk üzerinde deneyiniz.
USB Disk ve hafıza kartı takıldığında cihaz kilitleniyor.	USB disk yada SD kartın formatlarını tanıyamadığından dolayı cihazınız kilitleniyor olabilir. Cihazınızın fişini sökerek kapattıktan sonra USB diski yada SD kartı çıkarınız. cihazınız normale dönecektir.

MegaStar

PD-740



Üretici Firma

Shenzhen Aavid Technology CO.,Ltd.
5th Building Tianxin Industrial Zone
Gushu Xixiang Bao'an District,
Shenzhen,P.R.China (10:33)
Tel: 86-755-89470548
Fax: 86-755-89470577

İthalatçı Firma

Koza Elektronik Dış Ticaret
E-5 Karayolu Caddesi Beşyol mah.
No:27/A 34295 Küçükçekmece/İstanbul
Fax:(212) 426 98 99

MegaStar

CONTENTS

Table of Contents.....	1
Foreword.....	2
Caution and Warning.....	3
Panel.....	5
Remote Control.....	6
Key function.....	7
Charging and Connection.....	9
System Setup.....	10
Playback.....	13
Specification.....	15
Troubleshooting.....	16

FOREWORD

Thanks for your purchase of our product. Please read through this manual before making connections and operation. And, please retain this manual for future reference.

This unit that applies the latest state of art electronics is designed with easy installation, light weight and small size. It is very convenient to take it with you anywhere and use it in the hotel, office, home, etc.

Features

- Built-in Dolby AC-3, PCM digital audio decoder
- wide screen LCD
- Compatible with DVD, VCD, MPEG4, CD, Mp3, CD-R, DVD-RW, JPEG, Kodak Picture CD
- Support playback control: play, pause, fast forward playback, fast rewind playback, ect
- Two optional aspect ratios 16:9 and 4:3
- Working voltage: DC9-12V
- Support USB port and SD/MMC/MS card
- Having the earphone plug

CAUTION AND WARNING

1 Placement:

- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.
- Do not expose this appliance to direct sunlight.
- Keep this appliance away from strong magnets, heat sources and excessive dust.
- Do not place this appliance on an unstable surface.
- If the unit is brought directly from a cold place to a warm one, moisture may condense inside the unit which will cause malfunction. Should this occur, leave the unit turned on for a few hours until the moisture evaporates.

2 Installation:

Ensure that the portable DVD player is installed according to the instructions and illustrations provided in this manual.

3 Caution:

- Do not drop any objects into the unit through the openings.
- Do not spill or spray liquid of any kind on or in the unit(this may result in a fire or electric shock).
- Do not place anything heavy on the unit.
- To ensure proper ventilation and proper operation, never cover or block the slots and opening with a cloth or other materials.
- Keep the unit away from an open flame such as fire, candle, etc.
- It is hazardous to replace the battery incorrectly.
- Install the batteries correctly.
- Please dispose the batteries according to the local rule and law.
- The maximum working temperature is 95 degrees Fahrenheit or 35 degrees Celsius.

4 No Disassembling:

Never attempt to disassemble the unit. There probably would be a risk of electric shock and/or harm by exposure to laser radiation.
Please consult qualified service professionals for maintenance.

CAUTION AND WARNING

5 Cleaning unit:

- 1.) When cleaning, please make sure the unit is unplugged from the power source.
- 2.) No chemicals or detergent is recommended for cleaning.
- 3.) Use a soft cloth lightly dampened with water to clean the exterior of the unit only.


6 Disc handling

- Do not leave the discs near heat sources, in direct sunlight, or in high humidity.
- Store discs in their cases when they are not being used.
- Stacking discs or standing them at an angle without putting them in the case can cause the disc to warp.
- Do not touch the disc surface when handling a disc; hold it by the edges.
- Fingerprints, dust, dirt or scratches on the disc can distort the picture or reduce sound quality. Always handle carefully and make sure discs are clean before use.
- Do not stick paper or tape onto the disc.
- Do not write on the disc with a marker, etc.
- Clean discs using a soft cloth, lightly wiping from the center outwards.
- Do not use solvents such as benzine, commercially available cleaners not intended for CDs or anti-static spray intended for vinyl LPs as these may damage your disc.




Cleaning and handling the disc


PANEL




- 1 USB PORT
- 2 SD/MMC/MS CARD PORT

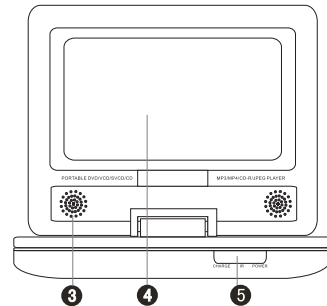

- 3 SPEAKER
- 4 LCD
- 5 CHARGE IR POWER

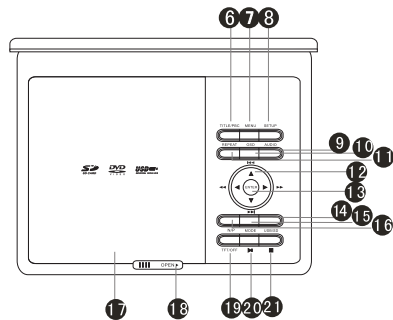


- 6 TITLE/PBC
- 7 MENU
- 8 SETUP
- 9 AUDIO
- 10 OSD
- 11 REPEAT
- 12 DIRECTION KEYS
- 13 ENTER
- 14 USB/SD
- 15 MODE
- 16 N/P
- 17 DISC DOOR
- 18 OPEN
- 19 TFT/OFF
- 20 PLAY/PAUSE
- 21 STOP

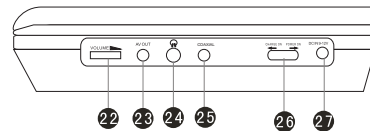

- 22 VOLUME ADJUSTER
- 23 AV OUT JACK
- 24 EARPHONE JACK
- 25 COAXIAL
- 26 CHARGE ON/POWER ON
- 27 DC JACK IN

REMOTE CONTROL

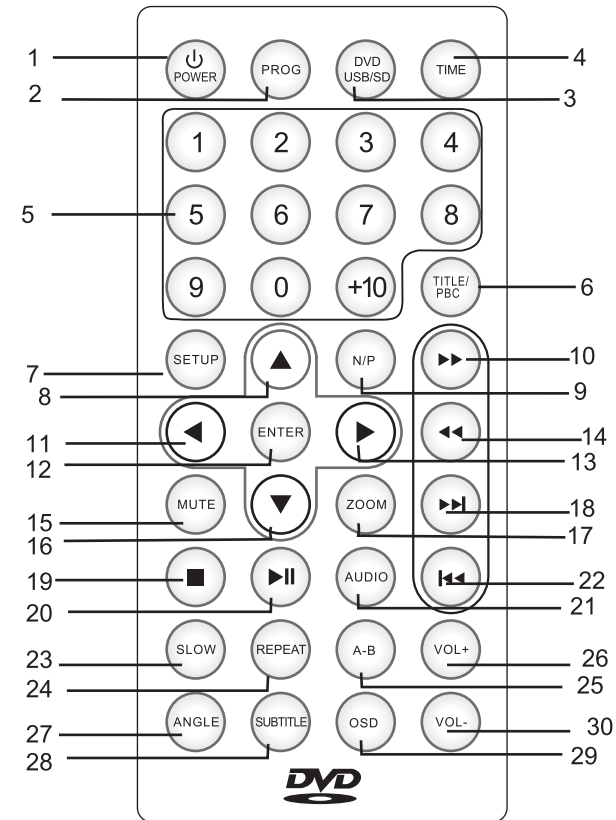

- 1. POWER
- 2. PROGRAM
- 3. DVD/USB/SD
- 4. TIME
- 5. DIGIT KEYS
- 6. TITLE/PBC
- 7. SETUP
- 8. 16.11.13
- 9. UP/DOWN/LEFT/RIGHT DIRECTION KEYS
- 10. N/P
- 11. FAST FORWARD
- 12. ENTER
- 13. FAST REWIND
- 14. MUTE
- 15. ZOOM
- 16. NEXT
- 17. STOP
- 18. PLAY/PAUSE
- 19. AUDIO
- 20. PREVIOUS
- 21. SLOW
- 22. REPEAT
- 23. A-B REPEAT
- 24. VOLUME+
- 25. ANGLE
- 26. SUBTITLE
- 27. OSD
- 28. VOLUME-

KEY FUNCTION

Note: Some of the following buttons are on the remote control only, and some are on the unit only. And the others are on both of the unit and the remote control.



Switch on/off the unit.



Use the number keys to choose the title and chapter to input the program number what you want. After program, use cursor keys move to “Start” position, the unit will play sequent as you program. Press “PROGRAM” again to cancel the program function and display normally.



When press this button, it will show a dialogue with DVD and MEDIA optional. Choose DVD when you want to play any disc, And choose MEDIA when you want to read USB and SD/MMC/MS card. (The button USB/SD beside the CD door has same function as this button)



After press “TIME”, press digits to input the time, and the video will play as per time sequence which transfers to set.



The digit keys can be used to input numbers or make selection of a track or a chapter.



Press to return to the title menu.

Press to return to the superior menu when playing DVD. When playing disc encoded with PBC function, press to display the PBC menu. Press it again to disable the PBC function. (Note: DVD, VCD1.1, CD-DA and MP3 disc have no PBC function.)



Press to enter/exit the setup menu.



The direction keys can be used to move the highlight in the menu.



This unit compatible with both PAL and NTSC, press this button to transfer the TV system for different country.



Fast forward playback. The available speed is 2X, 4X, 8X, 16X, 32X and normal speed.



Press to enter an item in the menu or to confirm and execute a selection.



Fast reverse playback. The available speed is 2X, 4X, 8X, 16X, 32X and normal speed (forward).



Press this button to switch off the sound temporarily. Press it again to switch it on.

KEY FUNCTION



Press this button to zoom in the scene. The available zoom ratios are: 2X, 3X and 4X. In zoomed-in mode, the direction keys can be used to move the zooming center. (Note: Applies to DVD, VCD, MPEG4, etc.)



Skip to the next chapter/track.



Press once to pause a playback, then press [▶] to continue the playback; Press it twice to stop a playback and the disc will be reset to the starting point.



Press to start a playback or resume the normal playback from fast forward, fast reverse, slow-motion, frame-by-frame playback, etc. Press to temporarily pause a playback; press it again or [▶] to resume the playback.



Press repeatedly to select the available audio languages provided by the disc (for DVD). Press repeatedly to switch the available audio channels provided by the disc (for VCD).



Skip to the previous chapter/track.



Press “slow” to move forward slowly at the rate 1/2, 1/4, 1/8, 1/16



Press to switch the repeat modes. (Note: This function is invalid when the PBC function is activated.)



You can repeat a specific section of a disc with this button. Press this button to mark down the starting point (A) and press it again to mark down the ending point (B). Then, the unit will playback this section over and over again. Press it for the third time to cancel A-B repeat and resume the normal playback. (Note: Points A and B must be in the same title/ track.)



Press [VOLUME+] to turn up the volume; press [VOLUME-] to turn down the volume.



Press to switch the viewing angles. (Note: This function only works with those discs encoded with multiple camera angles.)



Press repeatedly to switch/show the subtitle(s) or turn off the subtitle function. (Note: This function only works with the discs encoded with subtitles.)



Press repeatedly to switch or hide the relative information of the playing disc.



Press to return to the superior menu when playing DVD. When playing disc encoded with PBC function, press to display the PBC menu. Press it again to disable the PBC function. (Note: DVD, VCD1.1, CD-DA and MP3 disc have no PBC function.)

CHARGING AND CONNECTION

CHARGING THE UNIT

This player is powered by a Lithium-Polymer battery. It features high ratio of energy to weight. And it has no memory effect and thus it can be recharged at any time regardless that it is fully or partially discharged. It takes about 6 hours to fully charge the battery. And the fully charged battery can be used for up to two hours.

Connect the attached AC/DC adapter to the DC INPUT jack on the unit, then plug the adapter into a 240V AC outlet.

Note: The charging-indicator LED changing from red to green indicates that the battery has been fully charged.


Usage and Maintenance of the Rechargeable Battery

1. The working temperature of the rechargeable battery ranges from 0°C to 45°C.
2. Always unplug the unit when it is not being used, unless it is being charged.
3. Heat is inevitably produced during the playback, which is normal. But do not use it for a long time.
4. Avoid colliding it with other objects and keep away from humidity and overheat.

CONNECTION TO TV

1. Connect one end of the audio cable to the AV OUT jack, and the other end to the TV, and users can watch the videos of the machine on TV.

2. This machine has a coaxial output jack, users can connect a coaxial output line to the amplifier, so they can hear the audio files through the external power amplifier.

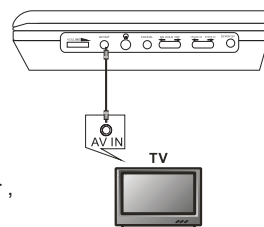

SYSTEM SETUP

Menu Operation

1. Press [SETUP] on the remote control or on the unit to show the setup menu.
2. Press [LEFT]/[RIGHT] to select an item. The submenu of the selected item will be shown below instantly.
3. Press [UP]/[DOWN] to select an item in the submenu, then press [OK]/[ENTER]/[RIGHT] to enter. Use [UP]/[DOWN] to select an option, then press [OK]/[ENTER] to confirm it or press [LEFT] to cancel.
4. Then you can press [UP]/[DOWN] to continue to set other items in the submenu.
5. Press [LEFT] to go back to the superior menu of the current one.
6. Press [SETUP] again or highlight 'X' and press [ENTER]/[OK] to exit the setup menu.

1 GENERAL SETUP PAGE

There are seven items in the GENERAL SETUP PAGE. They are TV DISPLAY, ANGLE MARK, OSD LANGUAGE, CAPTIONS, SCREEN SAVERS, LAST MEMORY and Mp3 LYRICS

1.1 TV DISPLAY

4:3 PANSCAN

If the unit is connected to a conventional TV set, the wide-screen image will be displayed on the screen in its native aspect ratio with some part on the left and right cut off.

4:3 LETTERBOX

If the unit is connected to a conventional TV set, the wide-screen image will be displayed in its native aspect ratio with black borders on the top and the bottom side.

16:9 WIDE: Select this option if the unit is connected to a wide-screen TV set.

The wide-screen image will be displayed in full screen in its native aspect ratio while the 4:3 image will be stretched out horizontally to fit in the screen.

1.2 ANGLE MARK

Set this item to **ON**. When a disc encoded with multiple camera angles is playing, the angle mark will display on the screen. Then you can view the video of different camera angles by pressing [ANGLE] on the remote control.

Set this item to **OFF** to disable this function.

NOTE: This function only works with those discs encoded with multiple camera angles.

1.3 OSD (On-Screen Display) LANGUAGE

Set the on-screen display language in this item.

1.4 CAPTIONS

Set this item to **ON**. When a disc encoded with closed captions, the closed captions will be shown on the screen. Set this item to **OFF** to hide it.

You can also press [SUBTITLE] on the remote control to show or hide the closed captions.

NOTE: This function only works with those discs encoded with closed captions.

1.5 SCREEN SAVER

ON: If the image remains motionless on the screen, for example the disc is paused, stopped etc, for several minutes, a screen saver will appear on the screen. You can press any key or button to wake it up.

OFF: Disable the screen saver function.

SYSTEM SETUP

1.6 LAST MEMORY

ON: Each time you turn off the unit or stop the disc, it will memorize the last play time. Next time you turn on the unit and play the same disc, the unit will play from that memorized point.

OFF: Disable the last memory function.

1.7MP3 LYRICS

ON: set this item to ON, it can display the lyrics **OFF:** disable the MP3 lyrics function

2 AUDIO SETUP PAGE

2.1 SPEAKER SETUP

2.1.1 DOWNMIX

LT/RT: The 5.1-channel audio is mixed into left channel and right channel and is output via the FL and FR speaker respectively.

STEREO: The 5.1-channel audio is mixed into stereo signal and is output via the FL and FR speaker.

NOTE: This function only applies to the Dolby AC -3 encoded 5.1-channel discs.

2.3. SPDIF SETUP

2.3.1 SPDIF OUTPUT

OFF: There will be no digital audio signal output.

RAW: The digital audio signal output will be in its raw format. Normally, this mode is used for DTS & Dolby Digital 5.1 signals.

PCM: The digital audio signal output will be in PCM format. Normally, this mode is used for audio CD signals.

3 DOLBY DIGITAL SETUP

3.1 DUAL MONO

STEREO: The player outputs the left-channel audio and right-channel audio via the FL and FR speaker respectively.

L-MONO: The player outputs the left-channel audio only via both the FL and FR speaker.

R-MONO: The player outputs the right-channel audio only via both the FL and FR speaker.

MIX-MONO: The player outputs the average signal of the left-channel and right-channel audio via the FL speaker and the FR speaker

NOTE: This function only applies to the Dolby AC -3 encoded 2-channel discs.

3.2 DYNAMIC

When you watch films with large dynamic scope in low volume, for example at night, you can adjust the dynamic value up to avoid losing sound details resulted from the low volume.

4.VIDEO SETUP PAGE

This menu is used to setup the picture quality of LCD of the unit.

4.1 QUALITY

Adjust these items by your preference.

4.1.1 SHARPNESS

There are three options (**HIGH**, **MEDIUM** and **LOW**) for you to choose in this item.

4.1.2 BRIGHTNESS, CONTRAST , GAMMA, HUE and SATURATION, LUMA DELAY

Enter these items respectively, use direction key [LEFT]/[RIGHT] to adjust the value, then press [ENTER] to confirm it.

SYSTEM SETUP

5 PREFERENCE SETUP

If there's no disc in the disc tray, the disc tray is open or the disc in the disc tray is stopped, this item is available.

5.1 TV TYPE

This product supports both NTSC (National Television System Committee) and PAL (Phase Alternating Line) television broadcasting standards.

PAL : If the connected TV is PAL system which is used in China, Hongkong and Europe, etc, select this mode. It will change the video signal of a NTSC disc and output in PAL format.

NTSC: If the connected TV is NTSC system which is used in Taiwan, America and Canada, etc, select this mode. It will change the video signal of a PAL disc and output in NTSC format.

NOTE: If a wrong selection is made, the viewing image will be very poor. In such case, you are supposed to change the option in this item to fix the error.

ON: Activate the PBC function. When playing disc encoded with PBC function such as VCD 2.0, SVCD etc, press [MENU] to return to the PBC menu.

OFF: Disable the PBC function.

NOTE: This function only works with those discs encoded with PBC function such as VCD 2.0, SVCD, etc.

DVD, VCD1.1, CD-DA and MP3 disc have no PBC menu.

5.2 AUDIO, SUBTITLE and DISC MENU

Select a preferred audio language, subtitle language and disc menu language in these items.

You can also change the audio language by pressing [AUDIO] and the subtitle language by pressing [SUBTITLE] on the remote control.

NOTE: If the selected languages in these items are not available for the currently playing disc, the disc's default settings work.

5.3 PARENTAL

This item allows the user to set a maximum rating of the movies that can be viewed. Movies rated higher than the level set for the parental lock can not be viewed without inputting the correct keywords. What's more, to key in the correct password is needed to reset the level. The default password is 1389.

NOTE: This function only works with those discs with parental function.

5.4PASSWORD SETUP PAGE

5.4.1PASSWORD MODE

You can switch on/off the password function in this item.

Note: You must key in the correct password and press [ENTER] before you change the option in this item. The default password is 1389.

5.4.2PASSWORD

You can reset the password in this item.

NOTE: The default password (1389) is always active even if the password has been reset.

5.5 DEFAULT


Restore the default settings except the settings in the **PASSWORD** setup page and the **PARENTAL** item.

PLAYBACK

After all the connections were made correctly. Switch on the unit. Now, it is ready to service!

Loading and Playing a Disc

- A. After connecting power to the unit, set the power switch to the ON position.
- B. Push [OPEN] to open the disc tray. Place a disc in it with the label side facing up.
- C. Close the disc tray. The unit will load the disc and start playing.

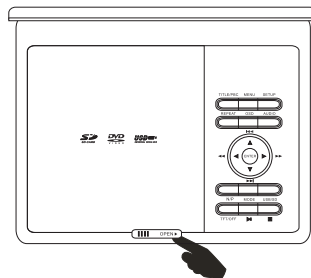

MP3/MPEG 4 Disc Playback

After the unit loads a MP3/MPEG4 disc, a menu showing the contents of the disc will display on the screen.

1. Press the direction key [UP]/[DOWN] to select a file or a folder.
 - 2.1 Press [OK] to enter the selected folder. The file(s) or/and folder(s) in it will be listed instantly.
 - 2.2 Press [OK] to begin to play the selected file.
3. When the disc is stopped, press [LEFT] to return to the superior menu.

Kodak Picture CD Playback

- Place a Kodak picture CD in the disc tray, then the unit will load the disc automatically.
- Press [■] to display the menu showing the contents of the disc. In the menu, use the direction keys [UP]/[DOWN] to select a picture, then press [ENTER]/[▶] to start the playback from the selected picture.

[GOTO]: Press this button, then use the digit keys to select a picture. Then the playback from the selected picture begins.

[▶||]: Press to pause the playback; press it again or [▶] to resume the playback.

[▶]: Press it to begin a playback or resume a playback.

[REPEAT]: Press repeatedly to switch the repeat modes (Single→Repeat One→Repeat Folder→Folder→(cancel repeat)).

[◀◀]/[▶▶]: Press to skip to the previous/ next picture during playback.

[LEFT]/[RIGHT](on the remote control): Press to rotate the picture counterclockwise/ clockwise during the playback.

PLAYBACK

[ZOOM]: During the playback, press [ZOOM] repeatedly to zoom in/out the picture or return to the original size. When the picture is zoomed in, the direction keys can be used to move the picture.

U DRIVE & SD/MMC/MS CARD PLAYBACK

Insert a U drive or a card reader into the USB port. Press [DVD/USB /SD] to select USB mode to play the readable files in it.

Insert a SD/MMC/MS card into the SD/MMC/MS Card port. Press [DVD/USB /SD] to select MCR mode to play the readable files in it.

SPECIFICATION

Compatible DISC	DVD/VCD/CD/MP3/MPEG4
Signal system	PAL/NTSC
Panel size	7 inches /9 inches
Frequency response	20HZ to 20KHZ
Video output	1 Vp-p75 Ohm unbalanced
Audio output	1.4 Vrms/10 kOhm
Dynamic range	Better than 85dB
Laser	Semiconductor laser, Waver length: 650 nm/795nm
Power source	DC 9-12V
Power consumption	10W
Operation temperature	5~40 °C
Battery Type	Li Polymer

TROUBLESHOOTING

Before resorting to maintenance service, please kindly check by yourself with the following chart.

Symptom	Solution
No sound or distorted sound	Make sure your DVD is connected properly and all cable are securely inserted into the appropriate jack.
Can not advance through a movie	You can not advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.
The icon  appears on screen	The feature or action cannot be completed at this time because: 1The disc software restrict it 2The disc software do not support the feature 3 The feature is not available at the moment
Picture is distorted	The disc might be damaged. Try another disc. It is normal for some distortion to appear during forward or reverse scan.
No forward or reverse scan	Some disc have section that prohibit rapid scanning or title and chapter skip. If you try to skip through the warning information and credits at beginning of a movie is often programmed to prohibit skipping through it.
The player breaks down when a U drive or memory card is inserted into the player.	The connected U drive or the memory card is probably not of an original version one. The player cannot play any U drive and memory card of non-original version. In case the player breaks down, turn it off and unplug it from the power supply. Then, connect it to the power supply and switch it on again. The player will resume the normal status.