

GoldMaster®



S-5140 USB

5.1 CH Ses Sistemi

www.goldmaster.it

ÖNEMLİ GÜVENLİK BİLGİLERİ



ELEKTRİK ŞOKU TEHLİKE UYARISI


- Lütfen talimatları okuyunuz ve saklayınız.
 - Uyarılara dikkat ediniz.
 - Tüm talimatları dikkate alınız.
 - Cihazı çalıştırmadan önce cihaz üzerinde oluşan tozlanmaları siliniz.
 - Üretici firmanın talimatları doğrultusunda bağlantılarını yapınız.
 - Hoparlörleri zarar gelmeyecek ve düşmeyecekleri uygun bir yere koyunuz.
 - Hoparlörleri suya yakın yerlerde kullanmayınız ve nemli ortamlarda bırakmayınız.
 - Hoparlör deliklerine herhangi bir cisim sokmayınız,
 - Elektrik çarpması riski doğabilir, ve uygun havalandırma şartları için hoparlörlerin çevresinde yeterli boş alan sağlayınız.
 - Kalorifer soba, gibi cihazların yakınında asla hoparlör sisteminizi kurmayınız.
 - Hoparlörleri sadece bilgisayarın veys ses aygıtının ses hattı çıkışından çalıştırınız.
 - Güç kablusunun ayak altında olmamasına dikkat ediniz
 - Sadece imalatçı tarafından verilen aksesuarları kullanınız.
 - Daha fazla koruma için hoparlörleri elektrik prizinden çıkarmadan önce bilgisayarınızı kapatınız
 - Sistem uzun zaman kullanılmıyacaksa. Lütfen enerji kablusunu prizden çıkartınız.
 - Herhangi bir yolla sistemin zarar görmesi, güç kaynağı kablusu veya fişinin zarar görmesi, sıvı dökülmesi veya cisimlerin içeri düşmesi, nem tutması cihazın normal çalışmasını veya bozulmasına neden olabilir.
 - Tüm bakım onarımının nitelikli personel tarafından yapılması önerilir.
 - Yanan mum gibi yanıcı kaynakları sisteme yaklaştırmayınız.
 - Priz sistemi, ses sisteminin yakınında olmalı ve kolay erişilebilir olmalıdır.
- Ürün tasarımı ve özellikleri bildirim gerektirmeksizin değiştirilebilir. Bu özelliklere ürün ana özellikleri yazılım, yazılım sürücüler ve kullanım kılavuzu dahildir.

UYARI:

**ELEKTRİK ŞOKU RİSKİNİ AZAL TMAK İÇİN SİSTEMİ,
YAĞMURLU YADA NEMLİ ORTAMLARDA AÇMAYINIZ.**


Goldmaster S-5140 USB ses sistemini aldığınız için teşekkür ederiz. Tercih ettiğiniz cihazın kullanımı kolay ve ses kalitesi oldukça iyidir. **Goldmaster'**ı daha fazlası ile keşfetmek ya da ürün ile ilgili sorunlarınız için www.goldmaster.com.tr sitemizi ziyaret ediniz.

Subwoofer'ın önden görünümü

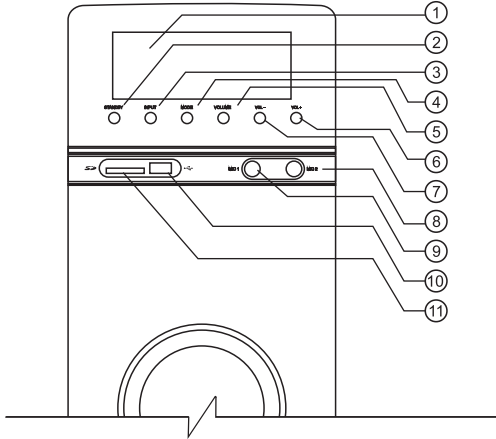


1. Ekran&Uzaktan kumanda alıcısı
2. STANDBY: Uyku modu tuşu
3. INPUT: Giriş tuşu
4. MODE: 2.1/5.1 kanal seçim tuşu (AUX modunda bu tuş aktiftir)
5. VOLUME: Ses seviye tuşu
6. VOL+: Ana ses seviye artırma tuşu
7. VOL-: Ana ses seviye azaltma tuşu
8. MIC2: Mikrofon 2 girişi
9. MIC1: Mikrofon 1 girişi
10. USB: USB girişi
11. SD: SD kart girişi

Subwoofer'ın arkadan görünümü

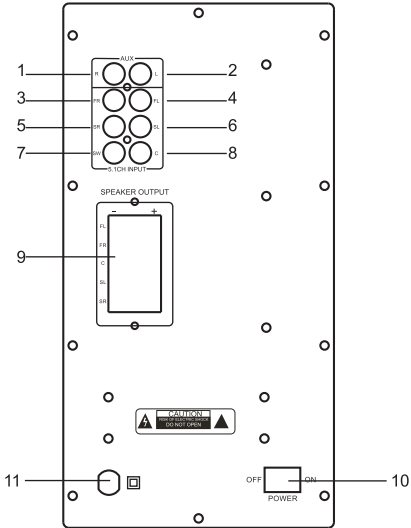


1. AUX (Stereo) Sağ ses girişi
2. AUX (Stereo) Sol ses girişi
3. 5.1CH Ön sağ ses girişi
4. 5.1CH Ön sol ses girişi
5. 5.1CH Arka sağ ses girişi
6. 5.1CH Arka sol ses girişi
7. 5.1CH Subwoofer ses girişi
8. 5.1CH Merkez ses girişi
9. HOPARLÖR ÇIKIŞLARI
 - FL-Ön sol hoparlör ses çıkışı
 - FR-Ön sağ hoparlör ses çıkışı
 - C-Merkez hoparlör ses çıkışı
 - SL-Arka sol hoparlör ses çıkışı
 - SR-Arka sağ hoparlör ses çıkışı
10. Açma/Kapatma düğmesi
11. Güç Kablosu

Uzaktan Kumanda Fonksiyonları

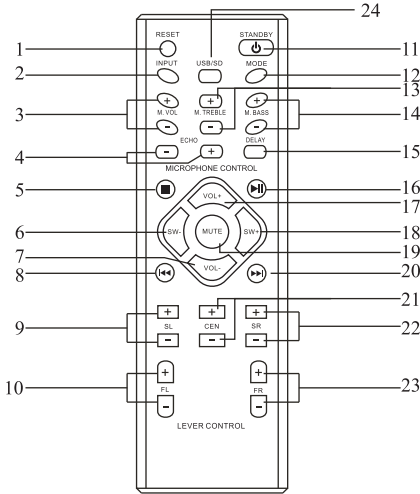


1. Reset tuşu
2. Giriş tuşu
3. Mikrofon ses seviye tuşları
4. Eko ses seviye tuşları
5. Durdurma tuşu
6. Subwoofer ses seviye azaltma tuşu
7. Ana ses seviye azaltma tuşu
8. Bir önceki parçaya geçme tuşu
9. Arka sol hoparlör ses seviye tuşları
10. Ön sol hoparlör ses seviye tuşları
11. Standby (uyku modu) tuşu
12. 2.1/5.1 kanal mod seçim tuşu
13. Mikrofon Treble (tiz) ses seviye tuşları
14. Mikrofon Bass ses seviye tuşları
15. Gecikme süresi tuşu
16. Oynatma/Bekletme tuşu
17. Ana ses seviye artırma tuşu
18. Subwoofer ses seviye artırma tuşu
19. Sessiz tuşu
20. Bir sonraki parçaya geçme tuşu
21. Merkez hoparlör ses seviye tuşları
22. Arka sağ hoparlör ses seviye tuşları
23. Ön sağ hoparlör ses seviye tuşları
24. USB/SD mod seçim tuşu

Sistem Bağlantıları

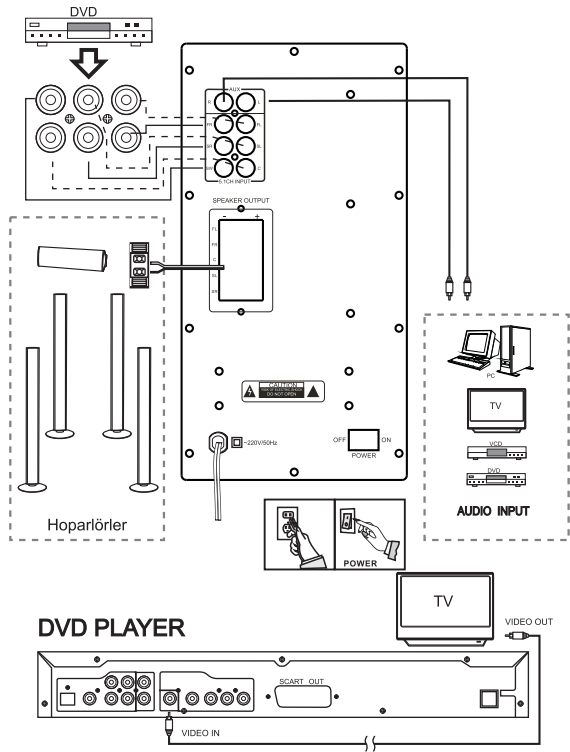

Ana kutunun arka paneli üzerindeki SPEAKER OUTPUT ses çıkışlarından uydu hopalörlerine bağlantı yapınız.

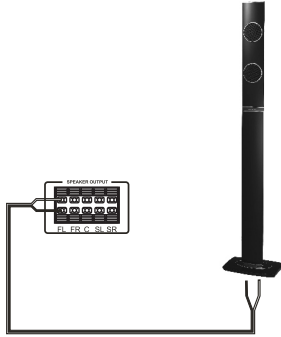

NOT: Kabloları eşleştirenken aynı renklerin denk gelmesine dikkat ediniz. Farklı renktekileri bağlamayınız.

A. Sistemin Açılması ve kapatılması

1. Sistemi açmadan önce sistem bağlantılarını talimata uygun yapıldığından emin olunuz. Kablo renklerine göre doğru bağlantı yapıldığından emin olunuz.
2. Cihazının elektrik kablosunu prize takınız.
3. Cihazının ana parçasının arka panelindeki açma/kapama anahtarından cihazınızı açınız. Cihazın ön panelindeki STANDBY butonu ile cihazı çalışır duruma getiriniz.

B. Ses

1. Ana parça üzerindeki VOL+ tuşu ile ses artırabilirsiniz. Aynı şekilde uzaktan kumanda üzerindeki VOL+ tuşuyla da aynı işlemi gerçekleştirebilirsiniz.
2. Ana parça üzerindeki VOL- tuşu ile ses azaltabilirsiniz. Aynı şekilde uzaktan kumanda üzerindeki VOL- tuşuyla da aynı işlemi gerçekleştirebilirsiniz.

C. SUBWOOFER

1. SW+ butonuna basarak Subwoofer sesini artırabilirsiniz.
2. SW- butonuna basarak Subwoofer sesini azaltabilirsiniz.

D. Ön hoparlörler

1. FL + tuşuyla Ön sol hoparlörlerin sesini artırabilirsiniz.
FL - tuşuyla Ön sol hoparlörlerin sesini azaltabilirsiniz.
2. FR + tuşuyla Ön sağ hoparlörlerin sesini artırabilirsiniz.
FR - tuşuyla Ön sağ hoparlörlerin sesini azaltabilirsiniz.

E. Merkez hoparlör

- CEN + tuşuyla merkez hoparlörlerin sesini artırabilirsiniz.
CEN - tuşuyla merkez hoparlörlerin sesini azaltabilirsiniz

F. Arka hoparlör

- SL + tuşuyla arka hoparlörlerin sesini artırabilirsiniz.
SL - tuşuyla arka hoparlörlerin sesini azaltabilirsiniz.

G. Surrond Mod'a geçiş(Ev sinema sistemi)

1. Merkez hoparlörler ve arka hoparlörleri uygun yerlere yerleştirdikten sonra kumandadan Mode tuşuna basarak arka hoparlör Moduna geçebilirsiniz.
NOT: MODE tuşuna basarak istediğiniz modu seçiniz.(2+1 yada 5+1) 2+1 modunda arka hoparlörlerinin çıkışları pasif hale geçer.
AUX modunda bu tuş aktiftir

H. 5+1 ses girişi

- DTS/AC3 çıkışları 5+1 ses sistemini destekler ses kaynağınızın(DVD, vb.) DTS,AC3 çıkışından alınmalıdır.
Uzaktan kumandadan INPUT tuşuna basarak giriş modunu değiştirebilirsiniz.

I.MUTE(SESSİZ)

1. Kumandadan MUTE tuşuna basıldığında sessiz konumuna geçmiş olursunuz. Cihazının sesi çıkmaz.
2. Sessiz konumda VFD yanıyor olacaktır.
3. Tekrar sesli moda geçmek için MUTE tuşuna basmanız yeterli olacaktır.

J. RESET

- RESET tuşuna basıldığında tüm hoparlörlerin ses seviyeleri fabrika ayarlarına dönmüş olacaktır.

K.Mp3 oynatma

- USB/SD kartınızı ana cihazın yan tarafındaki slotlara takarak parçaların otomatik olarak çalışmasını sağlayabilirsiniz.
Uzaktan kumandadaki PLAY/PAUSE/STOP/NEXT/PREVIOUS tuşlarına basarak sırasıyla oynat/duraklat/durdur/sonraki/önceki konumlarını çalıştırmış olursunuz.

L. Mikrofon Fonksiyonu

- Ön panelde bulunan mikrofon girişlerinden birine mikrofonu takınız.
Uzaktan kumandada bulunan mikrofon ayarlarını istediğiniz sese göre ayarlayınız.

GENEL ÖZELLİKLER

- MP3 formatındaki müzik dosyalarını oynatabilen USB/SD kart girişleri
- Gerçekçi bass efekti için ahşap kabinli subwoofer
- 2 adet mikrofon girişi ile karaoke fonksiyonu
- İşlem bilgilerini gösteren VFD Ekran
- Uzaktan Kumanda Fonksiyonu
- Bass, treble, eko seviye kontrolleri
- Her Hoparlör için ayrı ayrı ses seviye kontrolü
- 2.1/5.1 ses sistemini seçme fonksiyonu
- Stereo ,5.1 CH girişleri sayesinde DVD/VCD/MP3 Player, PC gibi cihazlar ile bağlantı yapılarak yüksek kalitede ses elde etme
- Manyetik Koruma Özelliği

TEKNİK ÖZELLİKLER

- Toplam Güç: 125 Watt
- Uydu Hoparlörler: 75Watt (15Wx5) (RMS), 8ohm
- Subwoofer: 50Watt (RMS), 8ohm
- Frekans Cevabı: 20Hz-20KHz
- Sinyal Gürültü Oranı: >75dB
- Sürücü Boyutları: 3"x2 hoparlör, 8" subwoofer

Not: Ürünün tasarımı ve özellikleri haber verilmeksizin değiştirilebilir.

CİHAZIN KULLANIM ÖMRÜ 3 YILDIR.

Firma-Merkez Servis İletişim Bilgisi

Adres: Bakır ve Pirinççiler Sanayi Sitesi

KARANFİL SOK. NO:1 BEYLİKDÜZÜ/İSTANBUL

Fax : 0212 6930224

Web : www.goldmaster.com.tr E-mail : info@goldmaster.com.tr



LÜTFEN GARANTİ BELGESİ ÜZERİNDE BULUNAN EKİ ON(10) GÜN İÇERİSİNDE BELİRTİLEN İLETİŞİM ADRESİNE POSTALAYIN, YA DA FAX VEYA E-MAIL YOLUYLA BİZE ULAŞTIRIN. Fax: 0212 693 02 24 - email: info@goldmaster.com.tr

www.goldmaster.com.tr
info@goldmaster.com.tr

GoldMaster®



S-5140 USB

5.1 CH Audio System




IMPORTANT SAFETY INFORMATION



CAUTION ELECTRIC SHOCK HAZARD


- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Unplug the speakers from the computer and from the electrical outlet before cleaning them With a dry cloth.
- Install in accordance with the manufacturer's instructions.
- Place the speakers in a stable location so they will not fall causing damage to the speakers or bodily harm
- Do not use the speakers near water, and do not immerse them in any liquid or pour any liquid on them.
- Do not block the openings in the speaker cabinets, never push objects into speaker vents or slots because of fire or electric shock hazards, and provide sufficient space around the speakers for proper ventilation.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. The wide blade is provided for your safety. If the provide plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Operate the speakers only from the low level audio line out jack of the computer or of an audio device.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- For added protection during lighting storms, unplug the speakers from the electrical outlet and turn off the computer.
- Unplug this apparatus when unused for long periods of time.
- Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug has been damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Refer all servicing to qualified service personnel.
- The speakers should be disconnected from the mains by placing the power/standby switch in the standby position and unplugging the power cord of the speakers from the AC mains receptacle.
- Do not place any form of open flame source, such as lighted candles, on the apparatus.
- The socket-outlet shall be installed near the equipment and shall be readily accessible.

FRONT PANEL- CONTROL AND FUNCTIONS

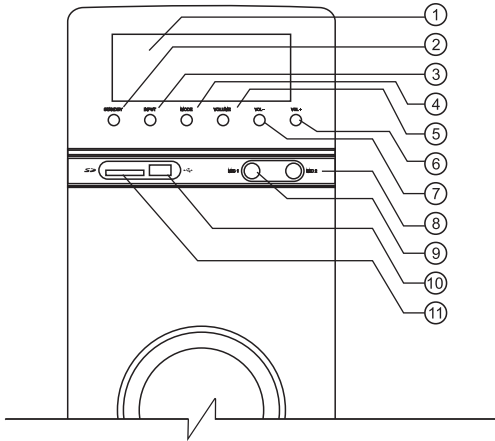


1. Digital Display windows & Remote control signal receiving window
2. STANDBY: STANDBY mode
3. INPUT: INPUT button
4. MODE: 2.1/5.1 Channel Mode button(the AUX function contain function)
5. VOLUME: VOLUME button
6. VOL+: Master Volume+
7. VOL-: Master Volume-
8. MIC 2 : Microphone socket 2
9. MIC1 : Microphone socket 1
10. USB: USB socket
11. SD: SD Card socket

REAR PANEL- CONTROLS AND FUNCTIONS

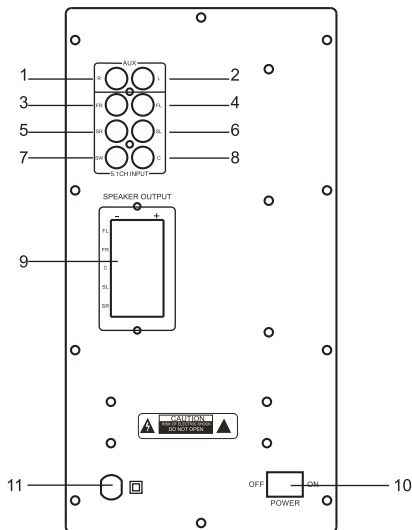


1. AUX audio Right input
2. AUX audio Left input
3. 5.1CH Front right audio input
4. 5.1CH Front left audio input
5. 5.1CH Surround right audio input
6. 5.1CH Surround left audio input
7. 5.1CH Subwoofer audio input
8. 5.1CH Center audio input
9. SPEAKER OUTPUT
 - FL-Front left speaker output
 - FR-Front right speaker output
 - C-Center speaker output
 - SL-Surround left audio output
 - SR-Surround right audio output
10. Power ON/OFF Switch
11. AC Power cord

OPERATING INSTRUCTION - CONTROLS AND FUNCTIONS

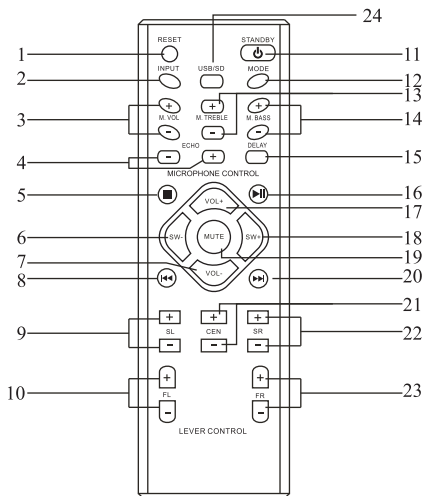


1. Reset button
2. Input button
3. Microphone Volume +/-
4. Reverberation
5. Play stop
6. SW Volume-
7. Master Volume-
8. Previous
9. Surround Left Volume+/-
10. Front Left Volume+/-
11. Power STANDBY
12. 2.1/5.1 Channel Mode button
13. Microphone TREBLE Volume+/-
14. Microphone BASS Volume+/-
15. Delay time
16. Play
17. Master Volume+
18. SW Volume+
19. MUTE / 
20. Play Next
21. CENTER Volume +/-
22. Surround Right Volume+/-
23. Front Right Volume+/-
24. USB/SD Choice

SYSTEM CONNECTION INSTRUCTIONS

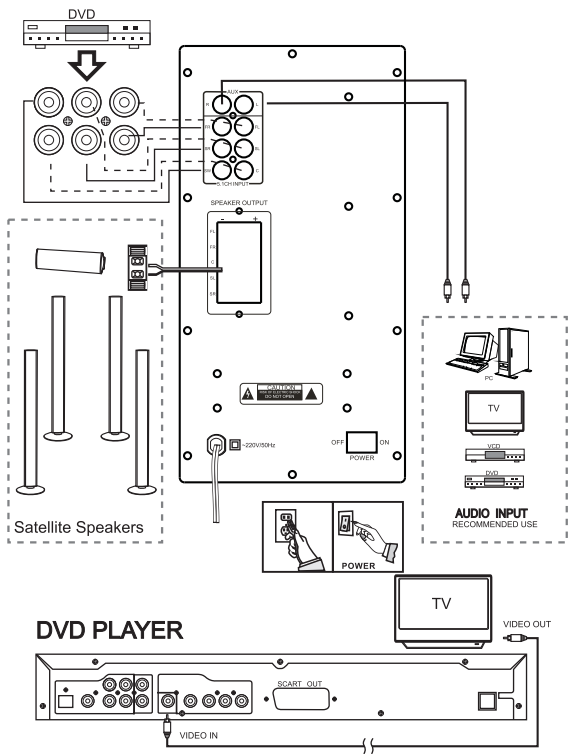

Use the Speaker Output jacks on the rear panel of main unit to connect the satellite speakers.

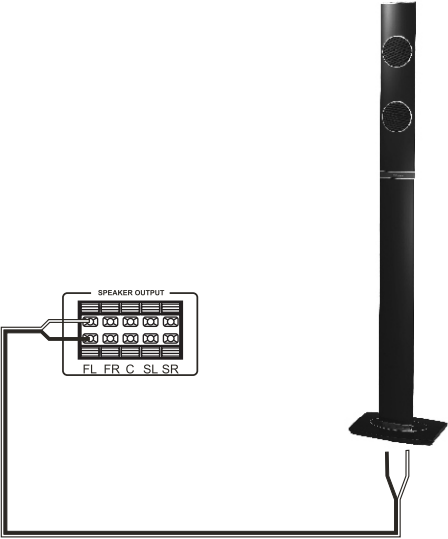

Note: Be sure to match the speaker cord to the appropriate jacks on Components: White " to "Red, Green...etc", and "Black" to "Black".

OPERATING INSTRUCTION

A. Switch On/Off the Product

1. Before turning on the system, please connect it according to the System Connection Instruction.
2. Connect AC power supply with this product.
(Caution: Power source must be consistent with this product.)
3. Press on the power switch button on the Rear Panel of the main unit to switch on the system, the standby indicator will light up. Press it once again to switch off the unit. Then Press the standby button on the main unit to enter the normal status. Press the button once again to keep power in standby status.

B. VOLUME

1. Press the Volume + button on the front panel of the main unit or VOL + button on the remote controller to maximize the sound output. Standby Indicator on the front panel will light up and flash when the Volume is increased to maximum accordingly.
2. Press the Volume - button on the front panel of the main unit or VOL - button on the remote controller to minimize the sound output. Standby Indicator on the front panel will light up and flash when the Volume is decreased to minimum accordingly.

C. SUB WOOFER SPEAKER

1. Press SW + button on the remote controller to maximize the Sub woofer Speaker output and Standby Indicator on the front panel will light up.
2. Press SW - button on the remote controller to minimize the Sub woofer Speaker output and Standby Indicator on the front panel will light up.

D. FRONT SPEAKER

1. Press FL + button on the remote controller to maximize the Front Left Speaker output .
Press FR + button on the remote controller to minimize the Front Right Speaker output .

2. Press FL - button on the remote controller to minimize the Front Left Speaker output .
Press FR - button on the remote controller to minimize the Front Right Speaker output .

E. CENTER SPEAKER

1. Press CEN+ button on the remote controller to maximize the Center Speaker output and Standby Indicator on the front panel will light up.
2. Press CEN - button on the remote controller to minimize the Center Speaker output and Standby Indicator on the front panel will light up.

F. SURROUND SPEAKER

1. Press SL+ button on the remote controller to maximize the Surround Speaker output.
Press SR + button on the remote controller to maximize the Surround Speaker output.
2. Press SL - button on the remote controller to minimize the Surround Speaker output.
Press SR - button on the remote controller to minimize the Surround Speaker output.

G. SURROUND(MODE) DECODER

1. Connect and place Center and Rear speakers properly.
2. Press the MODE button on the remote controller to select Surround Decoder for Home Theater system effects.

Note: (1) CENSPEAKER Rear speakers output are off when 2.1CH Stereo mode is selected.

- (2) The system is based on 2.1 channel output. MODE will not function under 5.1 channel status.

H. 5.1 CHANNELS INPUT

1. Connect the system properly. 5.1 Channels audio output must comply with 5.1 channels audio input. (NOTE: AC-3/dts will decode 5.1 Channels output.)
2. Press INPUT button on the remote controller to shift the status from audio input to 5.1CH channels input.
3. Adjust all output settings including VOLUME, SW , FRONT,CEN,SURR (if necessary) now to enjoy the wonderful and tremendous Home Theater effects.

I. MUTE

1. Press the MUTE button on the remote controller once to keep the performance silent.
2. MUTE Indicator on the VFD will then light up.
3. Press it again to resume the performance.

J. RESET

Press the RESET button on the remote controller and it will reset all settings including SW Speaker output, Front Speaker output ,CENTER Speaker output, Surround Speaker output to Factory Default settings.

K.MICROPHONE FUNCTION

1. Install microphone to the jack on the front panel, mic logo on VFD display will be light accordingly.
2. Adjust the relative Microphone function on the remote control to the effect end user prefer.

L .Mp3 PLAY

1. Insert USB disk & SD card, the unit will play the song automatically (there stored the songs in mp3 format for USB/SD card).
2. Adjust the button PLAY/PAUSE/STOP/NEXT/PREVIOUS on the remote control, will play relative playing mode.

FEATURES

- USB/SD card to read MP3 format
- Wooden cabinet for realistic bass effect
- 2 pcs microphone inputs for karaoke function
- VFD Display that show operation information
- Remote Control Function
- Bass, Treble, Echo volume controls
- Sound volume control for each sattelite
- 2.1/5.1 channel mode selection
- Compatible with DVD/VCD/MP3 Player, PC etc. through L-R stereo and 5.1CH inputs
- Magnetic shielded

SPECIFICATIONS

- Total Power: 125 Watts
- Sattelite Speakers: 75Watts (15Wx5) (RMS), 8ohm
- Subwoofer: 50Watts (RMS), 8ohm
- Frequency Response: 20Hz-20KHz
- Signal to noise ratio: >75dB
- Driver Unit: 3"x2 satellites, 8" subwoofer



GoldMaster®

www.goldmaster.com.tr

info@goldmaster.com.tr